

SCHLAGE®

D-Series Levers Service Manual

INTRODUCTION

This manual contains a complete listing of parts and assemblies of D-Series lever locks manufactured by Schlage Lock Company, beginning in 1989. Exploded views of each lock function are provided with an accompanying dot chart to identify parts for replacement purposes.

In addition, this manual provides lock trim ordering procedures, cylinders, latches, strikes and all auxiliary components of D-Series lever locks. Orders for finished components should always show finish designation. Orders for all Schlage® products must be placed through an authorized Schlage distributor or representative.

Schlage D-Series lock parts are manufactured to close tolerances and are interchangeable between functions using the same parts. Conversion of functions is accomplished by identifying the parts necessary for substitution and following the assembly procedures as illustrated on the lock drawings.

For items not listed in this service manual, contact Schlage Lock Company for availability or allowable substitutions.

Schlage Lock Company reserves the right to make changes in designs and specifications or to make additions or improvements on its products without notice and without incurring any obligation to incorporate them on products previously manufactured. The Schlage Lock Company is not responsible for any modification, addition, or alteration to our product by others.

Schlage Lock Company
2401 Bayshore Boulevard
San Francisco, CA. 94134
(800) 847-1864
Fax: (800) 452-0663
<http://www.schlage.lock.com>
Printed in U.S.A.

CERTIFICATIONS

ANSI/BHMA A156.2-1996.
Series 4000, Grade 1.
All functions U.L. listed for 3 hour door

DOOR RANGE

Non-Vandlgard functions D10 through D85
1 5/8" - 2" Standard.

1 3/8" Regular parts assembled to order

Vandlgard™ functions D91 through D96:
1 5/8" - 1 7/8" Standard.

METRIC CONVERSION CHART

All dimensions shown in this service manual are in inches. To convert to millimeters, use the metric conversion chart shown below.

Inch	MM
1/32	0.79
1/16	1.59
3/32	2.38
1/8	3.18
5/32	3.97
3/16	4.76
7/32	5.56
1/4	6.35
9/32	7.14
5/16	7.94
11/32	8.73
3/8	9.53
13/32	10.32
7/16	11.11
15/32	11.91
1/2	12.70
17/32	13.49
9/16	14.29
19/32	15.08

Inch	MM
5/8	15.88
21/32	16.67
11/16	17.46
23/32	18.26
3/4	19.05
25/32	19.84
13/16	20.64
27/32	21.43
7/8	22.23
29/32	23.02
15/16	23.81
31/32	24.61
1	25.40
2	50.8
3	76.2
4	101.6
5	127.0
6	152.4
7	177.8

TABLE OF CONTENTS

<i>Function</i>	<i>Description</i>	<i>Page</i>	<i>Description</i>	<i>Page</i>
	Finishes, Lubrication.		Plunger Installation Instructions.	
	Tactile Warning -----	2	Driver Comparison Chart -----	37
D10S	Passage Lock -----	3	Spring Cage Retrofit Kit -----	38A
D12D	Exit Lock -----	4	Parts Index/Dot Chart -----	38B-40
D12DEL	Electrically Locked -----	5	Slide Catch Spring Replacement Parts -----	41
D12DEU	Electrically Unlocked -----	6	Cylinder Units and Parts -----	42,43
D25D	Exit Lock -----	7	Lever Designs and Lever Inserts -----	44
D40S	Bath/Bedroom Privacy Lock ---	8	Interchangeable Core Lever Designs	
D44S	Hospital Privacy Lock -----	9	and Lever Inserts -----	45
D50BD	Entrance/Office Lock, SFIC* ---	10	Interchangeable Cores and Parts -----	46-47
D50PD	Entrance/Office Lock -----	11	Latch Units -----	48
D53BD	Entrance Lock, SFIC* -----	12	Strikes -----	49
D53PD	Entrance Lock -----	13	Installation Tools, Backset Links,	
D60PD	Vestibule Lock -----	14	Door Reinforcements -----	50
D66PD	Store Lock -----	15	Keys, Key Array Chart, Key Gage,	
D70BD	Classroom Lock, SFIC* -----	16	Cylinder Loading Tool -----	51
D70PD	Classroom Lock -----	17	Installation Instructions -----	52-54
D73BD	Corridor Lock, SFIC* -----	18	Removing and Replacing Cylinder Levers ---	55
D73PD	Corridor Lock -----	19	Electrified Lock Instructions -----	56
D80BD	Storeroom Lock, SFIC* -----	20	Interchangeable Core Retrofit Kit	
D80PD	Storeroom Lock -----	21	Instructions -----	57
D80BDEL	Electrically Locked, SFIC* -----	22	Ordering Procedures -----	58
D80PDEL	Electrically Locked -----	23	Warranties -----	59
D80BDEU	Electrically Unlocked, SFIC* -----	24		
D80PDEU	Electrically Unlocked -----	25		
D82PD	Institution Lock -----	26		
D85PD	Hotel/Motel Lock -----	27		
D91BD	Entrance/Office Lock, SFIC* -----	28		
D91PD	Entrance/Office Lock -----	29		
D92BD	Entrance Lock, SFIC* -----	30		
D92PD	Entrance Lock -----	31		
D94BD	Classroom Lock, SFIC* -----	32		
D94PD	Classroom Lock -----	33		
D96BD	Storeroom Lock, SFIC* -----	34		
D96PD	Storeroom Lock -----	35		
D170	Single Dummy Trim -----	36		

SFIC = Designed to accept 6 or 7 pin
Small Format Interchangeable Cores
manufactured by Arrow®, Best®,
Falcon® and KSP®.

FINISHES

Schlage Lock finishes are durable, top quality finishes obtained by the careful processing of solid brass, bronze, stainless steel or other materials. Where required, a protective clear coating is applied and cured under high temperature. It is important that climatic conditions and usage be taken under consideration when selecting finishes. This is especially true in areas subjected to strong corrosive vapors, humid climate or sea air, which, in a short time, may have a damaging effect on metal finishes.

The longevity and preservation of the finish appearance is determined by base metal and finishing process. Clear protective coating or other organic finishing applications may require different methods of cleaning and care. As an example, non-clear coated finishes should not be cleaned with soaps or any solvents; organically coated surfaces should periodically be cleaned with a mild non-abrasive soap and buffed lightly with a clean cloth. The type of base metal and finishing techniques must be considered when applying any cleaning or preservative method. Contact the Schlage Technical Services Department for further information on the care of finished hardware.

In some instances for customer convenience, the most appropriate BHMA finish symbols are used to indicate similarity of appearance regardless of base metal or finishing process. D-Series levers are zinc-based material and are plated to match finishes indicated. Finish numbers in the 600 Series are the BHMA (Builders Hardware Manufacturers Association) industry standard. The nearest old U.S. equivalent code designations are shown in parenthesis ().

Symbol	Description
605 (3)	BRIGHT BRASS Clear Coated
606 (4)	SATIN BRASS Clear Coated
612 (10)	SATIN BRONZE Clear Coated
613 (10B)	OIL RUBBED BRONZE Oxidized Satin Bronze, Oil Rubbed, No Coating
625 (26)	BRIGHT CHROMIUM PLATED No Coating
626 (26D)	SATIN CHROMIUM PLATED No Coating


LUBRICATION

D-Series lever lock mechanisms are designed for durability and seldom need servicing. During assembly, those points of contact which require lubrication for ease of operation are given an application of high quality petroleum based grease. A touch of flaked graphite is applied to the pin tumbler plug during assembly of the cylinder unit. No further servicing should be required for an extended period except where locks are subjected to extremely heavy traffic. Also, if located in particularly dusty or dirty areas, the grease may become contaminated resulting in a slow or otherwise unsatisfactory operation. The case mechanism should then be cleaned in a noncorrosive petroleum solvent and relubricated. Flaked graphite only should be applied to the cylinder unit by blowing a small quantity into the keyway.

Note: Precautionary measures according to solvent manufacturers instructions should always be followed.


TACTILE WARNING

Tactile warning is achieved by milling three (3) grooves on the inside surface of the D-Series lever. This is the means of identifying hazardous areas, such as electrical closets and mechanical equipment, for the visually impaired. Tactile warning is available on all D-Series lever designs. When ordering specify if both sides, outside or inside levers require tactile warning. Order by specifying design code BAT (Athens), 8RO (Rhodes) or 8SP (Sparta).

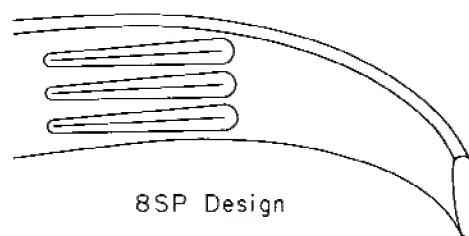


D10S

CHASSIS ASSEMBLY

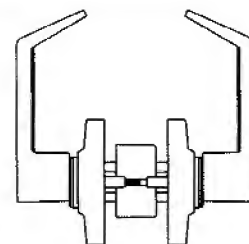


PASSAGE LATCH
BOTH LEVERS ALWAYS UNLOCKED.

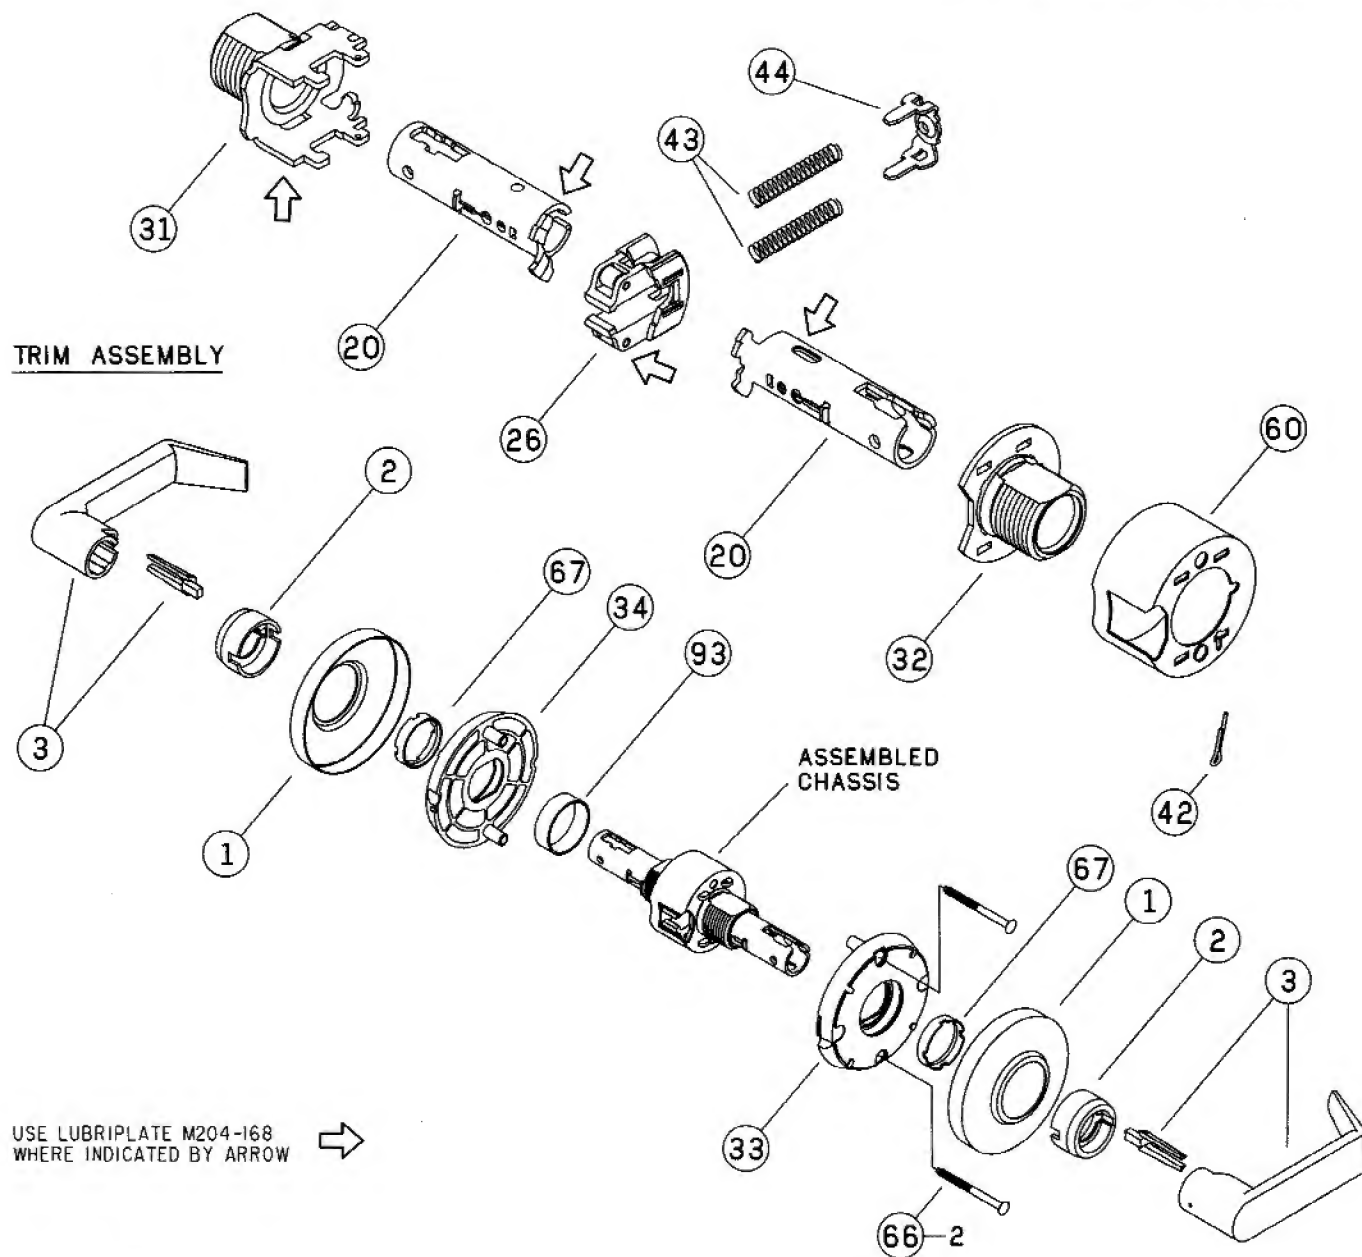


D12D

CHASSIS ASSEMBLY

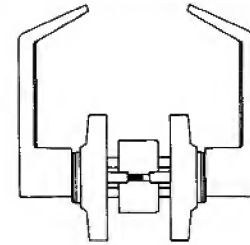


EXIT LOCK
UNLOCKED BY LEVER INSIDE ONLY.
OUTSIDE LEVER ALWAYS FIXED.

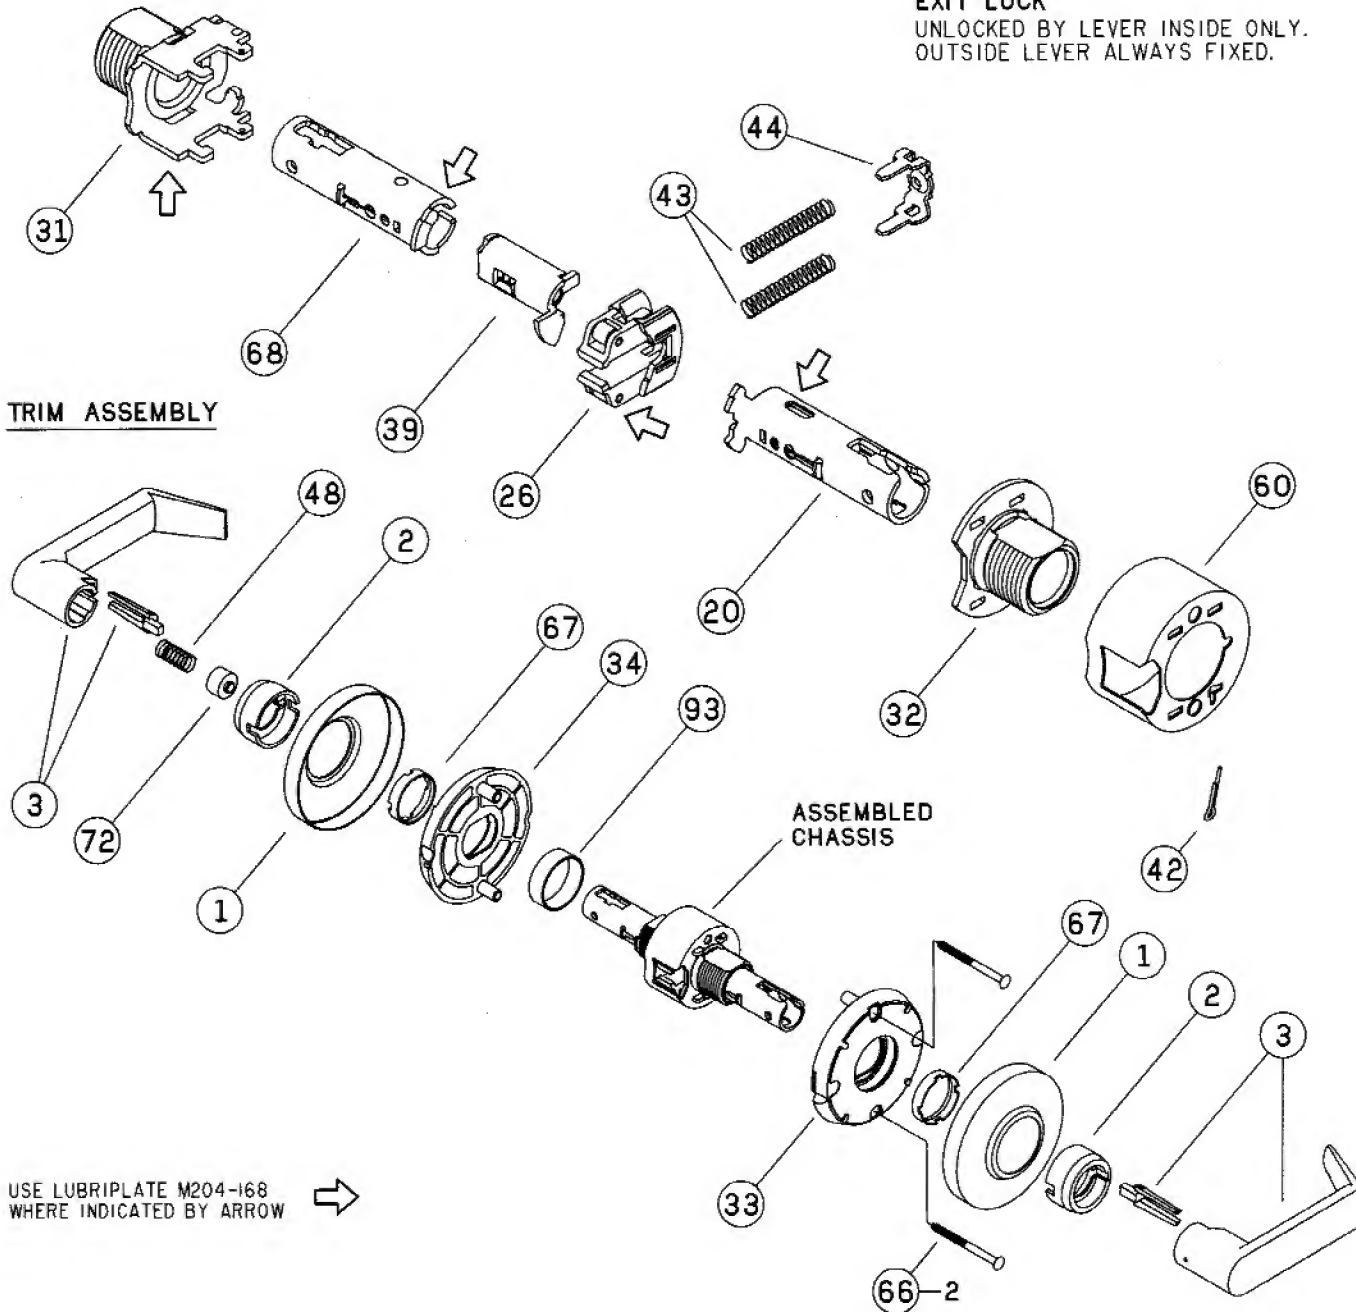

USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW


D12DEL

CHASSIS ASSEMBLY

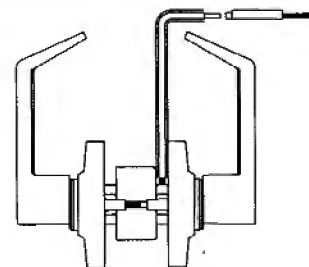

ELECTRICALLY LOCKED (FAIL SAFE)

AUXILIARY LATCH DEADLOCKS LATCHBOLT WHEN DOOR IS CLOSED. OUTSIDE LEVER CONTINUOUSLY LOCKED ELECTRICALLY UNTIL UNLOCKED BY SWITCH OR POWER FAILURE. INSIDE LEVER ALWAYS FREE FOR IMMEDIATE EXIT.

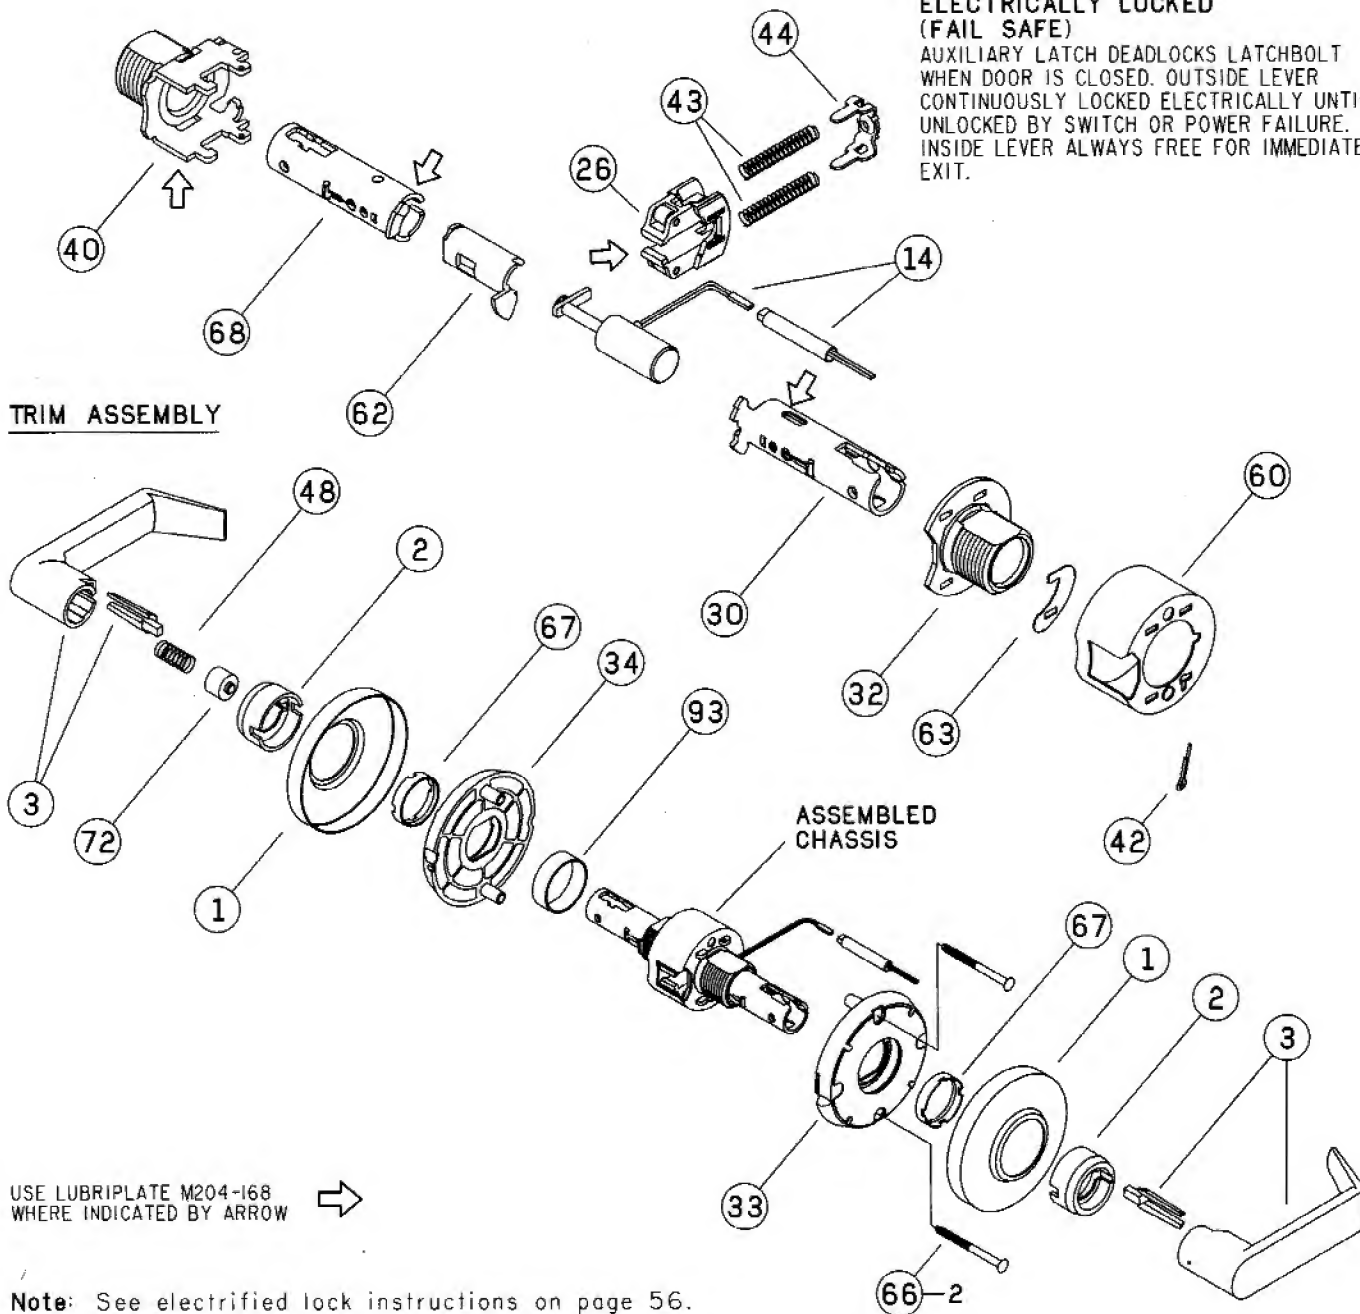


USE LUBRIPLATE M204-I68
WHERE INDICATED BY ARROW



Note: See electrified lock instructions on page 56.

D12DEU


CHASSIS ASSEMBLY

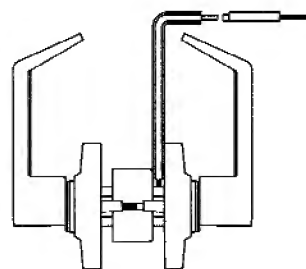

ELECTRICALLY UNLOCKED (FAIL SECURE)

AUXILIARY LATCH DEADLOCKS LATCHBOLT WHEN DOOR IS CLOSED. OUTSIDE LEVER CONTINUOUSLY LOCKED UNTIL UNLOCKED BY ELECTRIC CURRENT. INSIDE LEVER ALWAYS FREE FOR IMMEDIATE EXIT.


TRIM ASSEMBLY

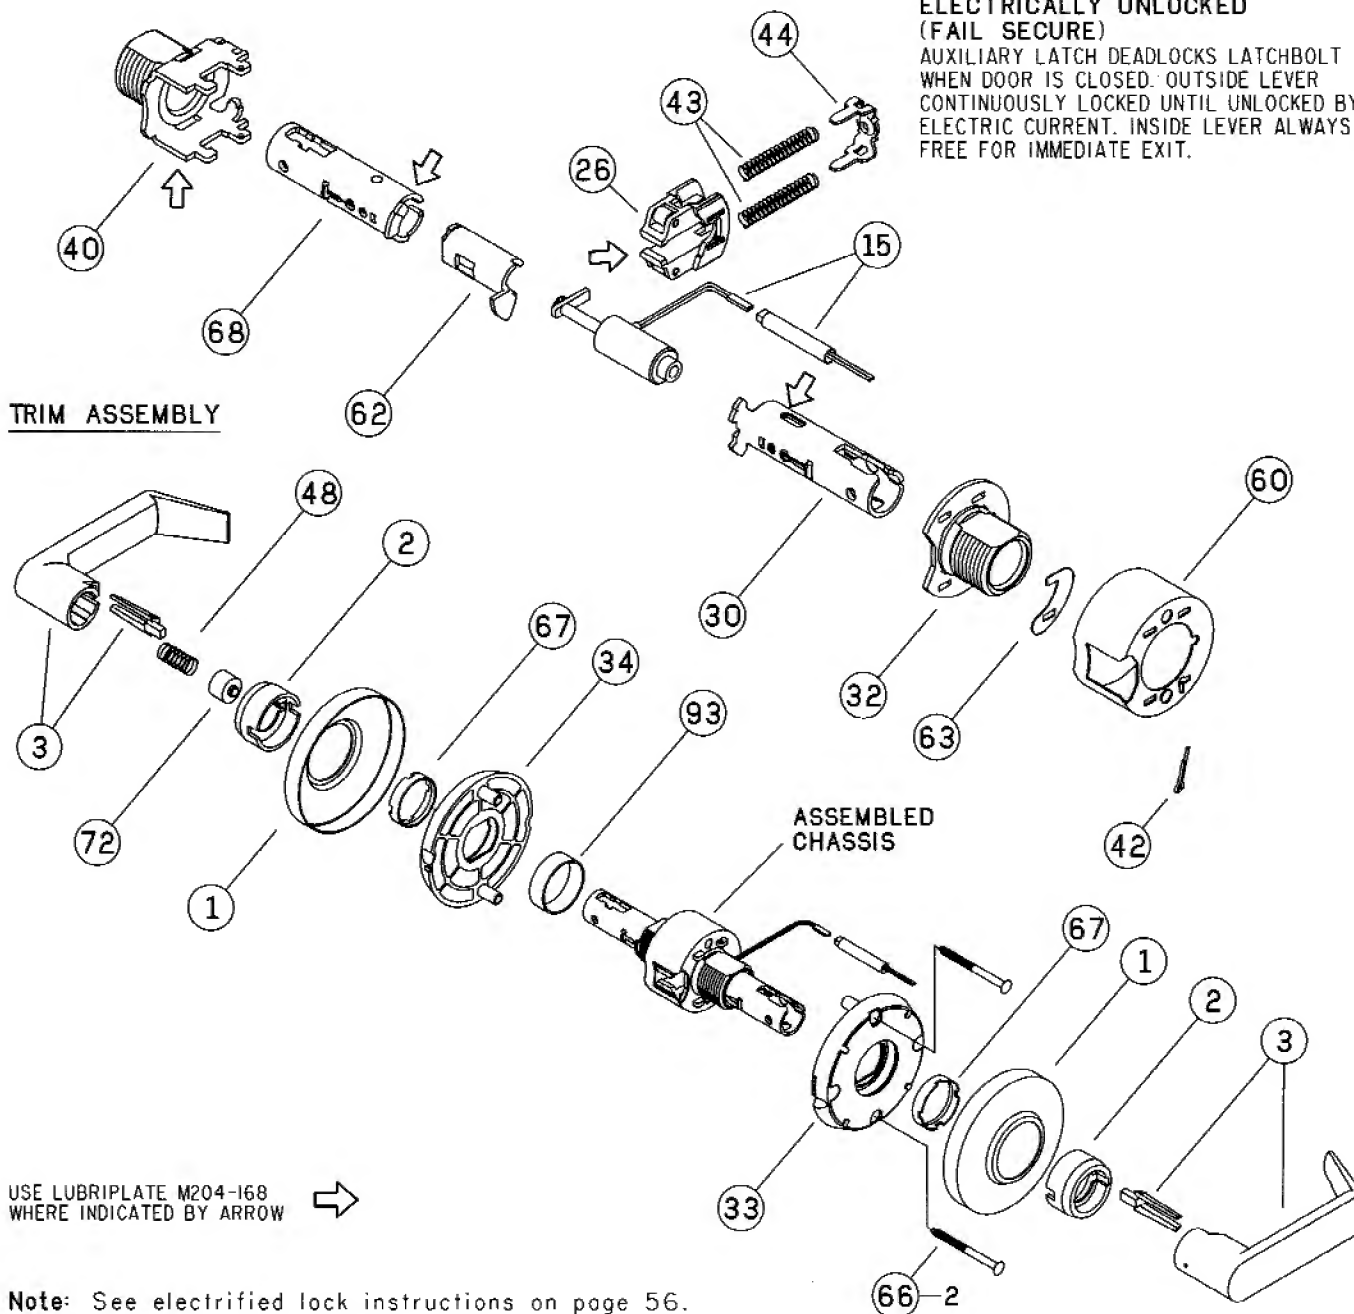

Note: See electrified lock instructions on page 56.

D25D

CHASSIS ASSEMBLY

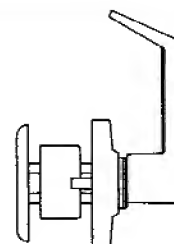

EXIT LOCK
BLANK PLATE OUTSIDE. INSIDE
LEVER ALWAYS UNLOCKED.

TRIM ASSEMBLY

Pin to lower hole
for 2" doors

Pin to upper hole
for 1 5/8" to
1 3/4" doors


ASSEMBLED
CHASSIS

USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW




D40S

CHASSIS ASSEMBLY

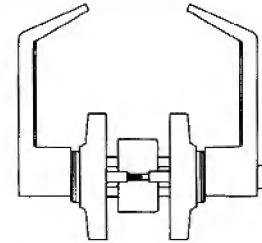


BATH/BEDROOM PRIVACY LOCK
PUSH BUTTON LOCKING. CAN BE OPENED
FROM OUTSIDE WITH SMALL SCREWDRIVER
OR FLAT NARROW TOOL. TURNING INSIDE
LEVER OR CLOSING DOOR RELEASES BUTTON.

TRIM ASSEMBLY

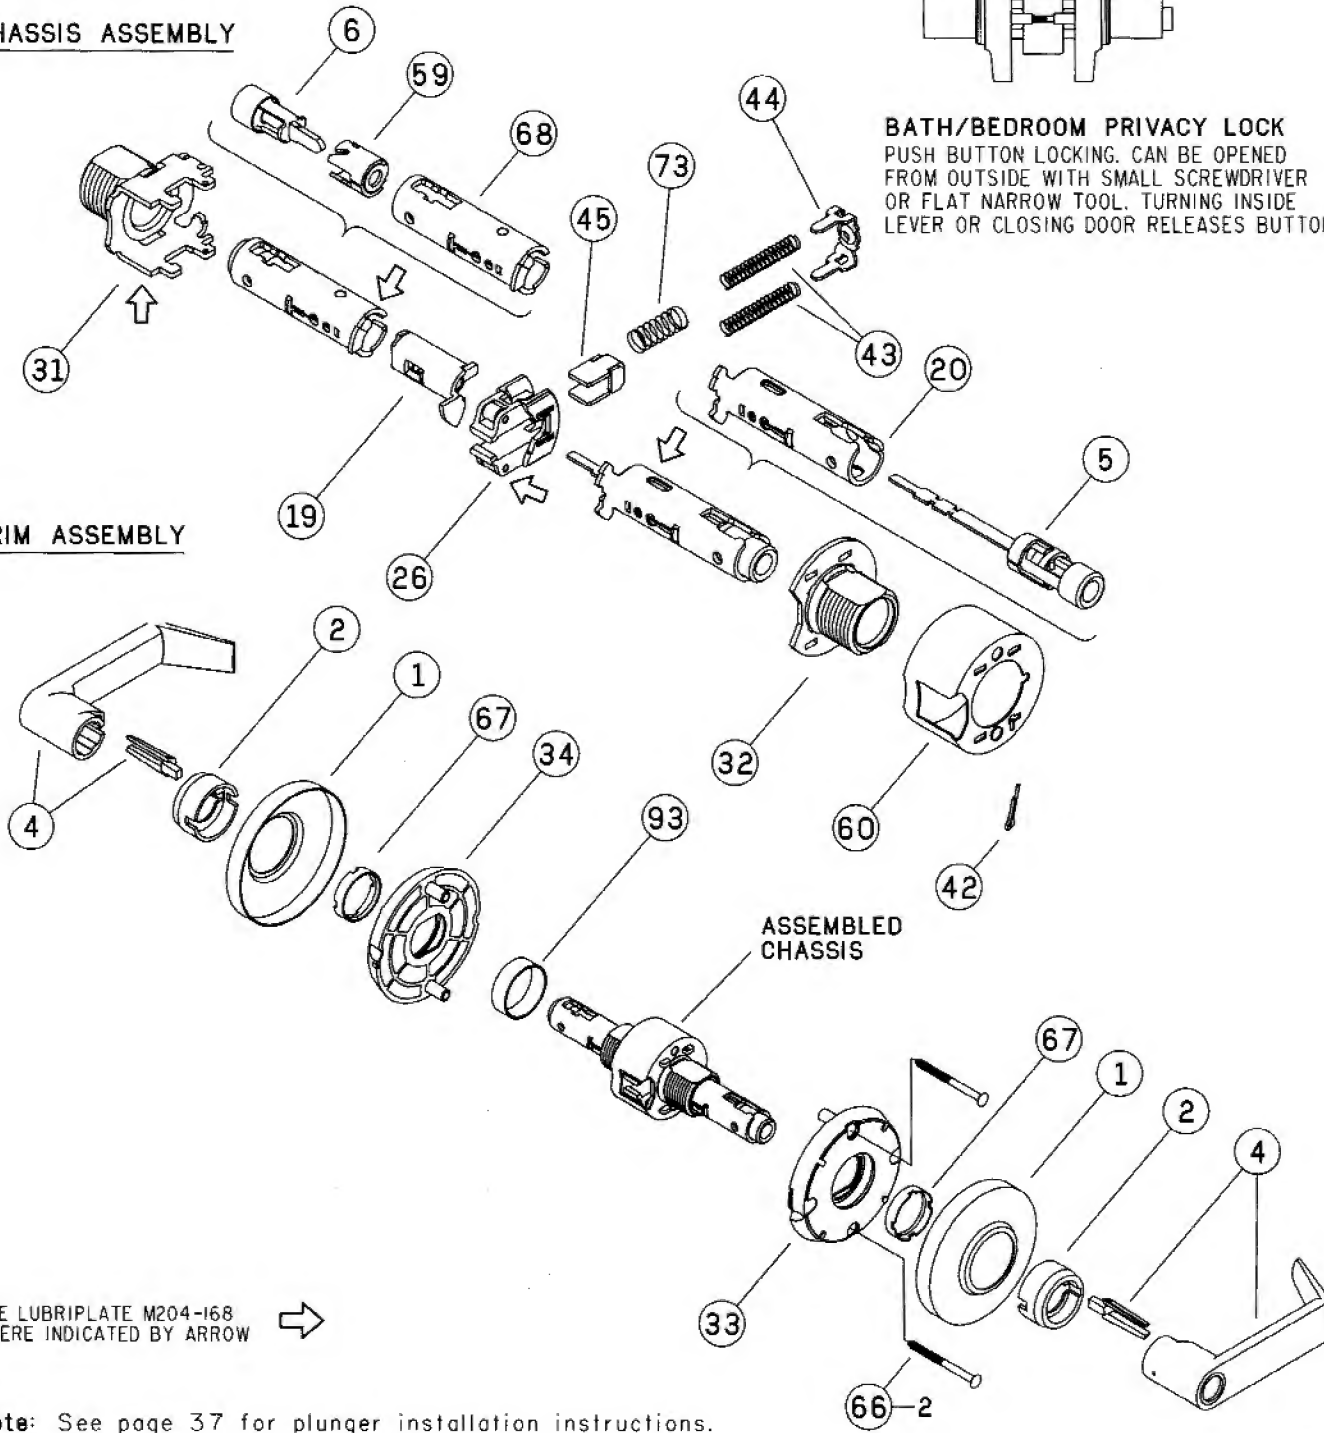

D44S

CHASSIS ASSEMBLY

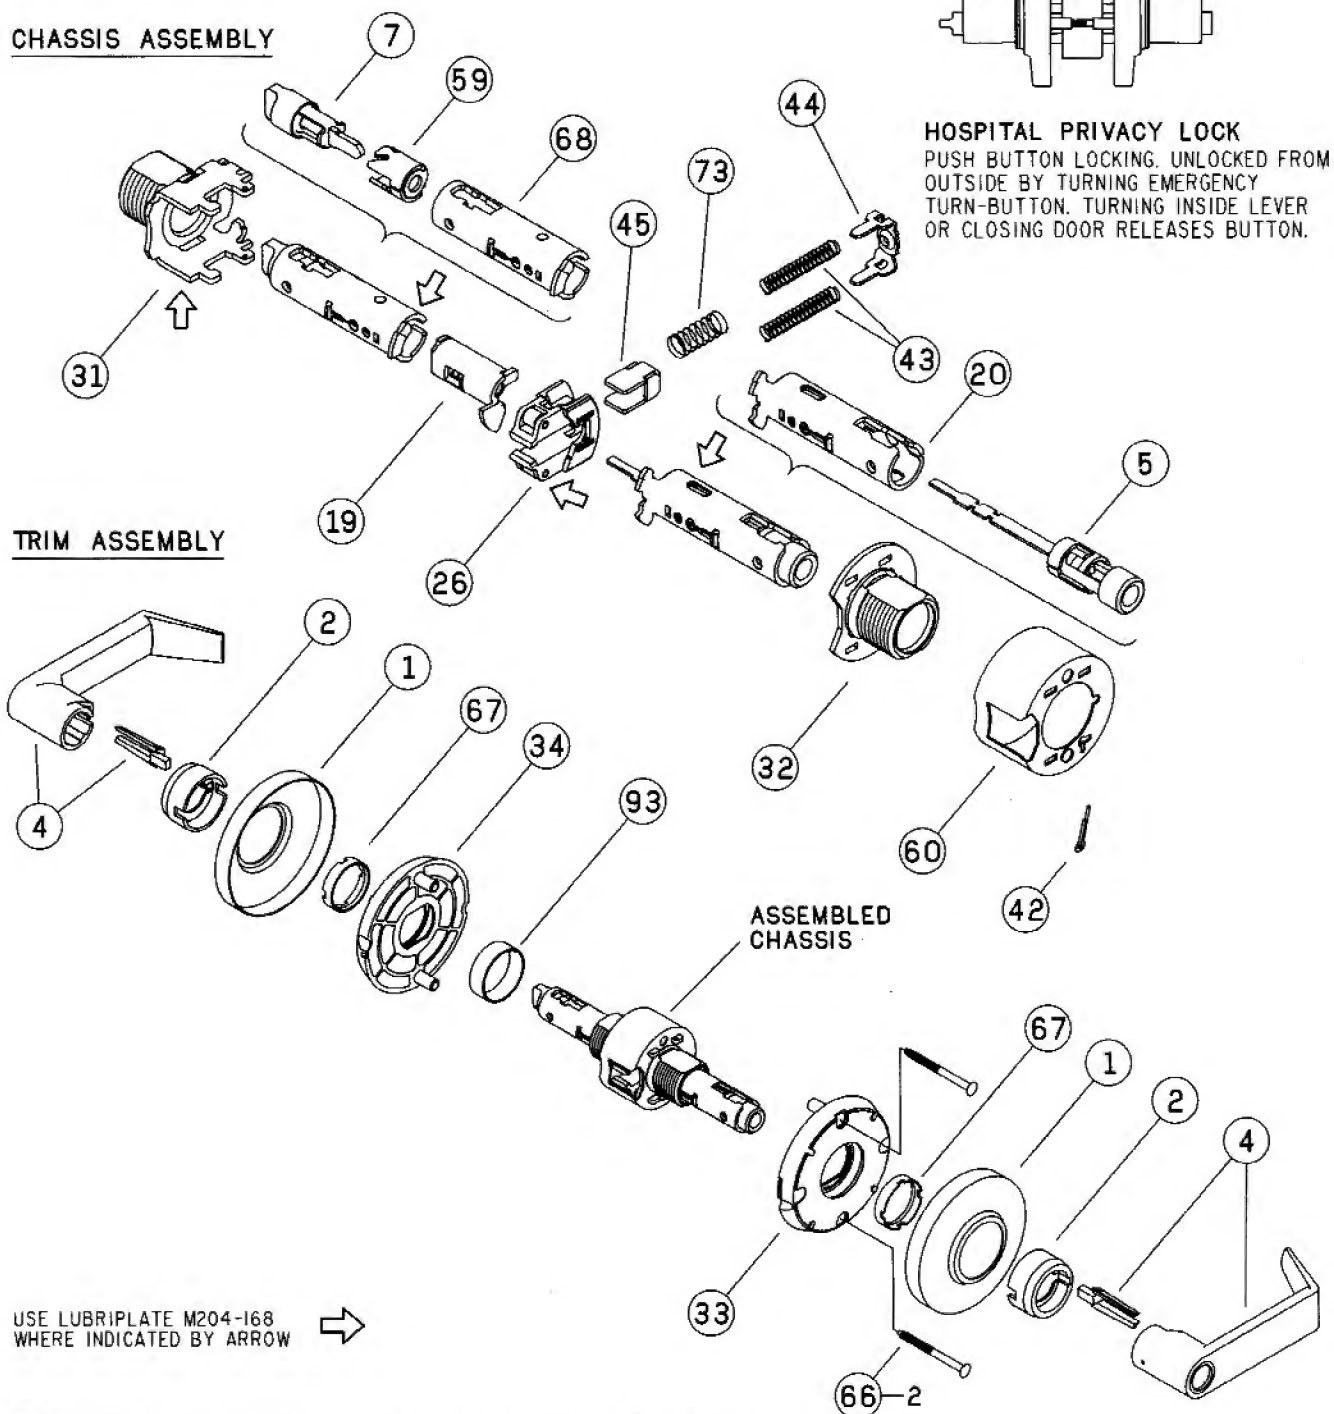


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW



Note: See page 37 for plunger installation instructions.


D50BD

Designed to accept 6 or 7 pin Small
Format Interchangeable Cores manufactured
by Arrow, Best, Falcon and KSP.
FURNISHED LESS CORE.

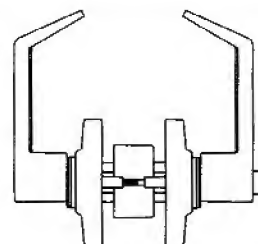

ENTRANCE/OFFICE LOCK
PUSH BUTTON LOCKING. PUSH BUTTON
LOCKS OUTSIDE LEVER UNTIL UNLOCKED
WITH KEY OR BY TURNING INSIDE LEVER.

CHASSIS ASSEMBLY

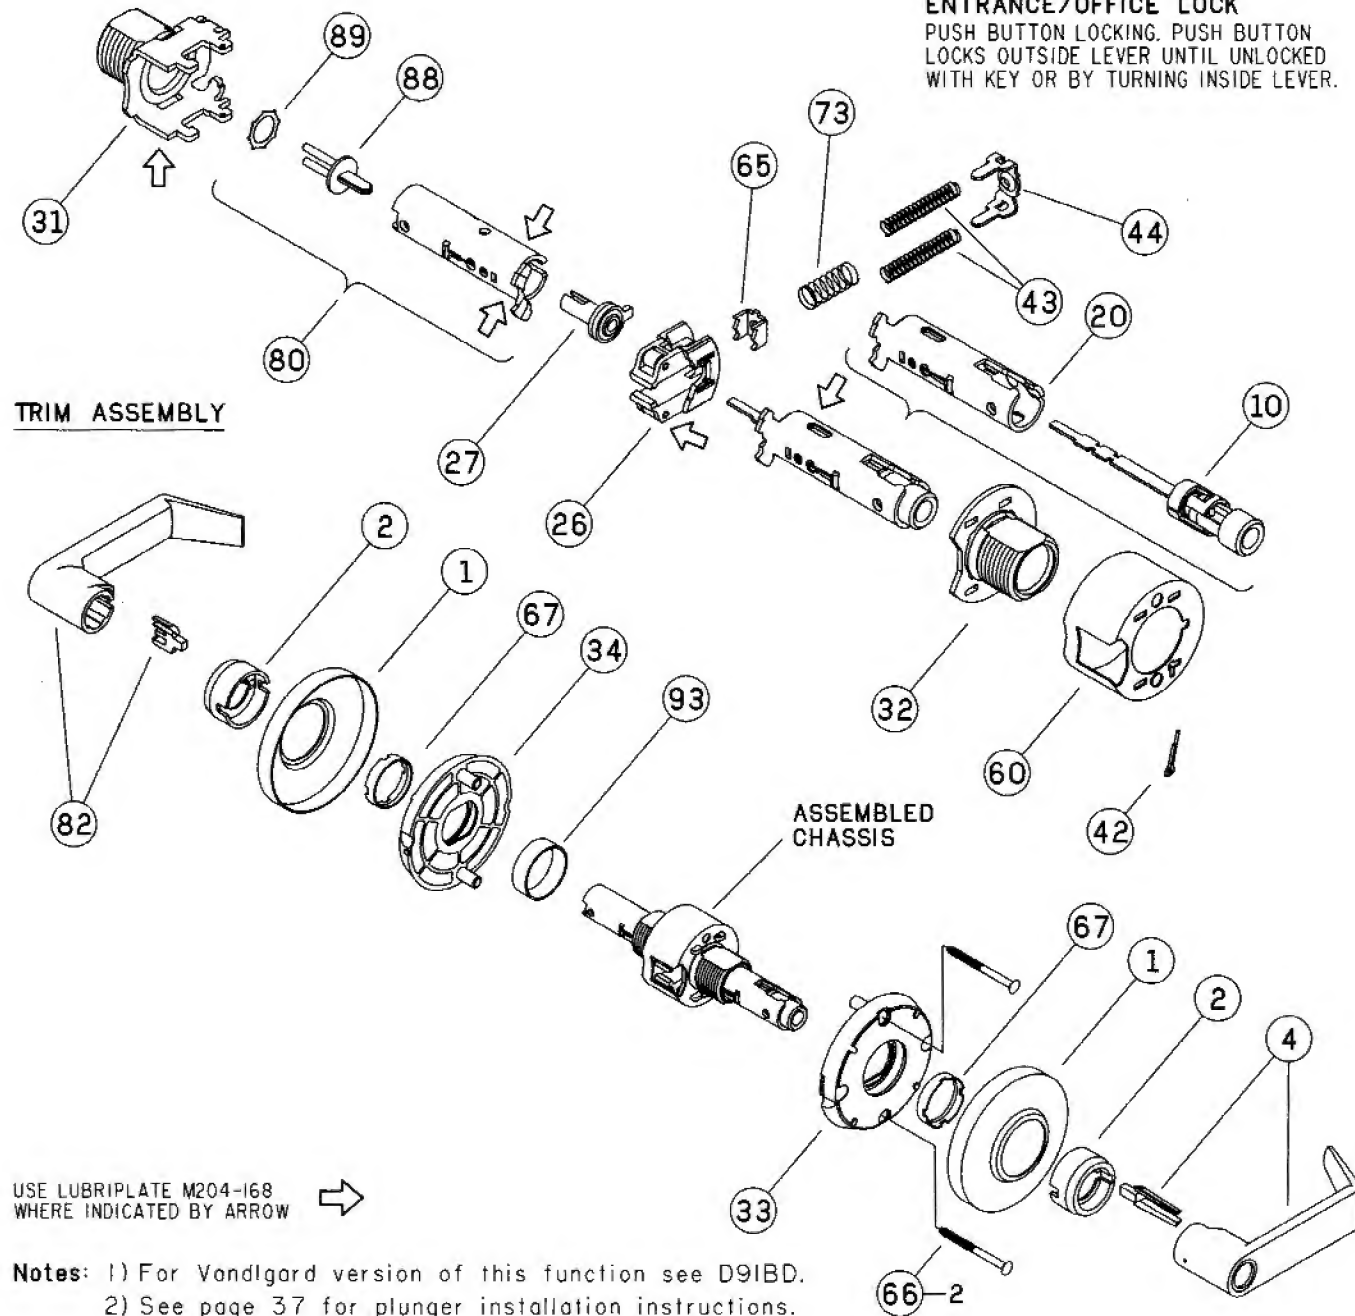


USE LUBRIPLATE M204-I68 →
WHERE INDICATED BY ARROW

Notes: 1) For Vondlgard version of this function see D9IBD.
2) See page 37 for plunger installation instructions.


D50PD

CHASSIS ASSEMBLY

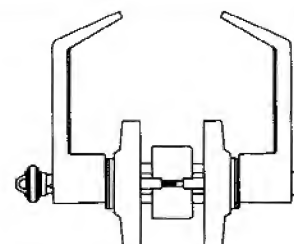

ENTRANCE/OFFICE LOCK
PUSH BUTTON LOCKING. PUSH BUTTON
LOCKS OUTSIDE LEVER UNTIL UNLOCKED
WITH KEY OR BY TURNING INSIDE LEVER.

TRIM ASSEMBLY

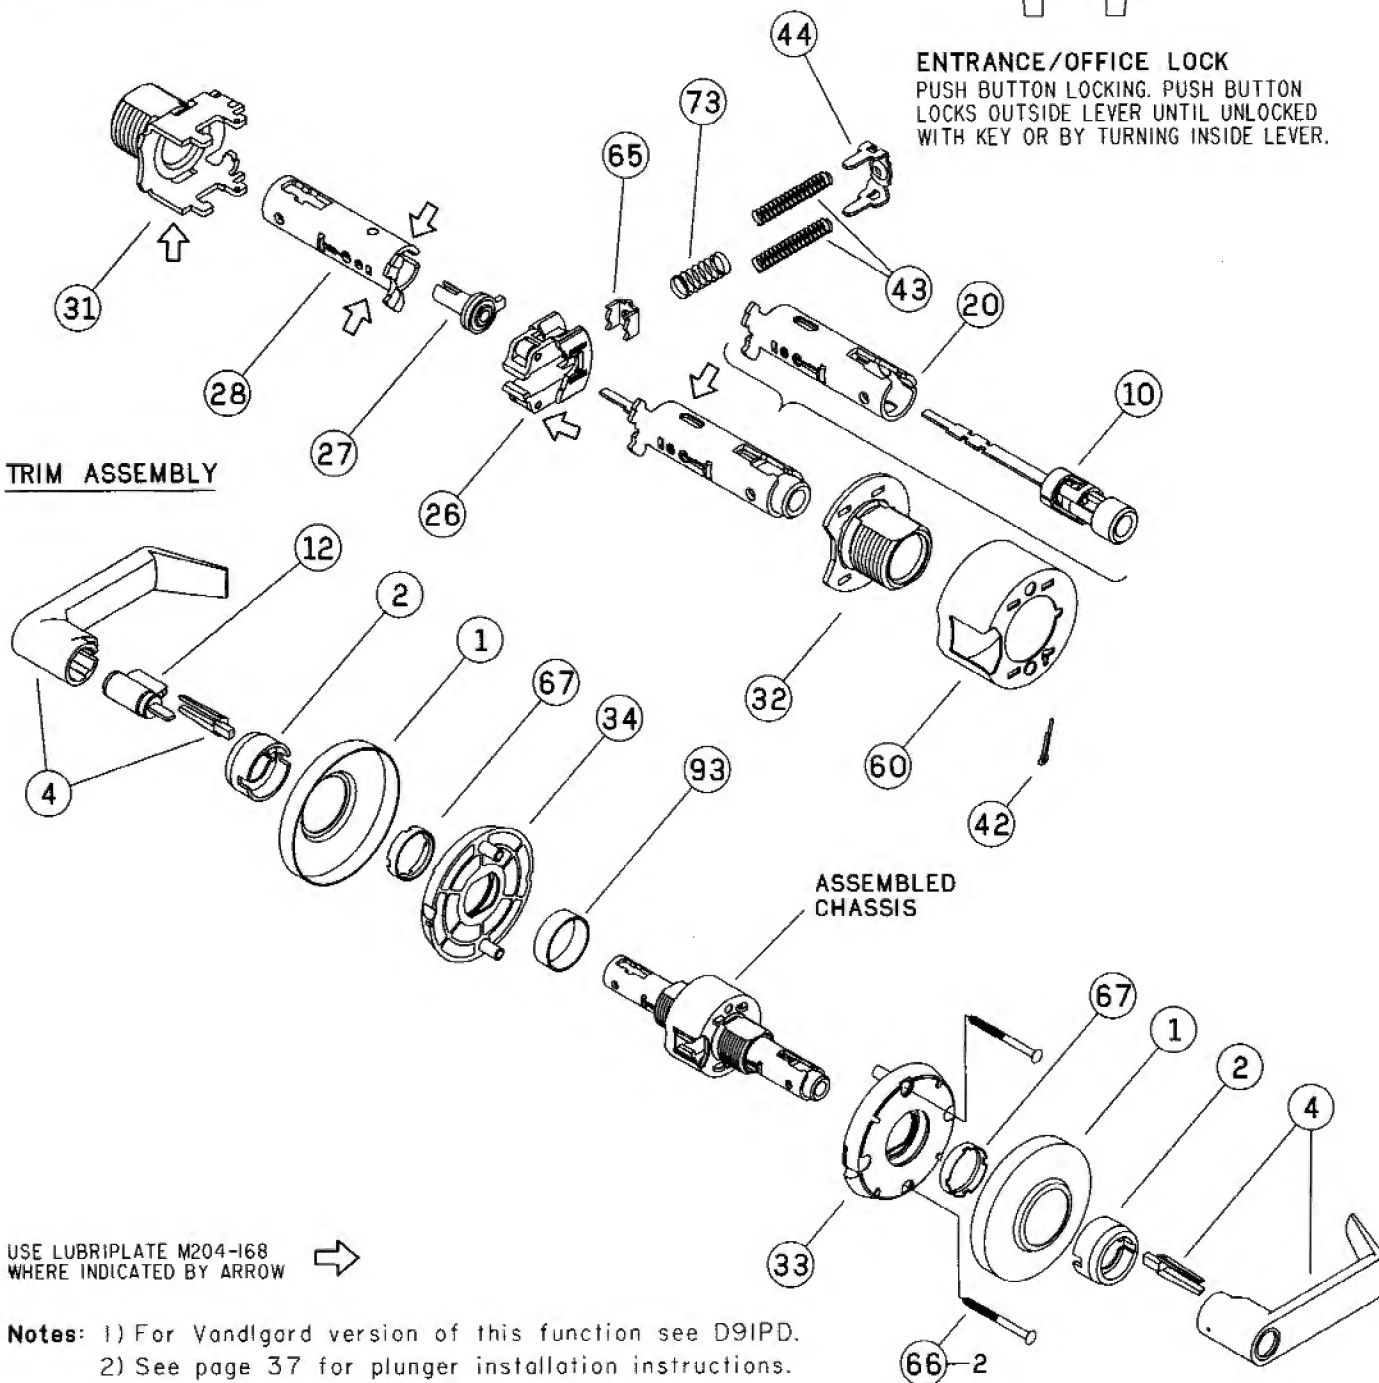


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW


Notes: 1) For Vandlgard version of this function see D9IPD.
2) See page 37 for plunger installation instructions.

D53BD


Designed to accept 6 or 7 pin Small
Format Interchangeable Cores manufactured
by Arrow, Best, Falcon and KSP.
FURNISHED LESS CORE.

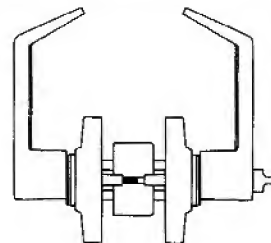

CHASSIS ASSEMBLY

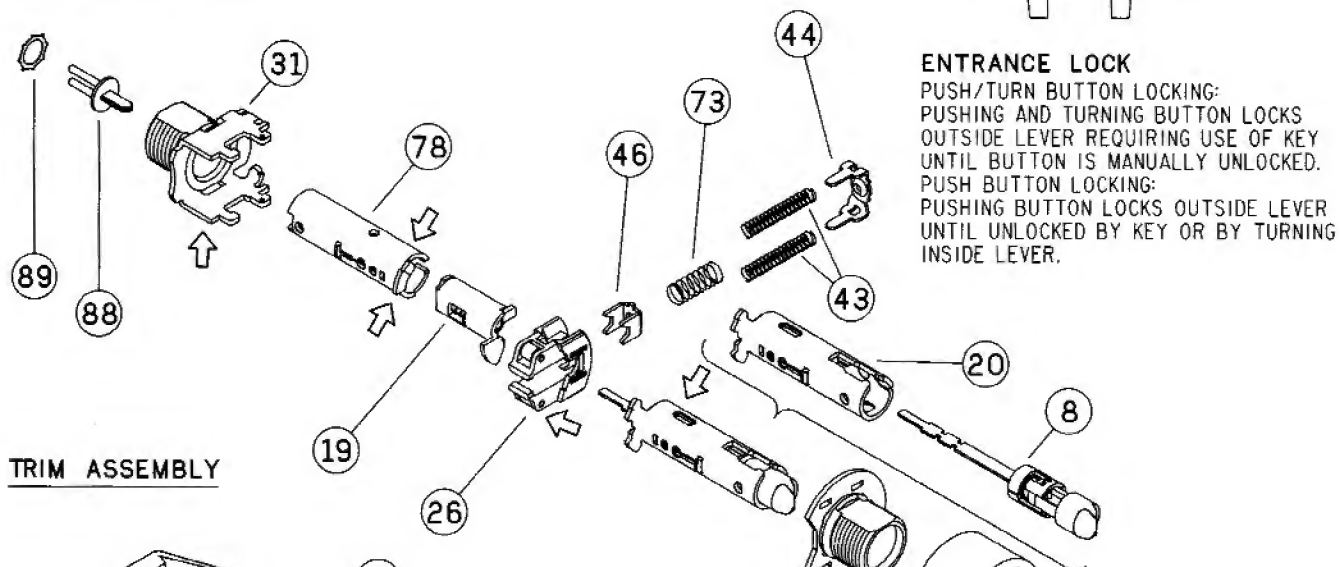

TRIM ASSEMBLY

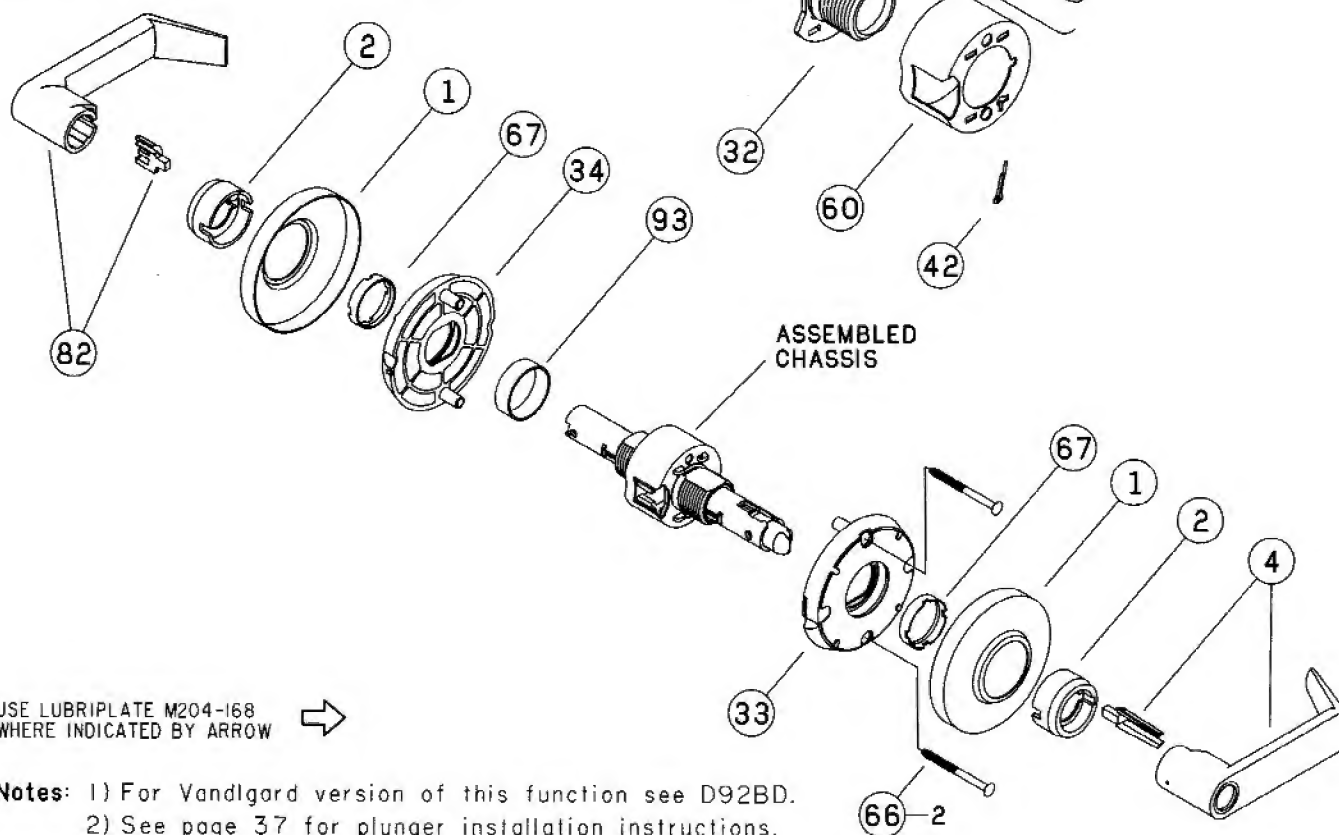


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW →

Notes: 1) For Vandlgard version of this function see D92BD.
2) See page 37 for plunger installation instructions.

D53PD


CHASSIS ASSEMBLY

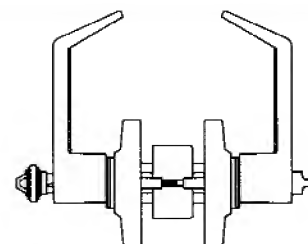

ENTRANCE LOCK

PUSH/TURN BUTTON LOCKING:
PUSHING AND TURNING BUTTON LOCKS
OUTSIDE LEVER REQUIRING USE OF KEY
UNTIL BUTTON IS MANUALLY UNLOCKED.
PUSH BUTTON LOCKING:
PUSHING BUTTON LOCKS OUTSIDE LEVER
UNTIL UNLOCKED BY KEY OR BY TURNING
INSIDE LEVER.

TRIM ASSEMBLY

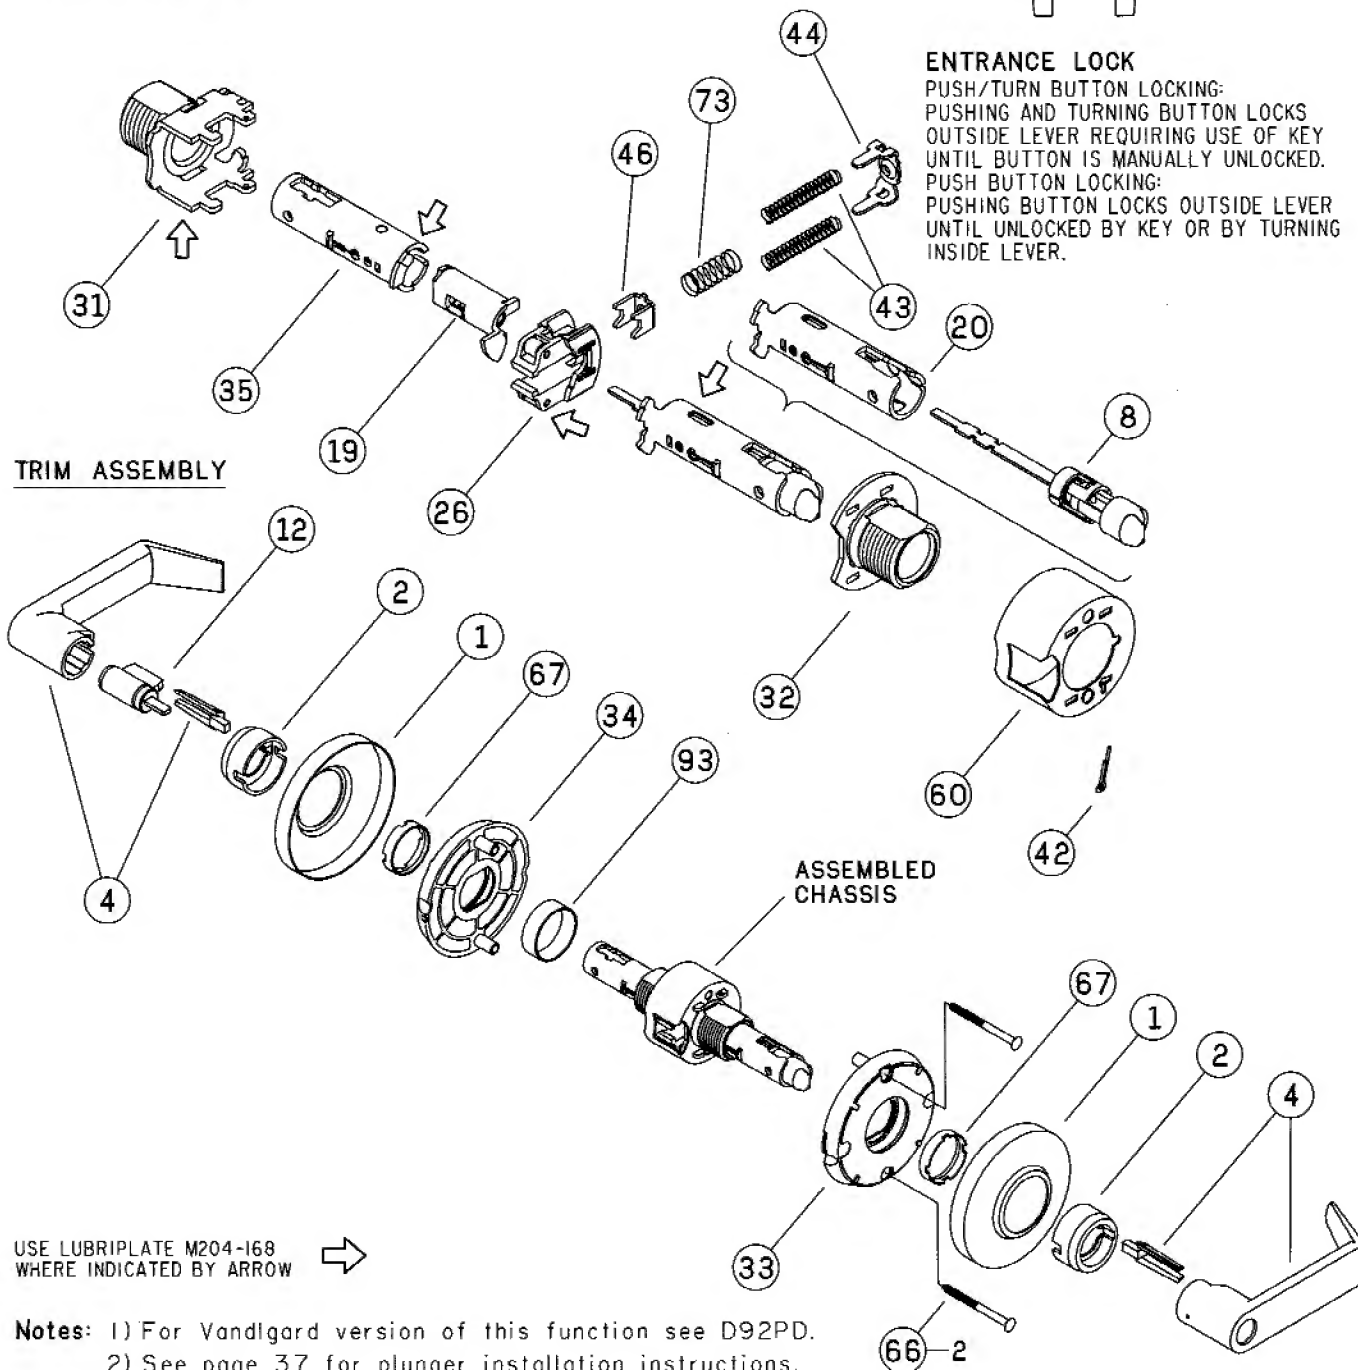


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW



Notes: 1) For Vandgard version of this function see D92PD.
2) See page 37 for plunger installation instructions.

D60PD


CHASSIS ASSEMBLY

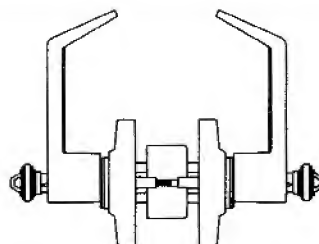

VESTIBULE LOCK

UNLOCKED BY KEY FROM OUTSIDE WHEN
OUTSIDE LEVER IS LOCKED BY KEY IN
INSIDE LEVER. INSIDE LEVER IS
ALWAYS UNLOCKED.

TRIM ASSEMBLY

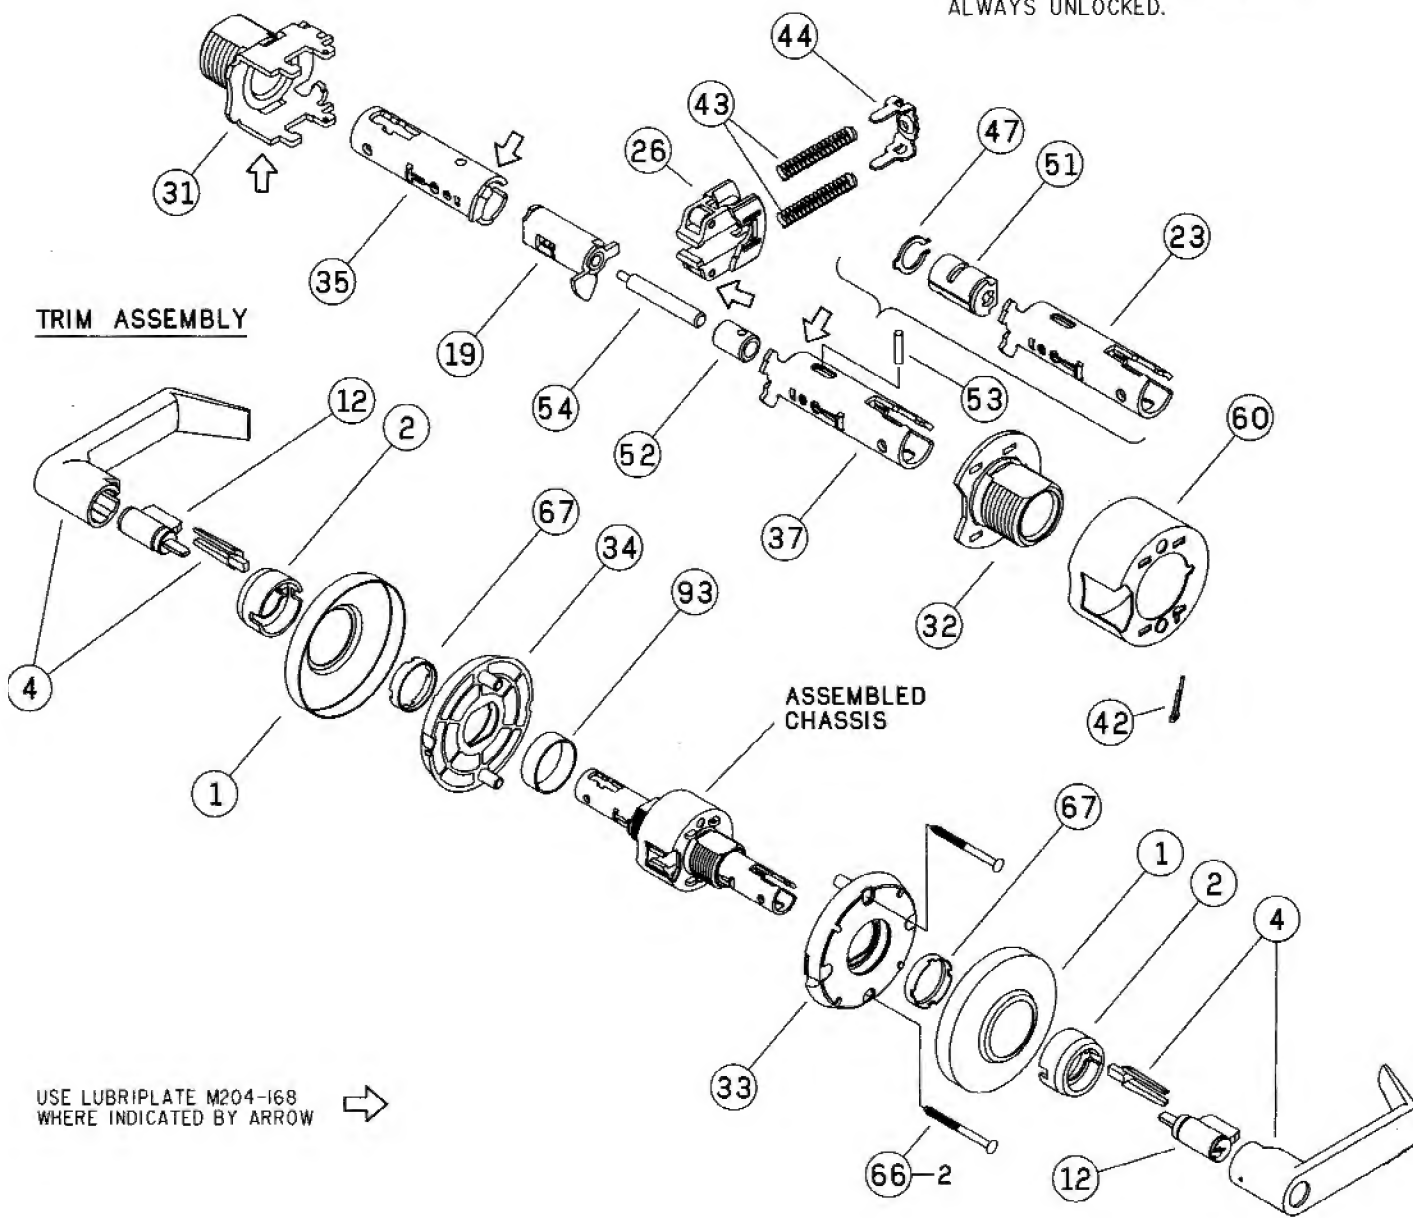


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW




D66PD

CHASSIS ASSEMBLY

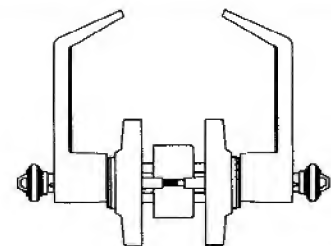


STORE LOCK
KEY IN EITHER LEVER LOCKS OR
UNLOCKS BOTH LEVERS.

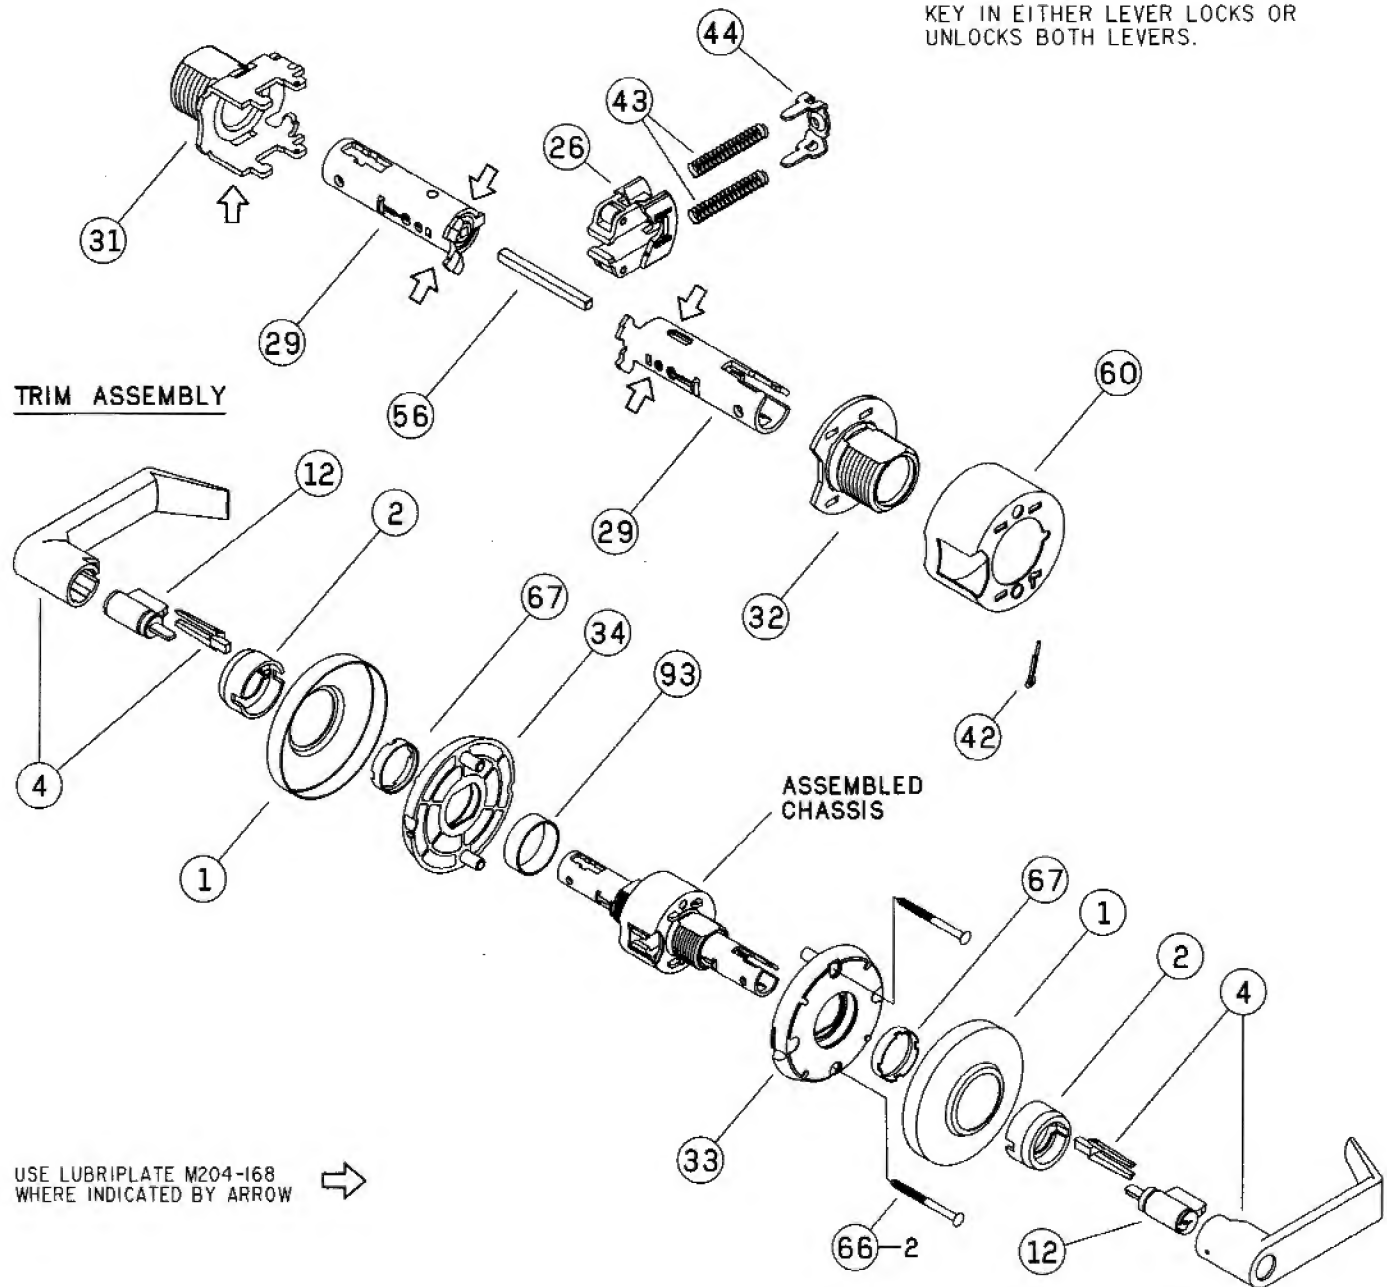

D70BD


Designed to accept 6 or 7 pin Small
Format Interchangeable Cores manufactured
by Arrow, Best, Falcon and KSP.
FURNISHED LESS CORE.

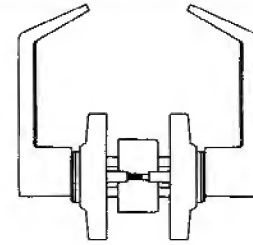

CLASSROOM LOCK
OUTSIDE LEVER LOCKED AND UNLOCKED
BY KEY. INSIDE LEVER ALWAYS UNLOCKED.

CHASSIS ASSEMBLY

TRIM ASSEMBLY

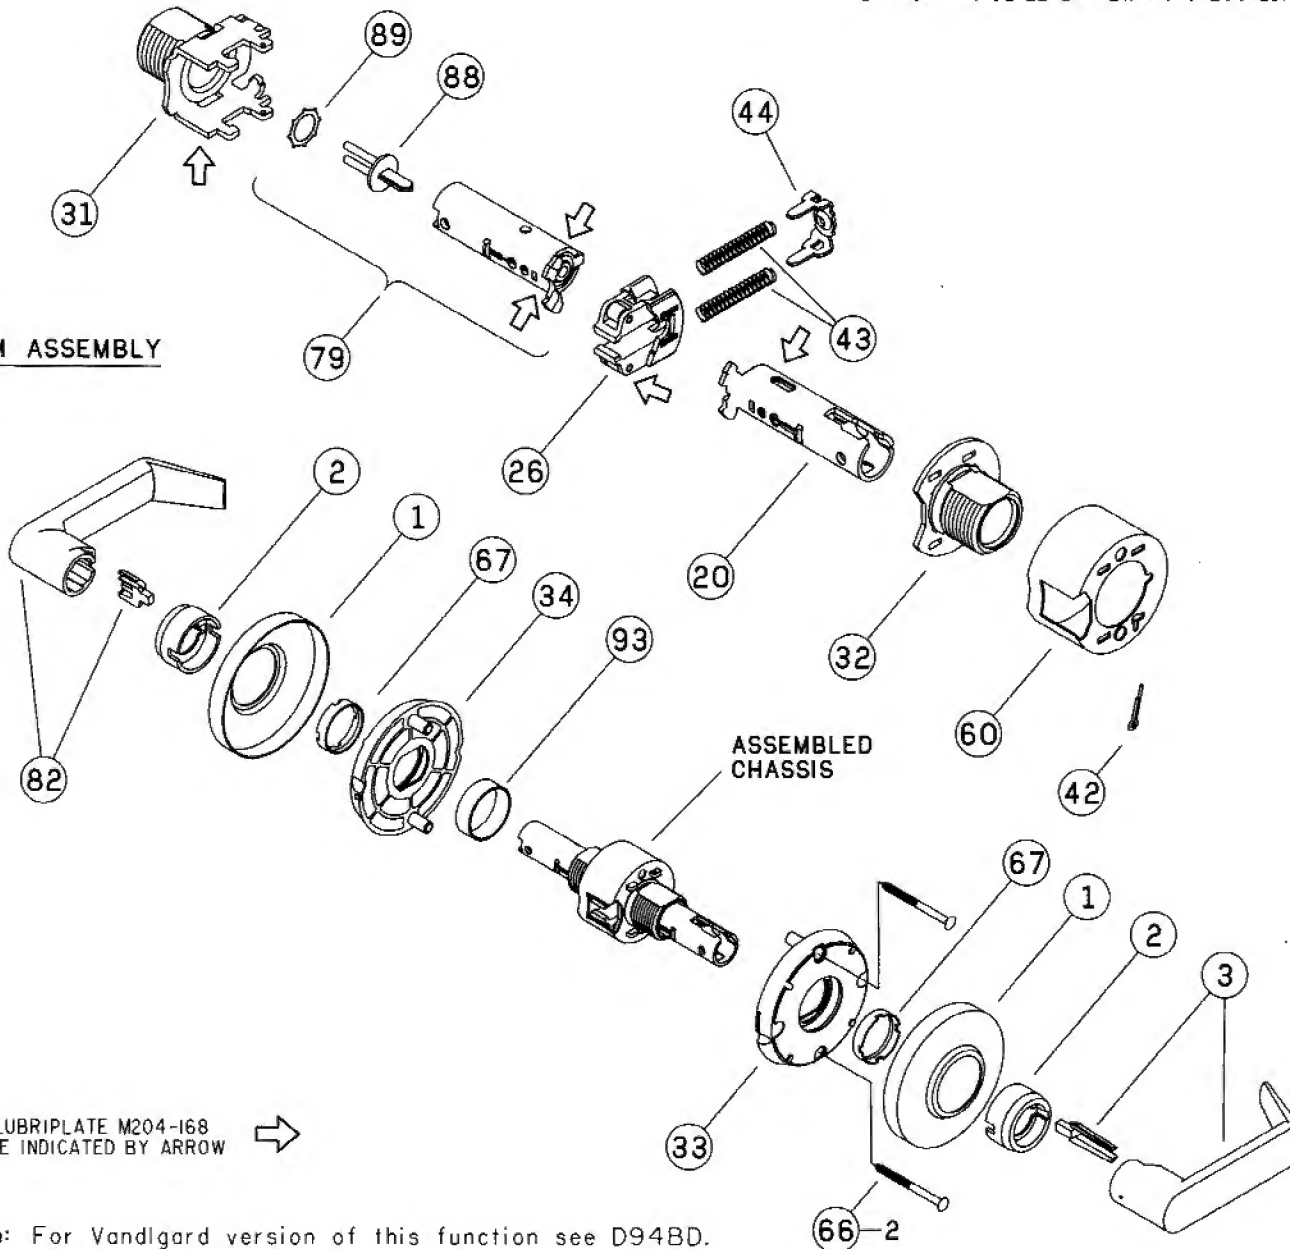


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW →

Note: For Vandigard version of this function see D94BD.


D70PD

CHASSIS ASSEMBLY

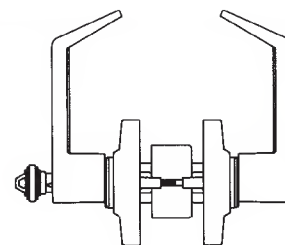

CLASSROOM LOCK
OUTSIDE LEVER LOCKED AND UNLOCKED
BY KEY. INSIDE LEVER ALWAYS UNLOCKED.

TRIM ASSEMBLY

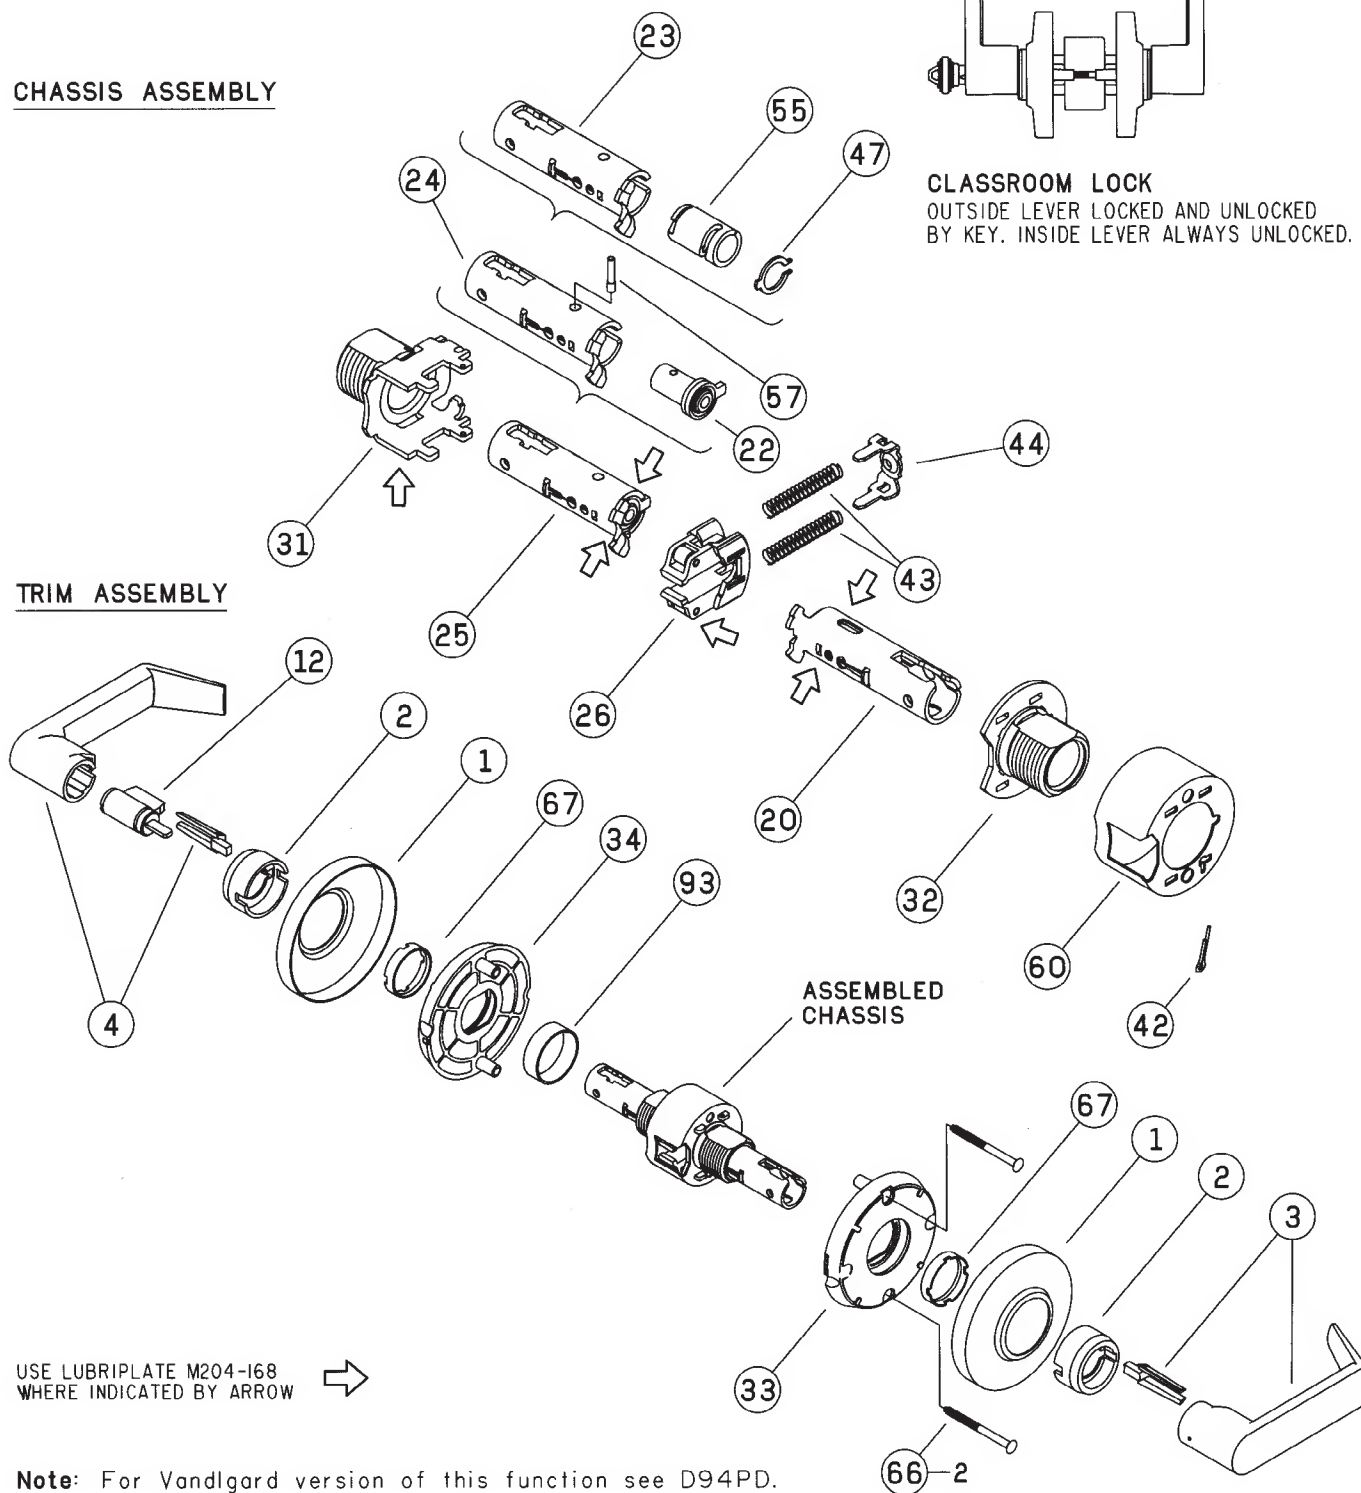


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW →

Note: For Vandlgard version of this function see D94PD.

D73BD

Designed to accept 6 or 7 pin Small
Format Interchangeable Cores manufactured
by Arrow, Best, Falcon and KSP.
FURNISHED LESS CORE.

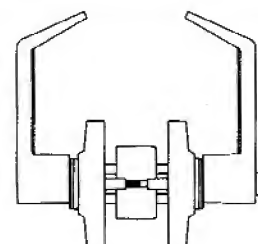


CHASSIS ASSEMBLY

CORRIDOR LOCK

LOCKED OR UNLOCKED BY KEY FROM OUTSIDE.
PUSH BUTTON LOCKING FROM INSIDE. TURNING
INSIDE LEVER OR CLOSING DOOR RELEASES
BUTTON.

TRIM ASSEMBLY

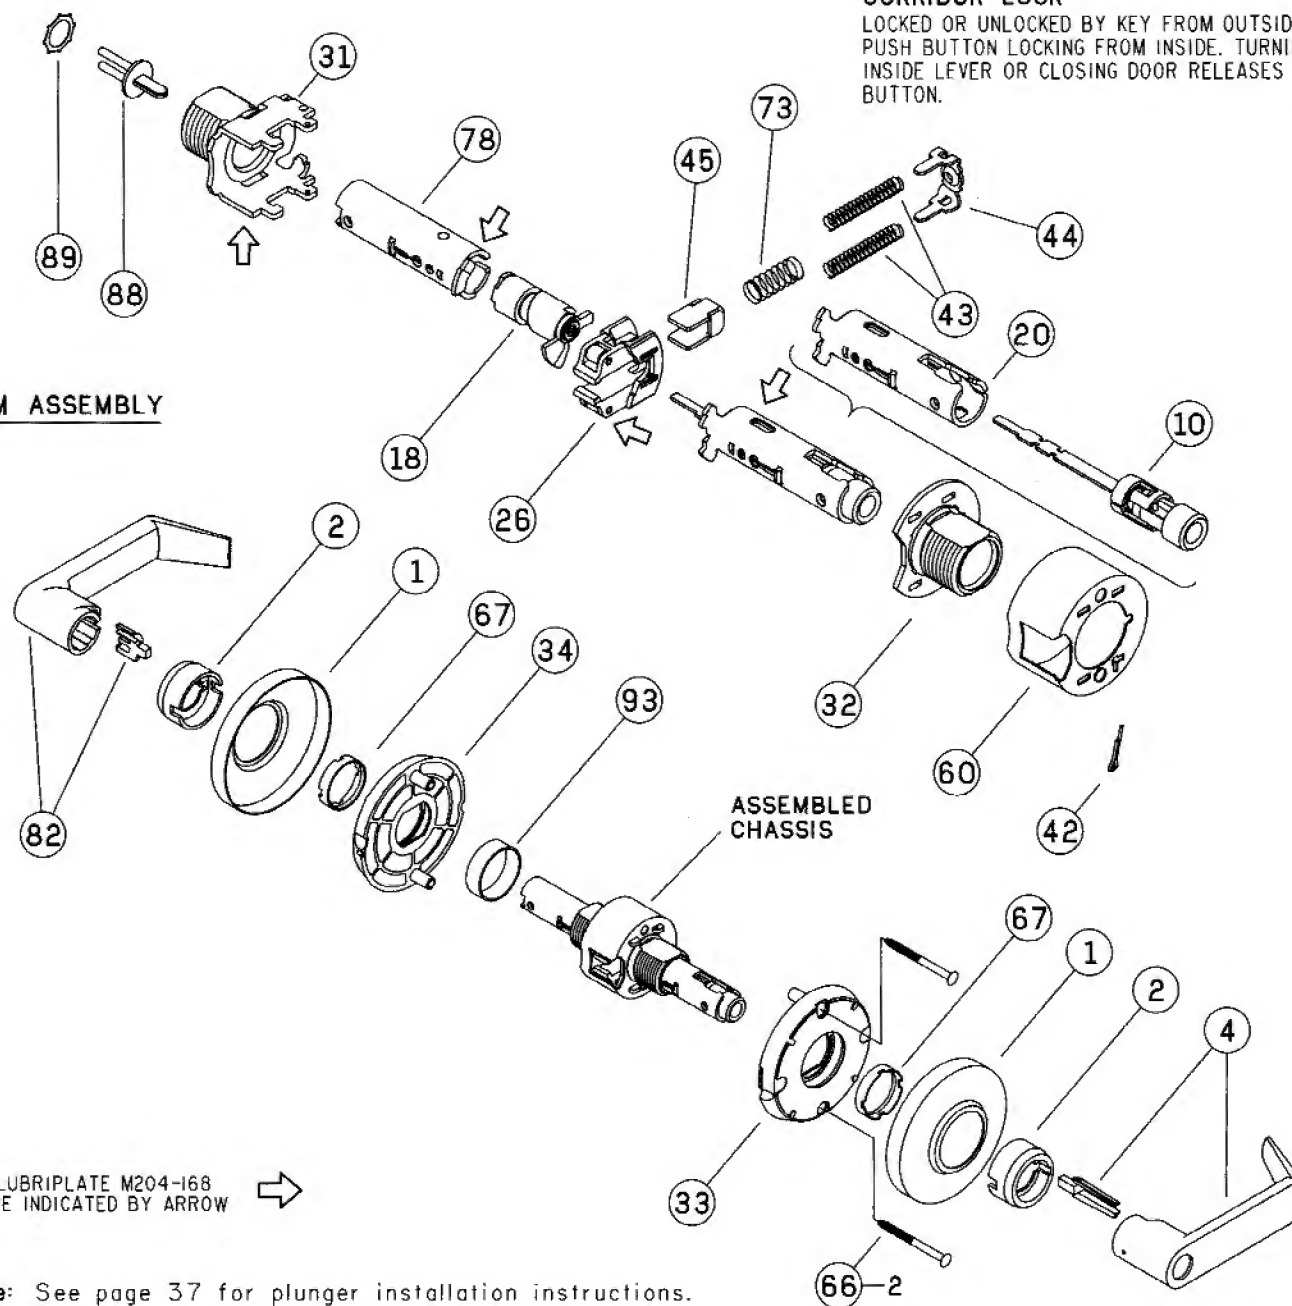


USE LUBRIPLATE M204-I68
WHERE INDICATED BY ARROW →

Note: See page 37 for plunger installation instructions.


D73PD

CHASSIS ASSEMBLY

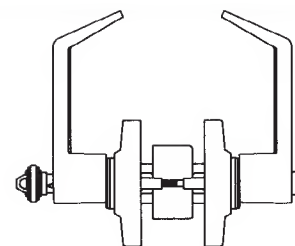

CORRIDOR LOCK

LOCKED OR UNLOCKED BY KEY FROM OUTSIDE. PUSH BUTTON LOCKING FROM INSIDE. TURNING INSIDE LEVER OR CLOSING DOOR RELEASES BUTTON.

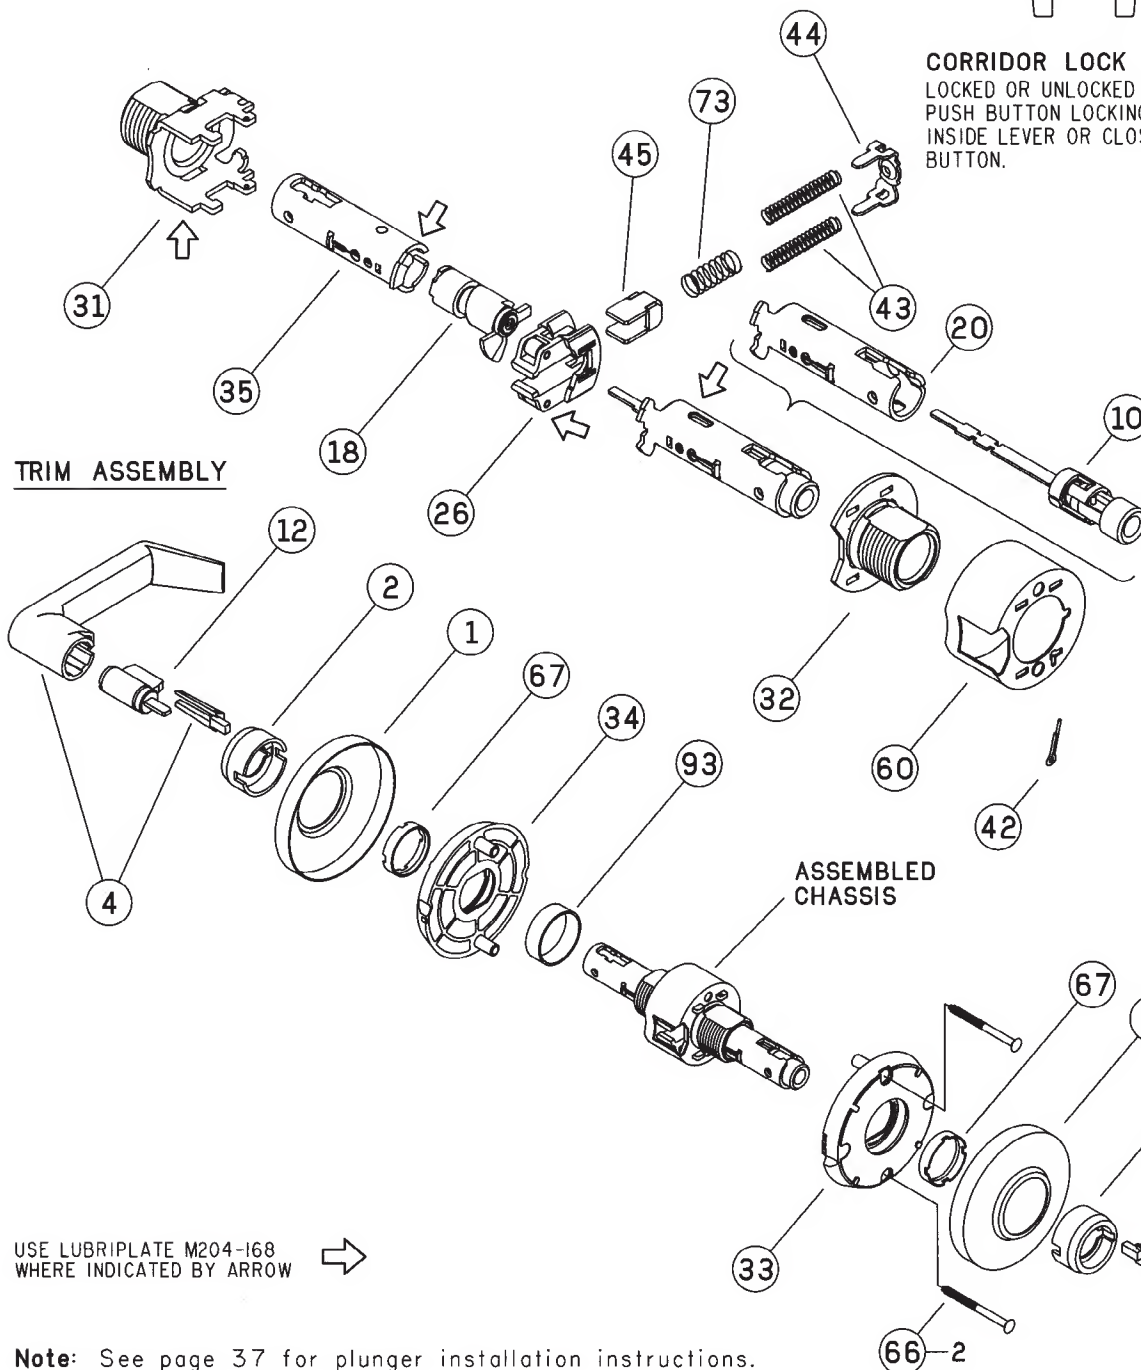


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW


Note: See page 37 for plunger installation instructions.

D80PD

CHASSIS ASSEMBLY

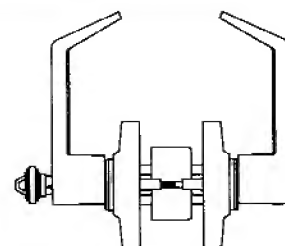

STOREROOM LOCK
OUTSIDE LEVER FIXED. ENTRANCE BY KEY
ONLY. INSIDE LEVER ALWAYS UNLOCKED.

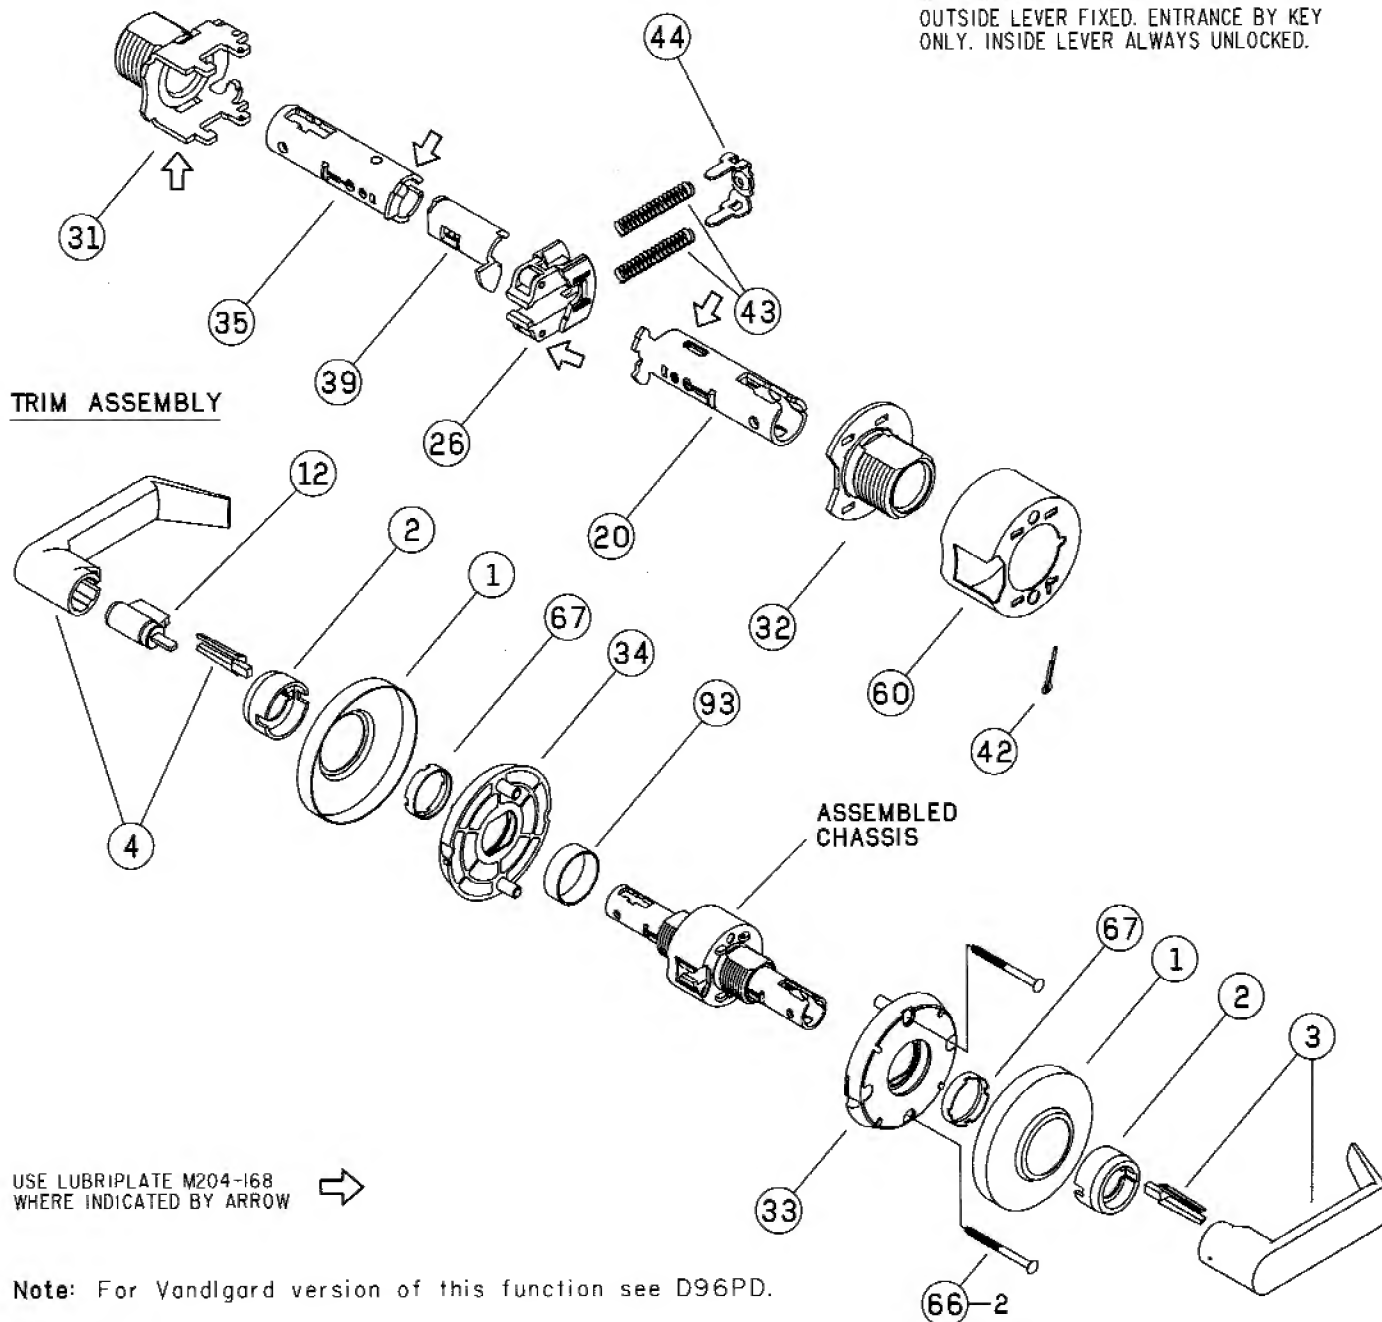


USE LUBRIPLATE M204-I68
WHERE INDICATED BY ARROW


Note: For Vandgard version of this function see D96PD.

D80BDEL

Designed to accept 6 or 7 pin Small
Format Interchangeable Cores manufactured
by Arrow, Best, Falcon and KSP.
FURNISHED LESS CORE.

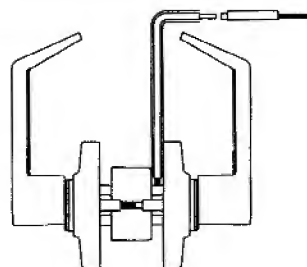


CHASSIS ASSEMBLY

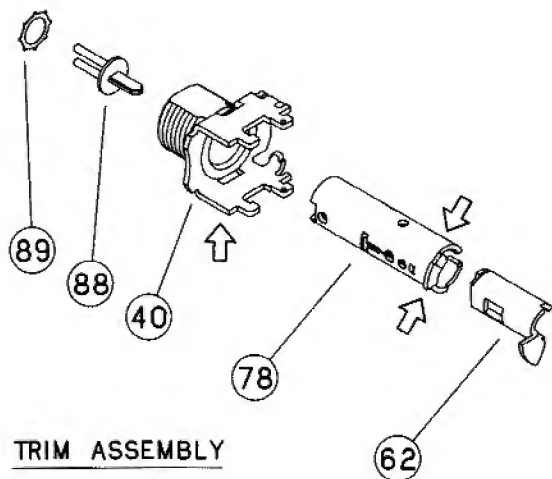


ELECTRICALLY LOCKED (FAIL SAFE)

AUXILIARY LATCH DEADLOCKS LATCHBOLT
WHEN DOOR IS CLOSED. OUTSIDE LEVER
CONTINUOUSLY LOCKED ELECTRICALLY
UNTIL UNLOCKED BY KEY, SWITCH OR
POWER FAILURE. INSIDE LEVER ALWAYS
FREE FOR IMMEDIATE EXIT.

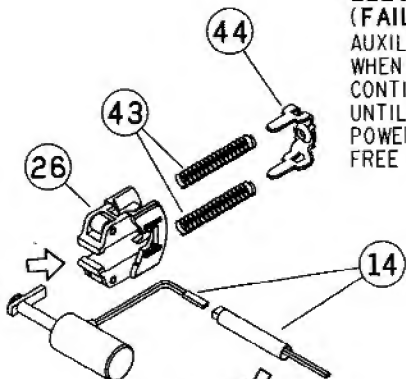

TRIM ASSEMBLY

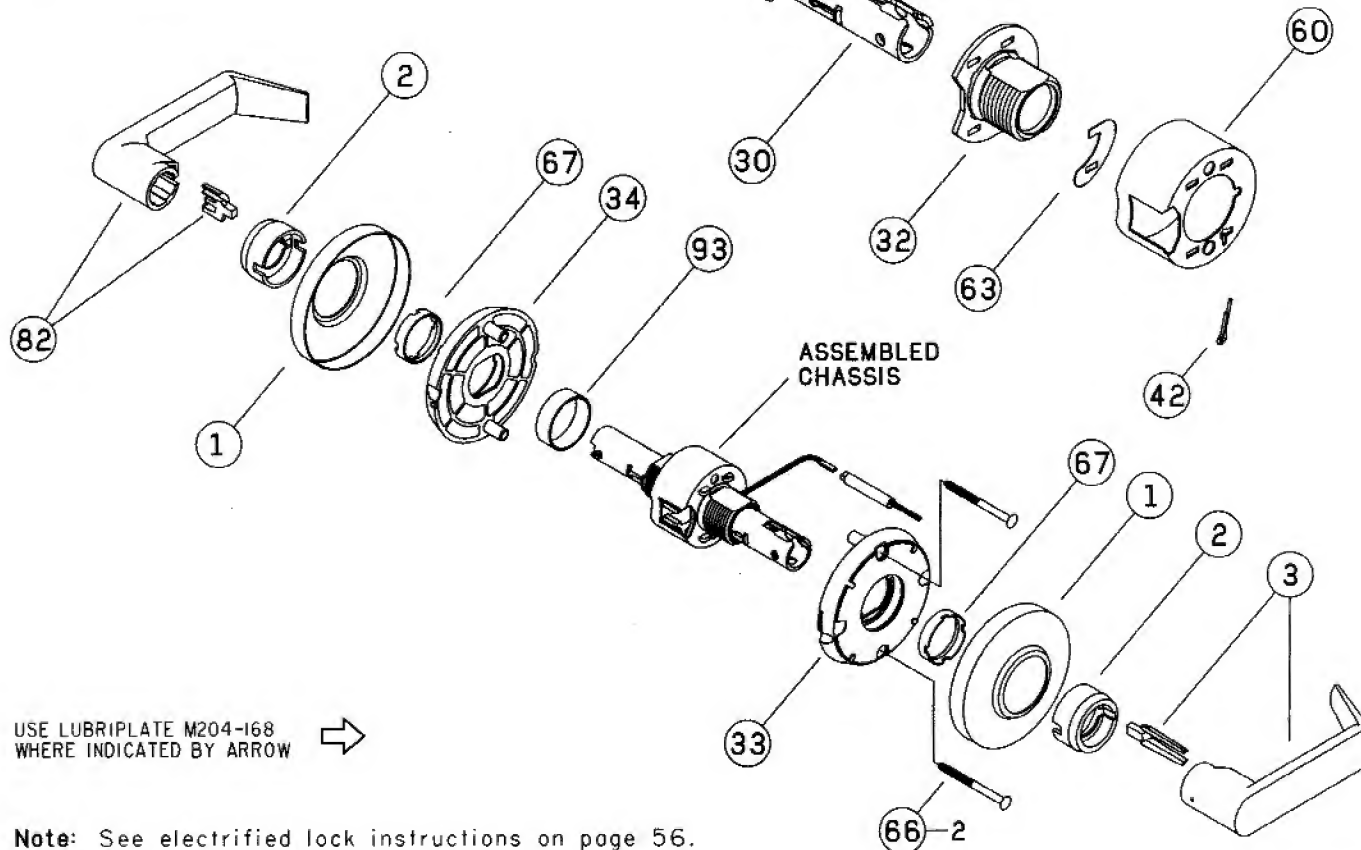

ASSEMBLED
CHASSIS


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW



Note: See electrified lock instructions on page 56.

D80PDEL


CHASSIS ASSEMBLY

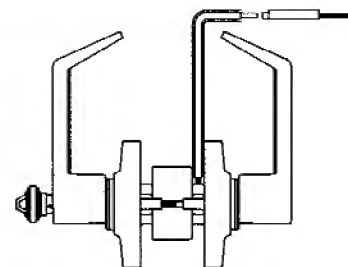

ELECTRICALLY LOCKED (FAIL SAFE)

AUXILIARY LATCH DEADLOCKS LATCHBOLT WHEN DOOR IS CLOSED. OUTSIDE LEVER CONTINUOUSLY LOCKED ELECTRICALLY UNTIL UNLOCKED BY KEY, SWITCH OR POWER FAILURE. INSIDE LEVER ALWAYS FREE FOR IMMEDIATE EXIT.

TRIM ASSEMBLY

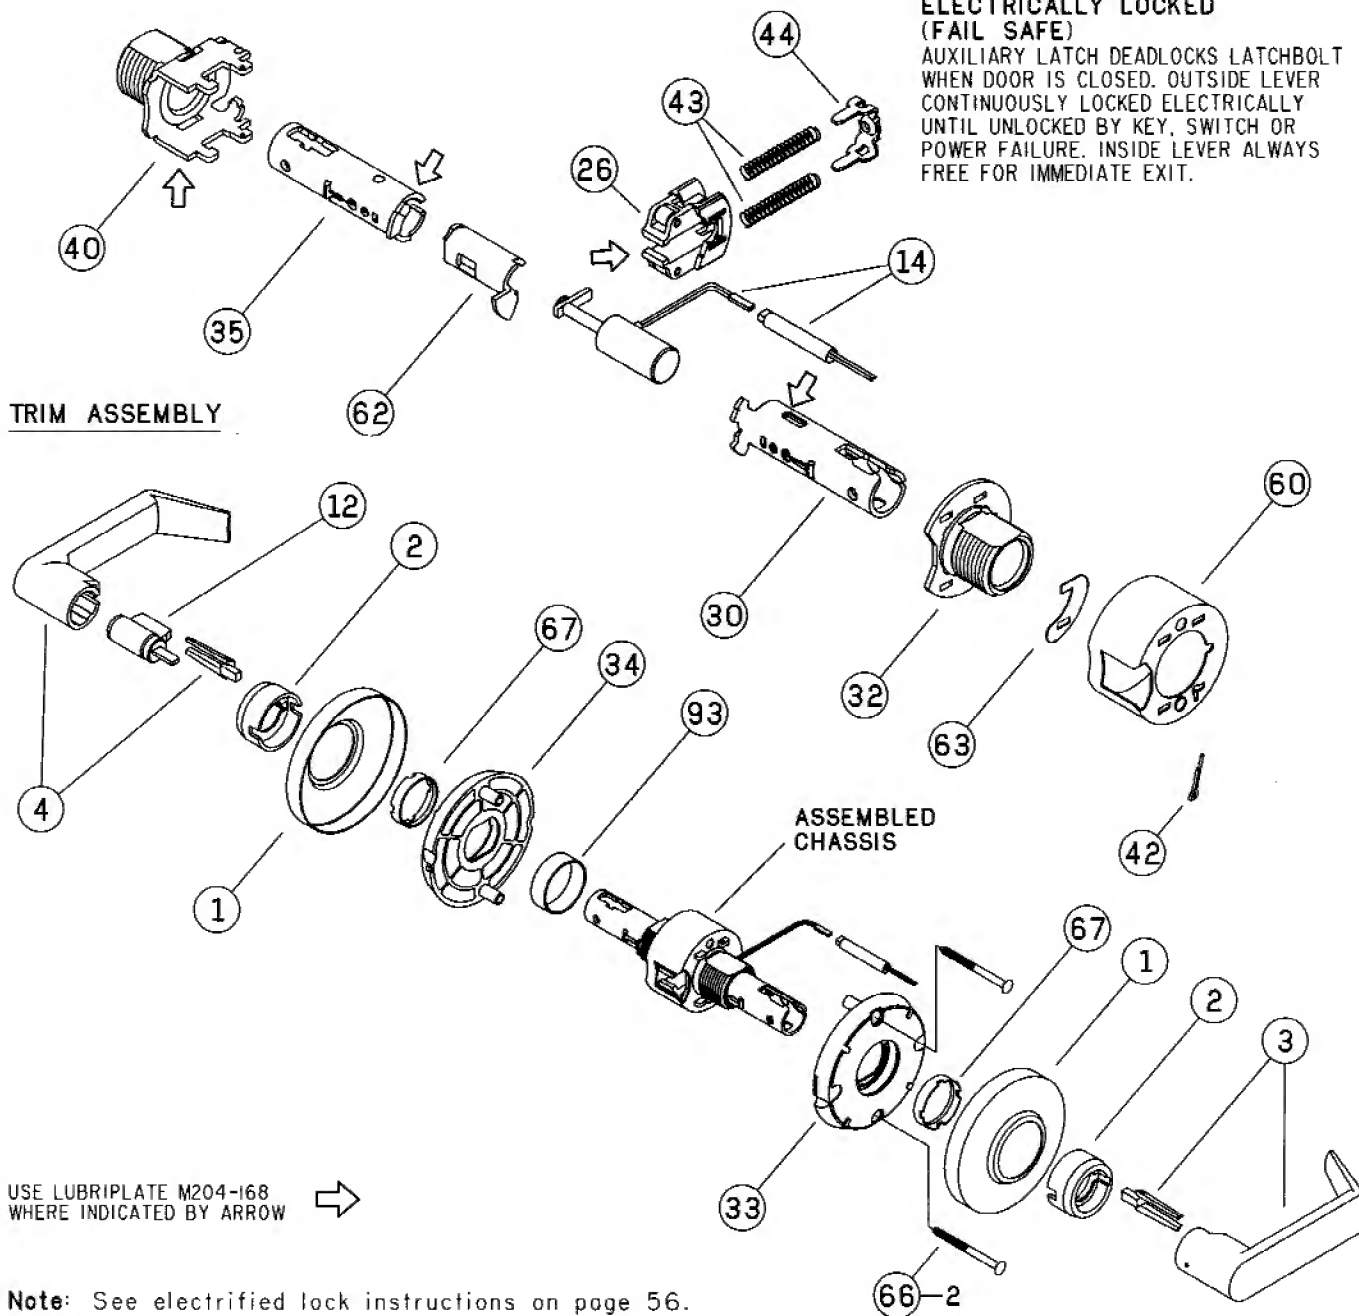


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW




Note: See electrified lock instructions on page 56.

D80BDEU

Designed to accept 6 or 7 pin Small
Format Interchangeable Cores manufactured
by Arrow, Best, Falcon and KSP.
FURNISHED LESS CORE.

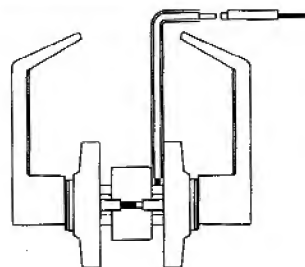


CHASSIS ASSEMBLY

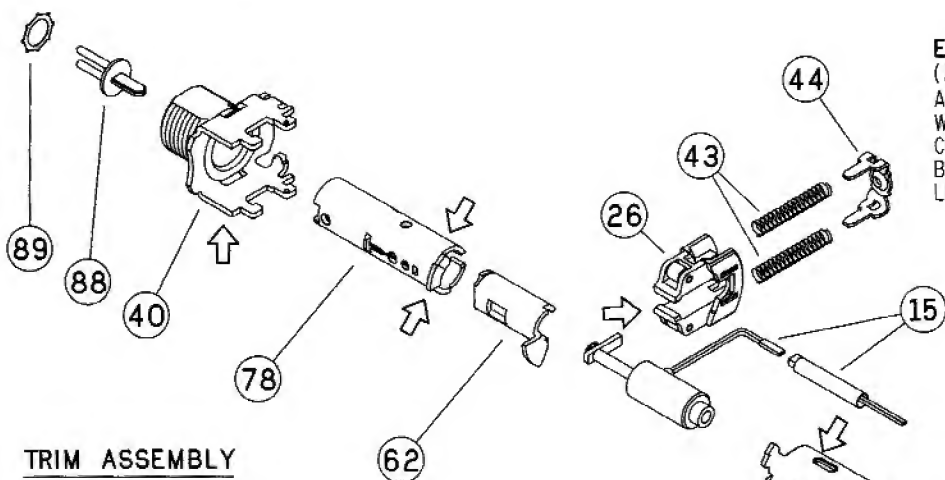

ELECTRICALLY UNLOCKED (FAIL SECURE)

AUXILIARY LATCH DEADLOCKS LATCHBOLT
WHEN DOOR IS CLOSED. OUTSIDE LEVER
CONTINUOUSLY LOCKED UNTIL UNLOCKED
BY KEY OR ELECTRIC CURRENT. INSIDE
LEVER ALWAYS FREE FOR IMMEDIATE EXIT.

TRIM ASSEMBLY

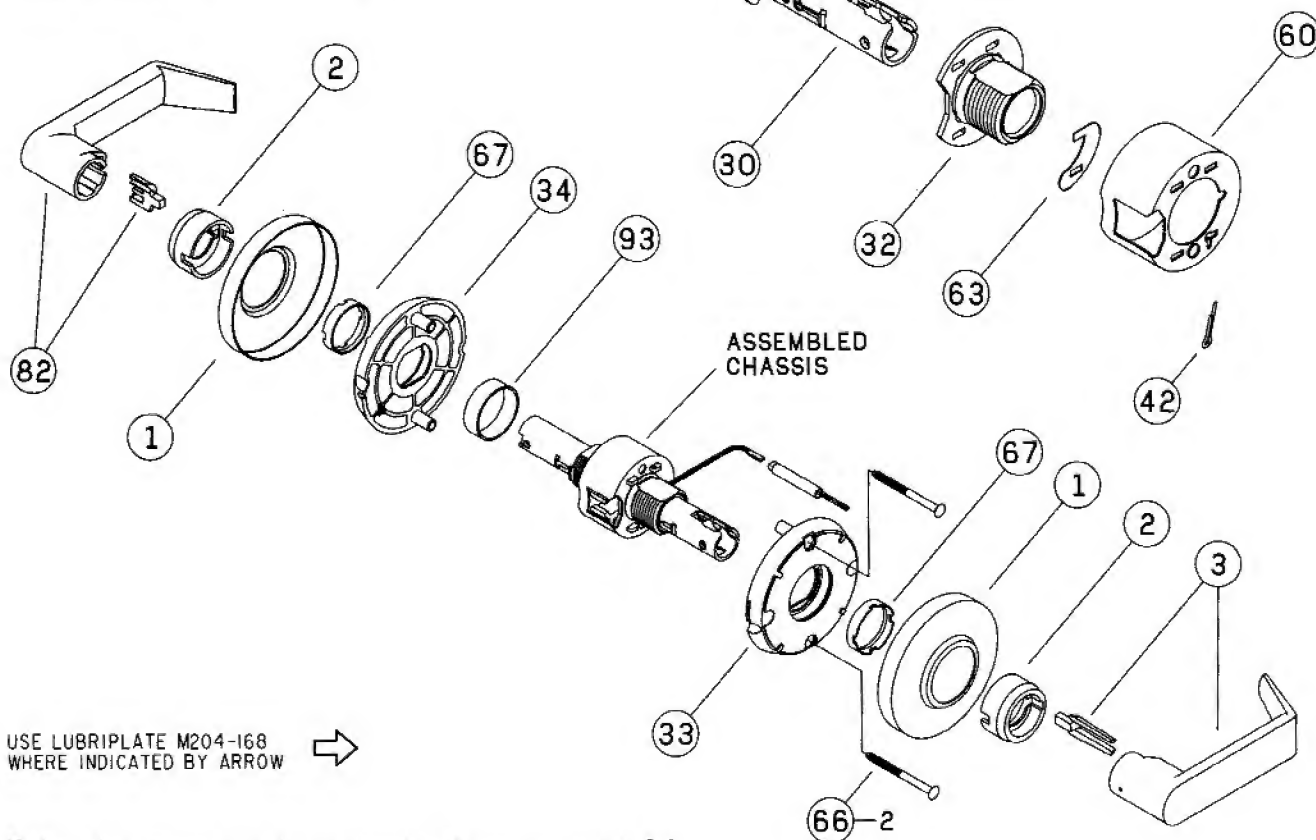


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW



Note: See electrified lock instructions on page 56.

D80PDEU


CHASSIS ASSEMBLY

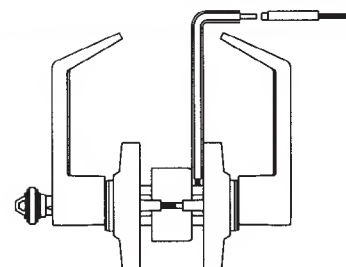

ELECTRICALLY UNLOCKED (FAIL SECURE)

AUXILIARY LATCH DEADLOCKS LATCHBOLT WHEN DOOR IS CLOSED. OUTSIDE LEVER CONTINUOUSLY LOCKED UNTIL UNLOCKED BY KEY OR ELECTRIC CURRENT. INSIDE LEVER ALWAYS FREE FOR IMMEDIATE EXIT.


TRIM ASSEMBLY

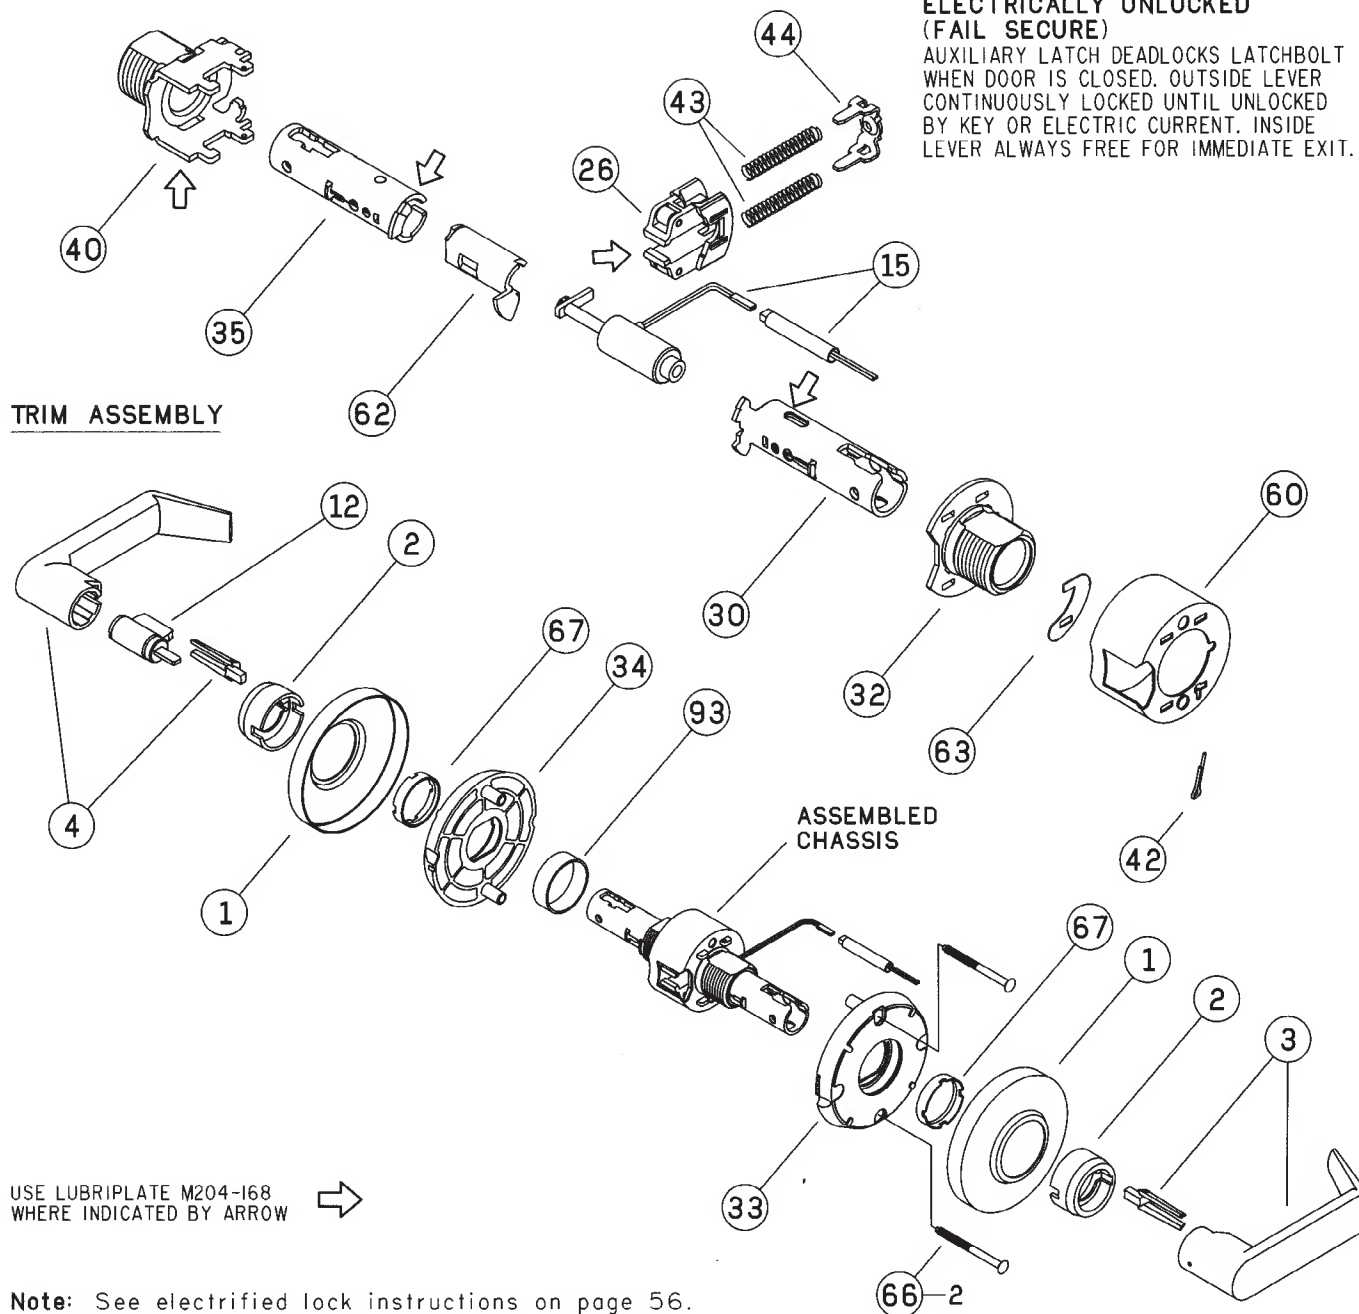

Note: See electrified lock instructions on page 56.


D82PD

CHASSIS ASSEMBLY

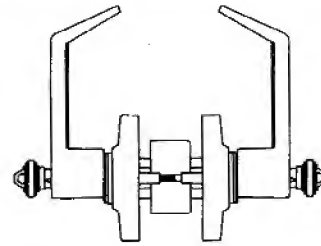

INSTITUTION LOCK
BOTH LEVERS FIXED. ENTRANCE BY
KEY IN EITHER LEVER.

TRIM ASSEMBLY

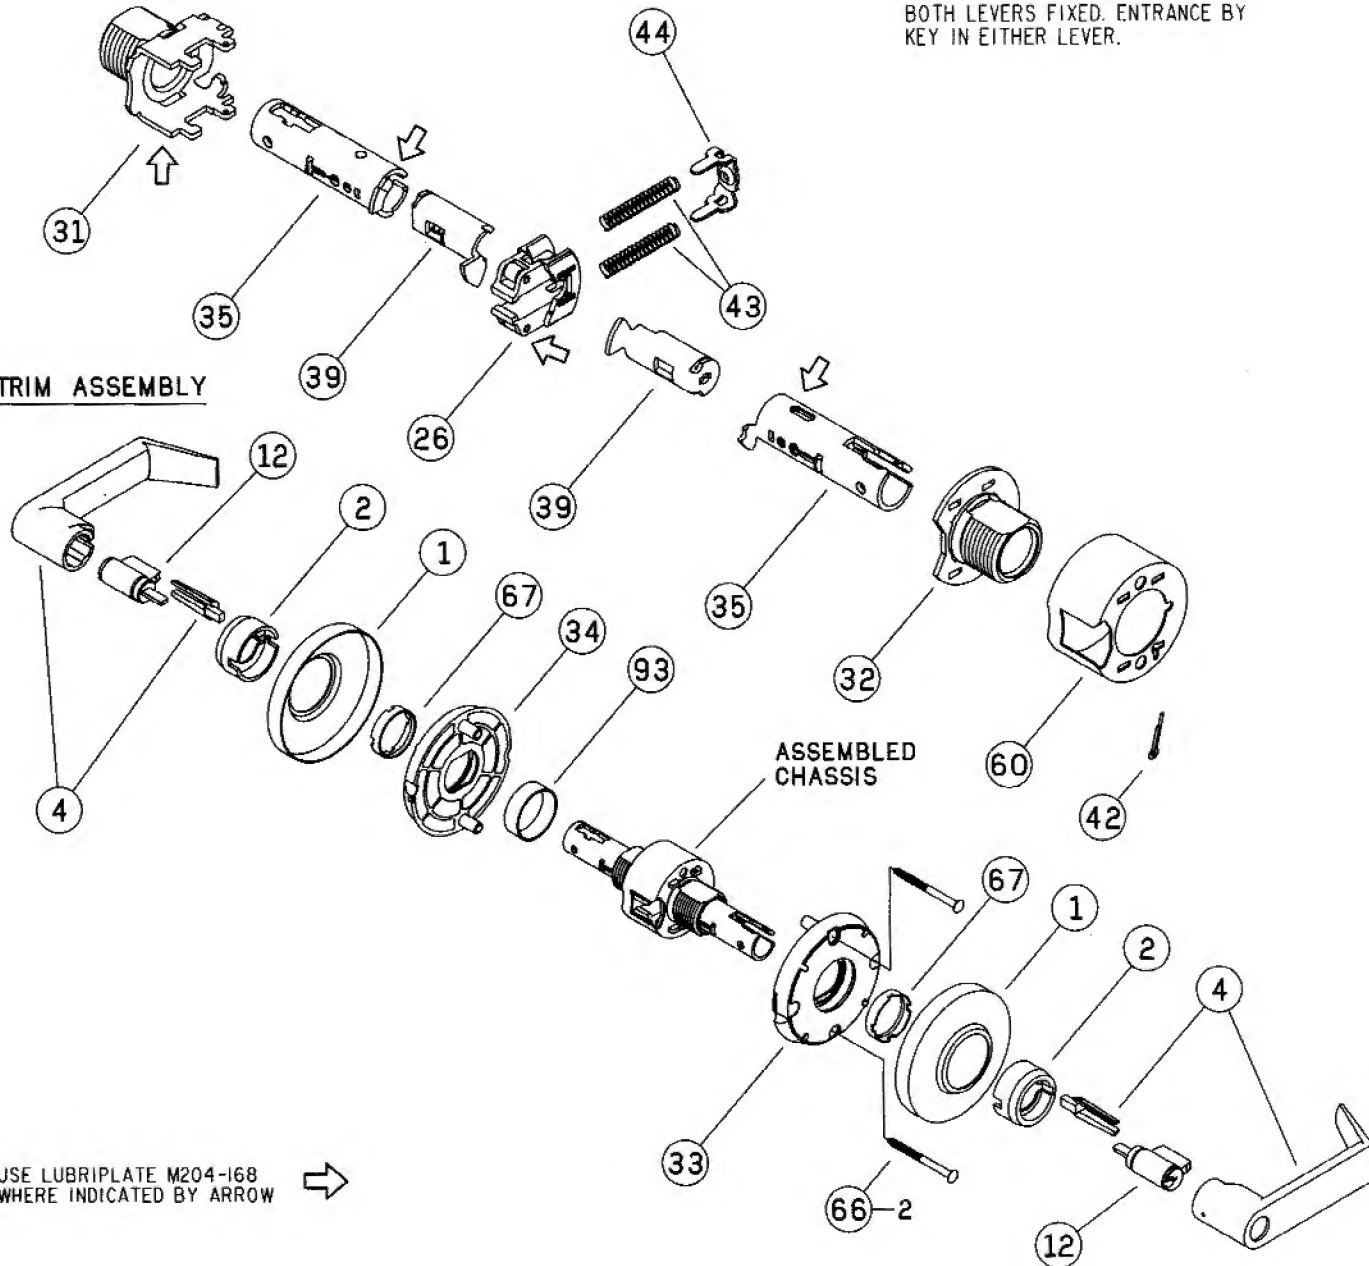


USE LUBRIPLATE M204-I68
WHERE INDICATED BY ARROW



D85PD


CHASSIS ASSEMBLY

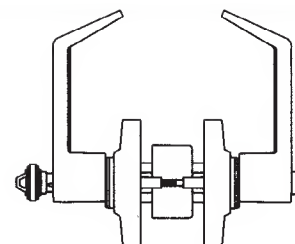

HOTEL/MOTEL LOCK

OUTSIDE LEVER FIXED. ENTRANCE BY KEY ONLY. PUSH BUTTON IN INSIDE LEVER ACTIVATES VISUAL OCCUPANCY INDICATOR ALLOWING ONLY EMERGENCY MASTERKEY TO OPERATE. TURNING INSIDE LEVER OR CLOSING DOOR RELEASES VISUAL OCCUPANCY INDICATOR. ROTATION OF INSIDE SPANNER BUTTON PROVIDES LOCKOUT FEATURE BY KEEPING INDICATOR THROWN.

TRIM ASSEMBLY

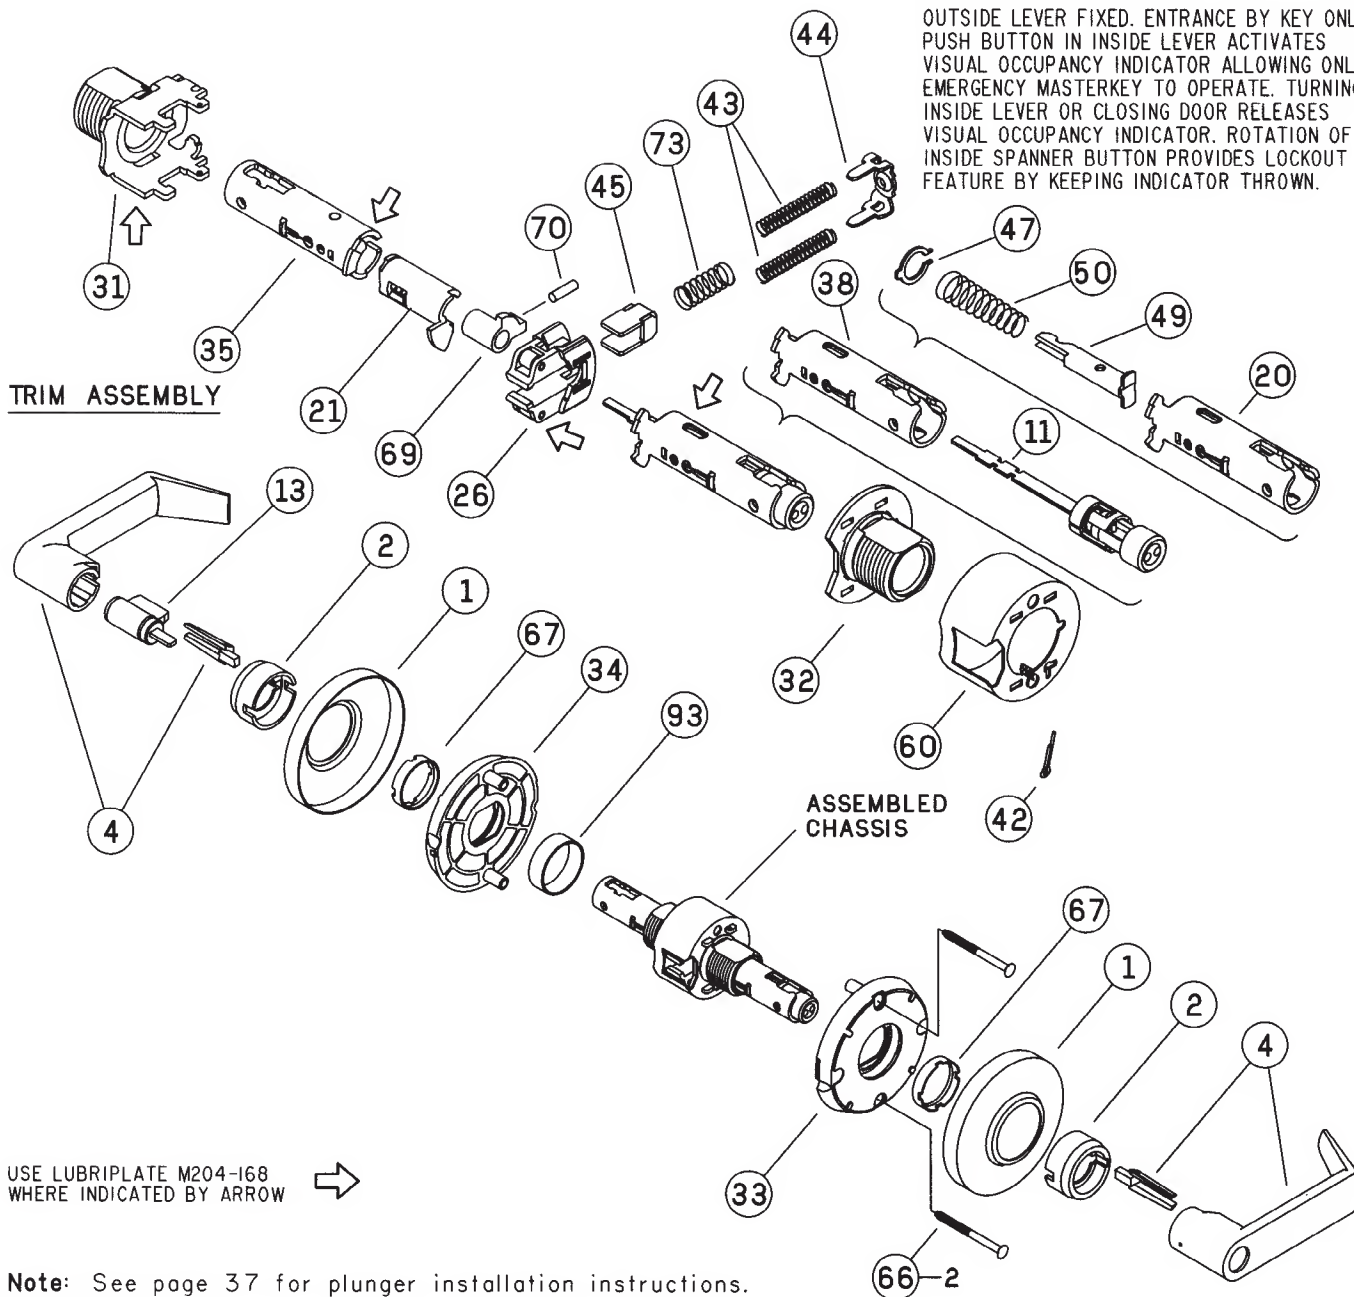


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW



Note: See page 37 for plunger installation instructions.


D91BD VANDLGARD

Designed to accept 6 or 7 pin Small
Format Interchangeable Cores manufactured
by Arrow, Best, Falcon and KSP.
FURNISHED LESS CORE.

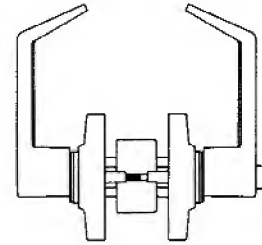

CHASSIS ASSEMBLY

ENTRANCE/OFFICE LOCK
PUSH BUTTON LOCKING. PUSH BUTTON
DISENGAGES OUTSIDE LEVER UNTIL UNLOCKED
WITH KEY OR BY TURNING INSIDE LEVER.
VANDLGARD IS DESIGNED TO DISENGAGE
OUTSIDE SPINDLE FROM LATCH WHEN IN
LOCKED CONDITION.

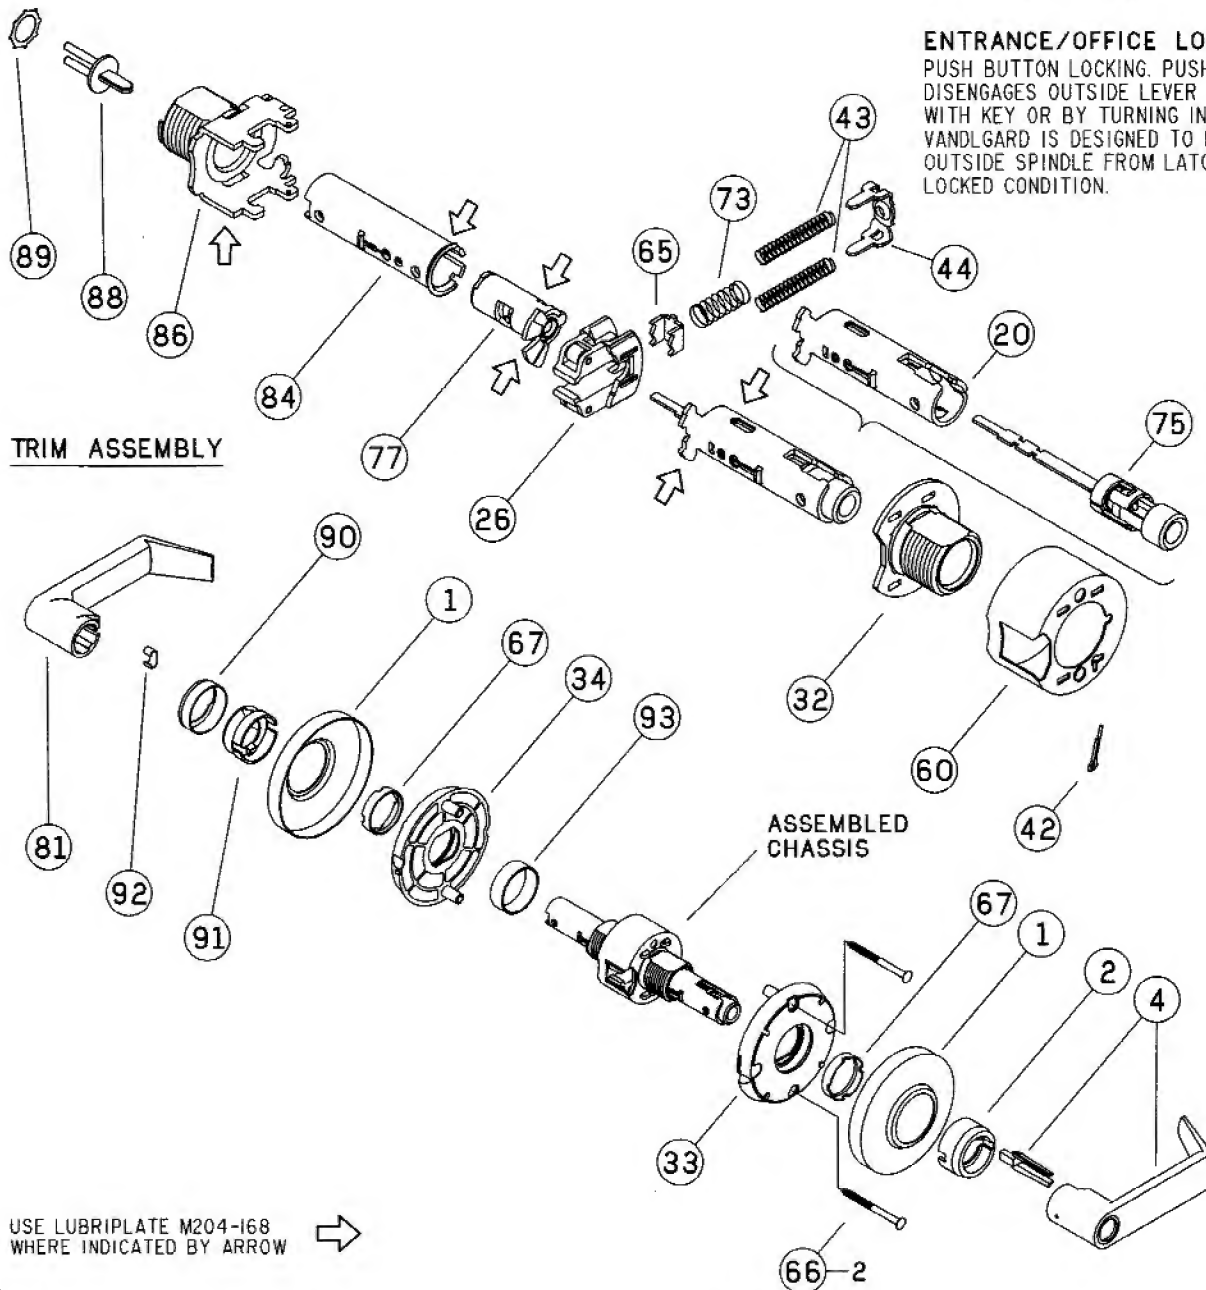


USE LUBRIPLATE M204-I68
WHERE INDICATED BY ARROW →

Notes: 1) For non-Vandlgard version of this function see D50BD.
2) See page 37 for plunger installation instructions.

D91PD VANDLGARD


CHASSIS ASSEMBLY

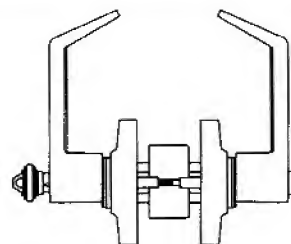

ENTRANCE/OFFICE LOCK

PUSH BUTTON LOCKING. PUSH BUTTON DISENGAGES OUTSIDE LEVER UNTIL UNLOCKED WITH KEY OR BY TURNING INSIDE LEVER. VANDLGARD IS DESIGNED TO DISENGAGE OUTSIDE SPINDLE FROM LATCH WHEN IN LOCKED CONDITION.

TRIM ASSEMBLY

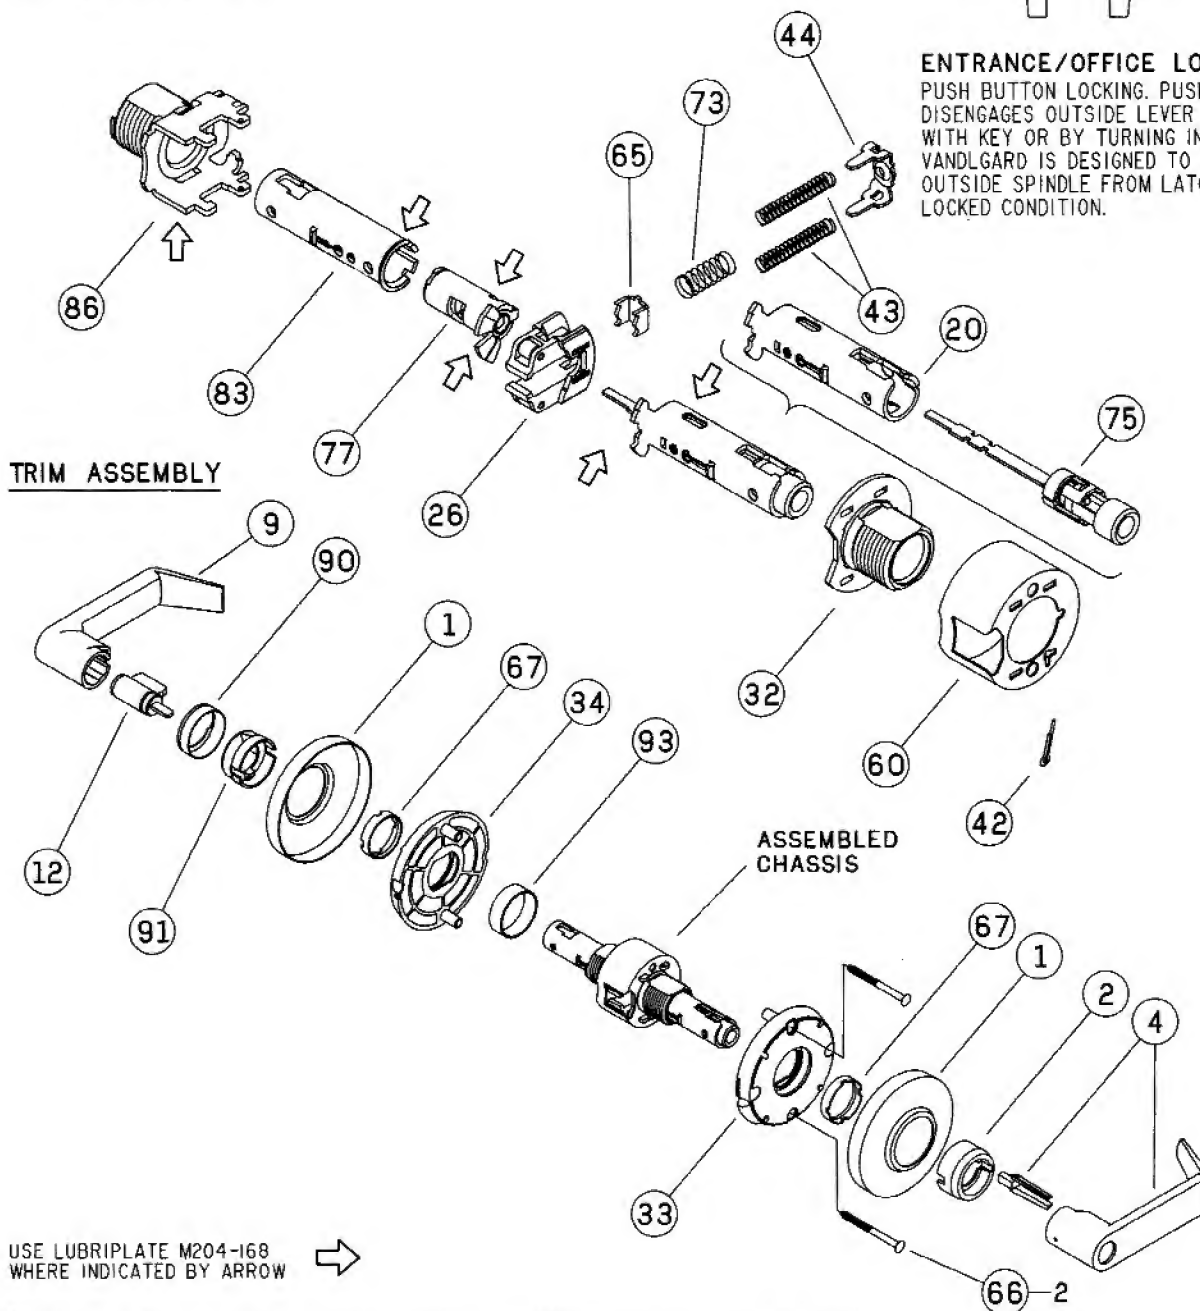


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW




Notes: 1) For non-Vandlgard version of this function see D50PD.
2) See page 37 for plunger installation instructions.

D92BD VANDLGARD

Designed to accept 6 or 7 pin Small
Format Interchangeable Cores manufactured
by Arrow, Best, Falcon and KSP.
FURNISHED LESS CORE.

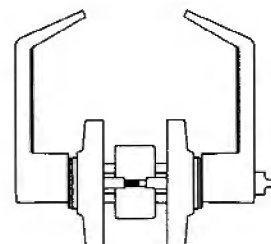


CHASSIS ASSEMBLY

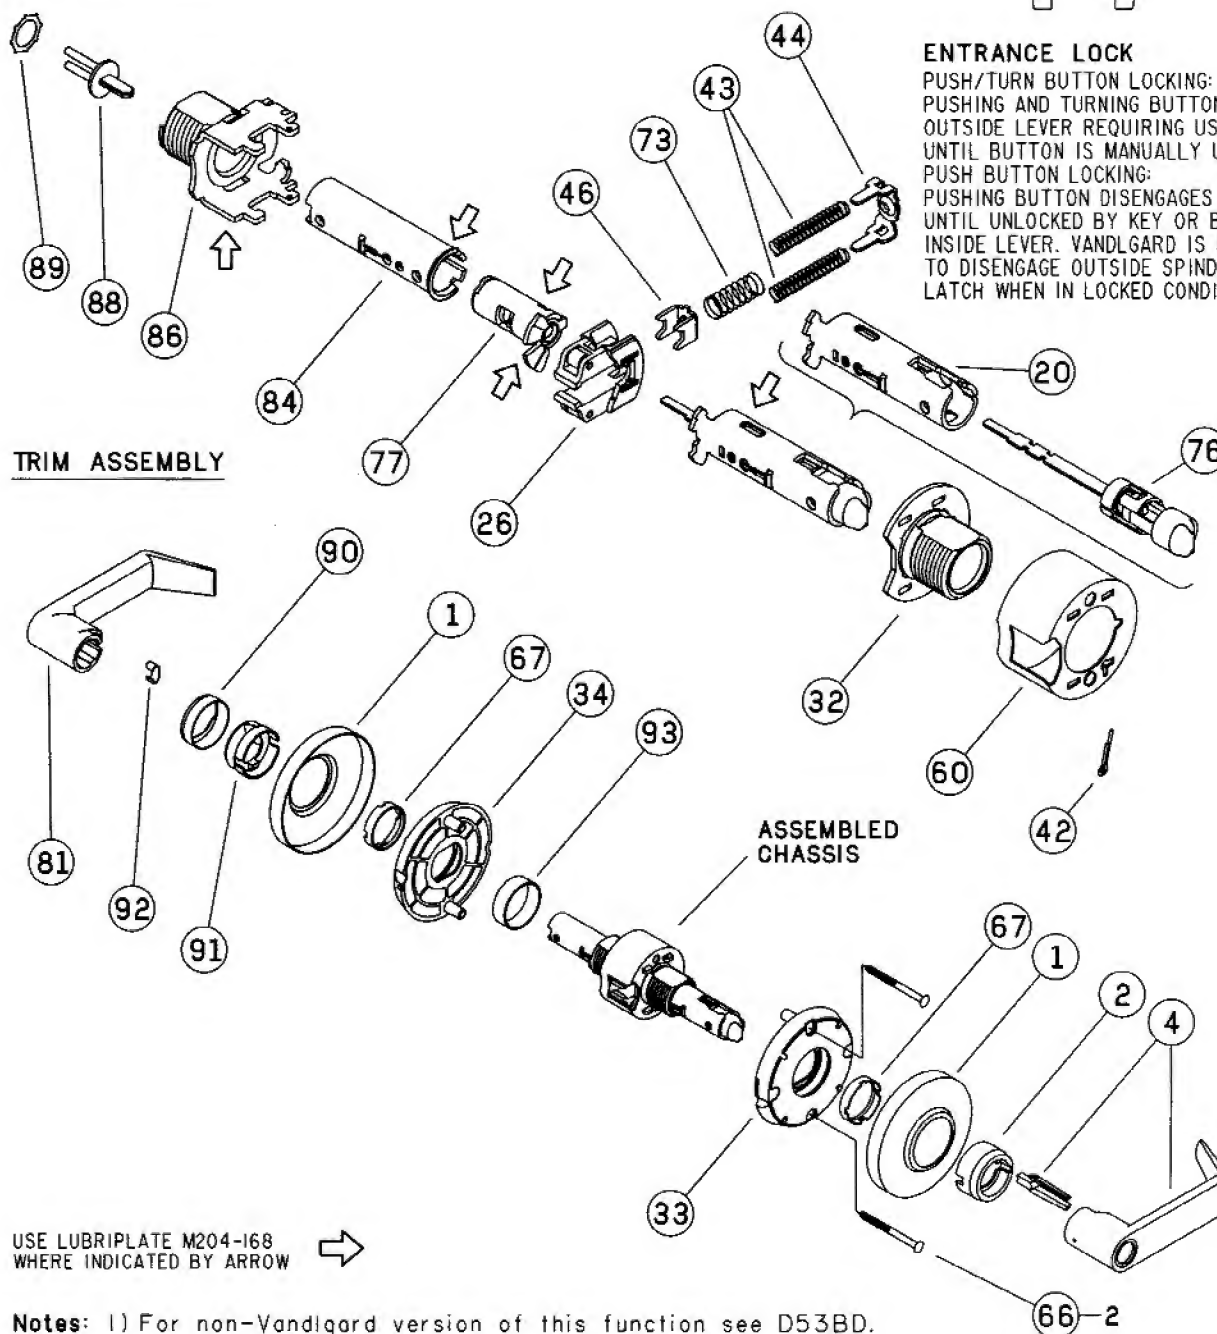

Notes: 1) For non-Vandlgard version of this function see D53BD.
2) See page 37 for plunger installation instructions.

D92PD VANDLGARD


CHASSIS ASSEMBLY

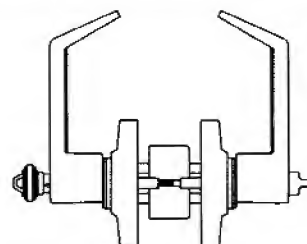

ENTRANCE LOCK

PUSH/TURN BUTTON LOCKING:
PUSHING AND TURNING BUTTON DISENGAGES
OUTSIDE LEVER REQUIRING USE OF KEY
UNTIL BUTTON IS MANUALLY UNLOCKED.
PUSH BUTTON LOCKING:
PUSHING BUTTON DISENGAGES OUTSIDE LEVER
UNTIL UNLOCKED BY KEY OR BY TURNING
INSIDE LEVER. VANDLGARD IS DESIGNED
TO DISENGAGE OUTSIDE SPINDLE FROM
LATCH WHEN IN LOCKED CONDITION.

TRIM ASSEMBLY

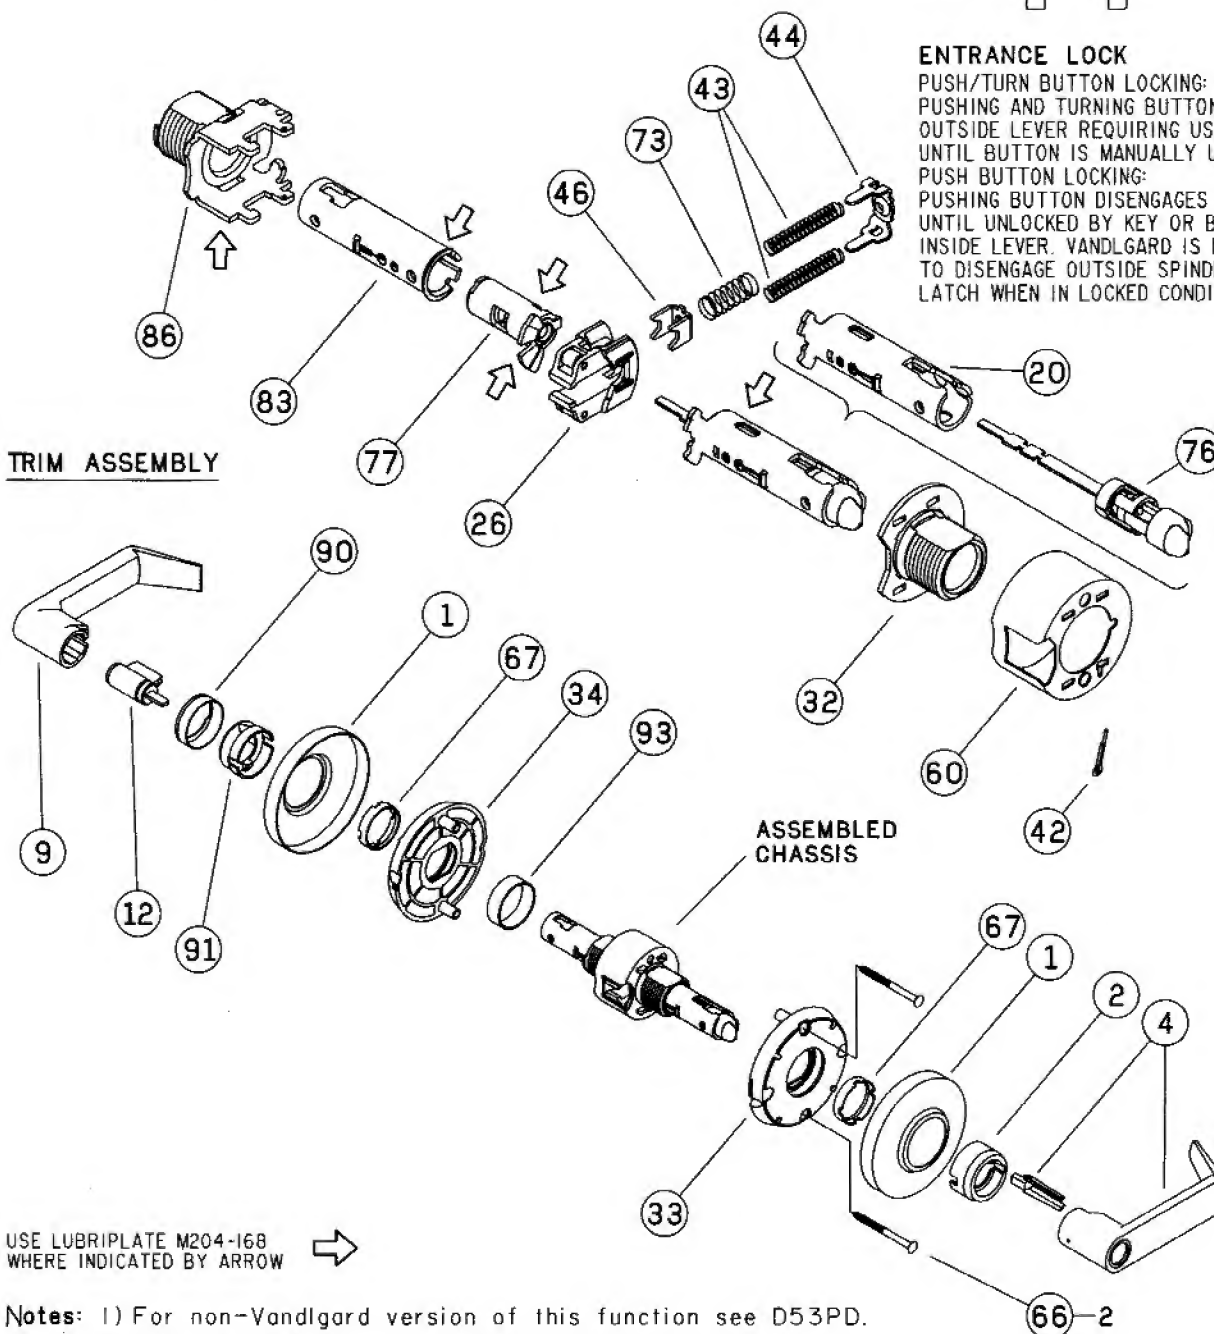


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW

Notes: 1) For non-Vandlgard version of this function see D53PD.
2) See page 37 for plunger installation instructions.

D94BD VANDLGARD


Designed to accept 6 or 7 pin Small
Format Interchangeable Cores manufactured
by Arrow, Best, Falcon and KSP.
FURNISHED LESS CORE.

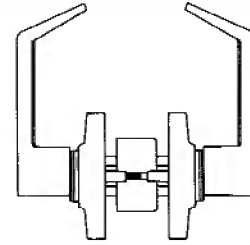

CHASSIS ASSEMBLY

CLASSROOM LOCK


OUTSIDE LEVER DISENGAGED AND UNLOCKED
BY KEY. INSIDE LEVER ALWAYS UNLOCKED.
VANDLGARD IS DESIGNED TO DISENGAGE
OUTSIDE SPINDLE FROM LATCH WHEN IN
LOCKED CONDITION.

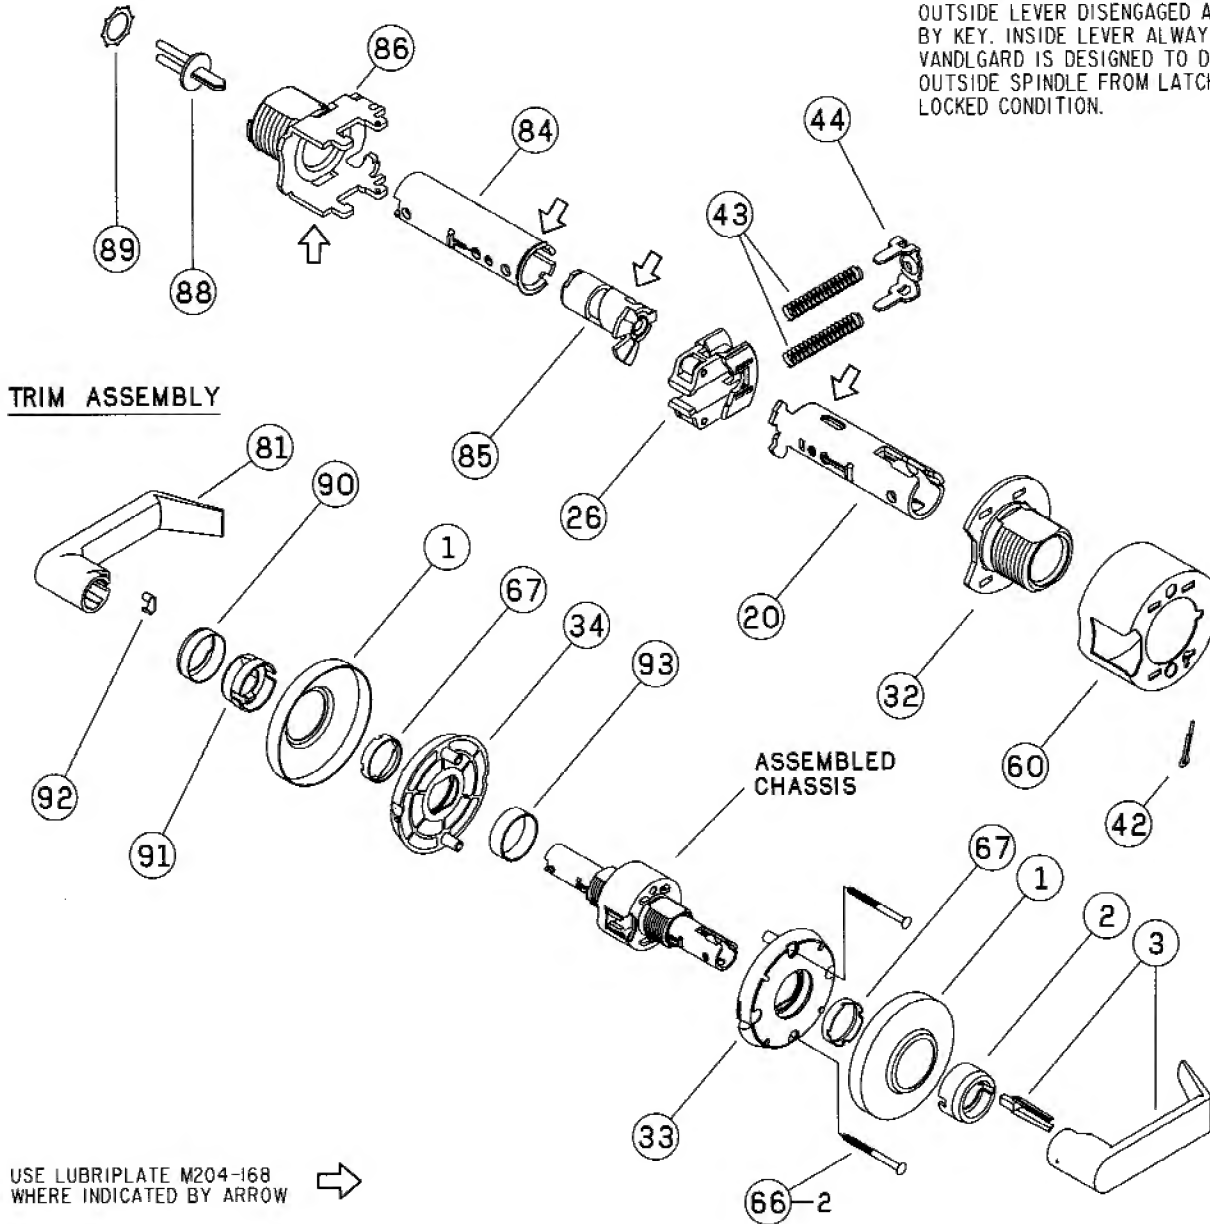

Note: For non-Vandlgard version of this function see D70BD.


D94PD VANDLGARD

CHASSIS ASSEMBLY

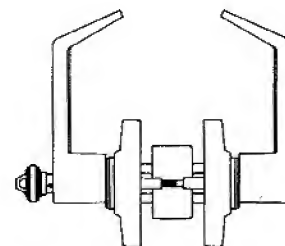

CLASSROOM LOCK

OUTSIDE LEVER DISENGAGED AND UNLOCKED BY KEY. INSIDE LEVER ALWAYS UNLOCKED. VANDLGARD IS DESIGNED TO DISENGAGE OUTSIDE SPINDLE FROM LATCH WHEN IN LOCKED CONDITION.

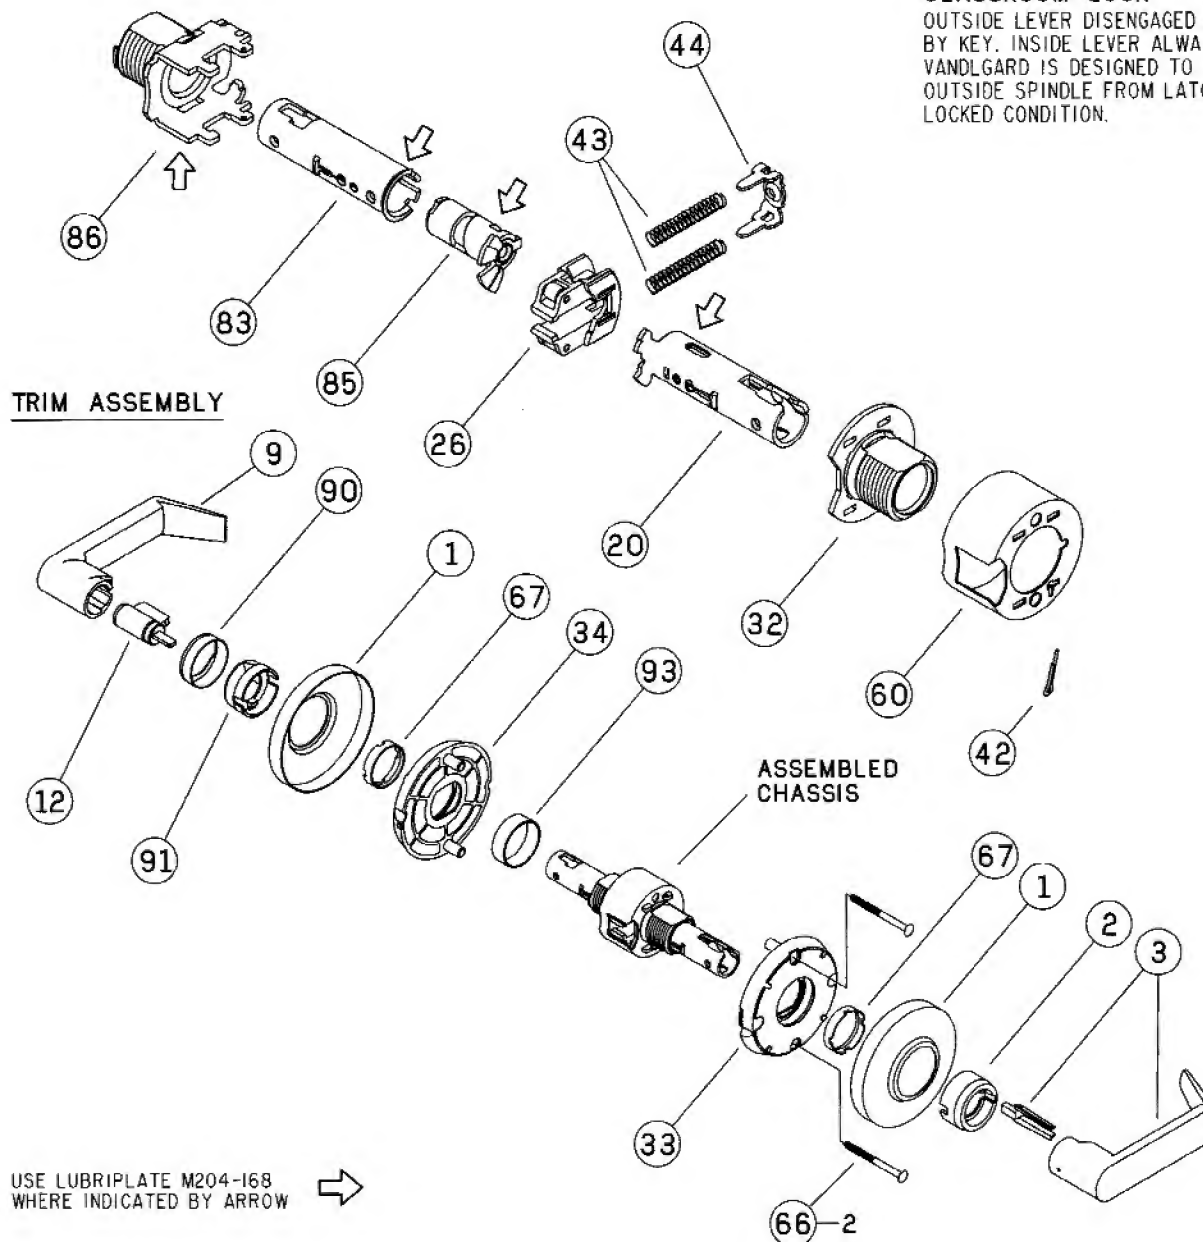


USE LUBRIPLATE M204-168
WHERE INDICATED BY ARROW



Note: For non-Vandlgard version of this function see D70PD.

D96BD VANDLGARD


Designed to accept 6 or 7 pin Small
Format Interchangeable Cores manufactured
by Arrow, Best, Falcon and KSP.
FURNISHED LESS CORE.

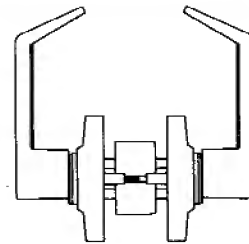


STOREROOM LOCK

OUTSIDE LEVER ALWAYS DISENGAGED.
ENTRANCE BY KEY ONLY. INSIDE LEVER
ALWAYS UNLOCKED. VANDLGARD IS
DESIGNED TO DISENGAGE OUTSIDE SPINDLE
FROM LATCH WHEN IN LOCKED CONDITION.

CHASSIS ASSEMBLY

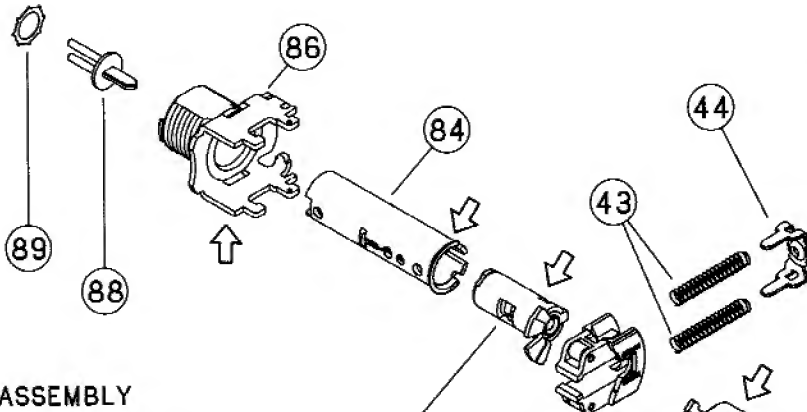

TRIM ASSEMBLY

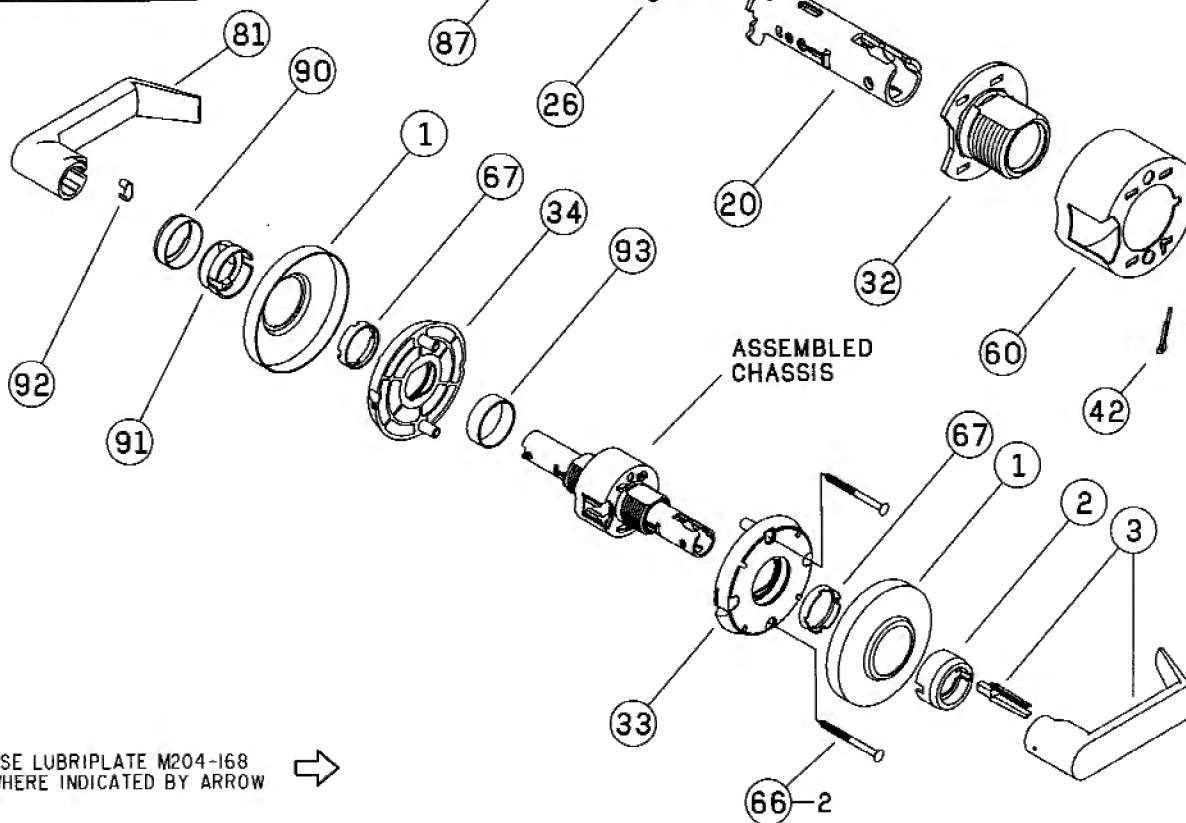


USE LUBRIPLATE M204-I68
WHERE INDICATED BY ARROW



Note: For non-Vandlgard version of this function see D80BD.

D96PD VANDLGARD


CHASSIS ASSEMBLY

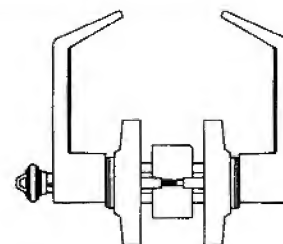

STOREROOM LOCK

OUTSIDE LEVER ALWAYS DISENGAGED.
ENTRANCE BY KEY ONLY. INSIDE LEVER
ALWAYS UNLOCKED. VANDLGARD IS
DESIGNED TO DISENGAGE OUTSIDE SPINDLE
FROM LATCH WHEN IN LOCKED CONDITION.

TRIM ASSEMBLY

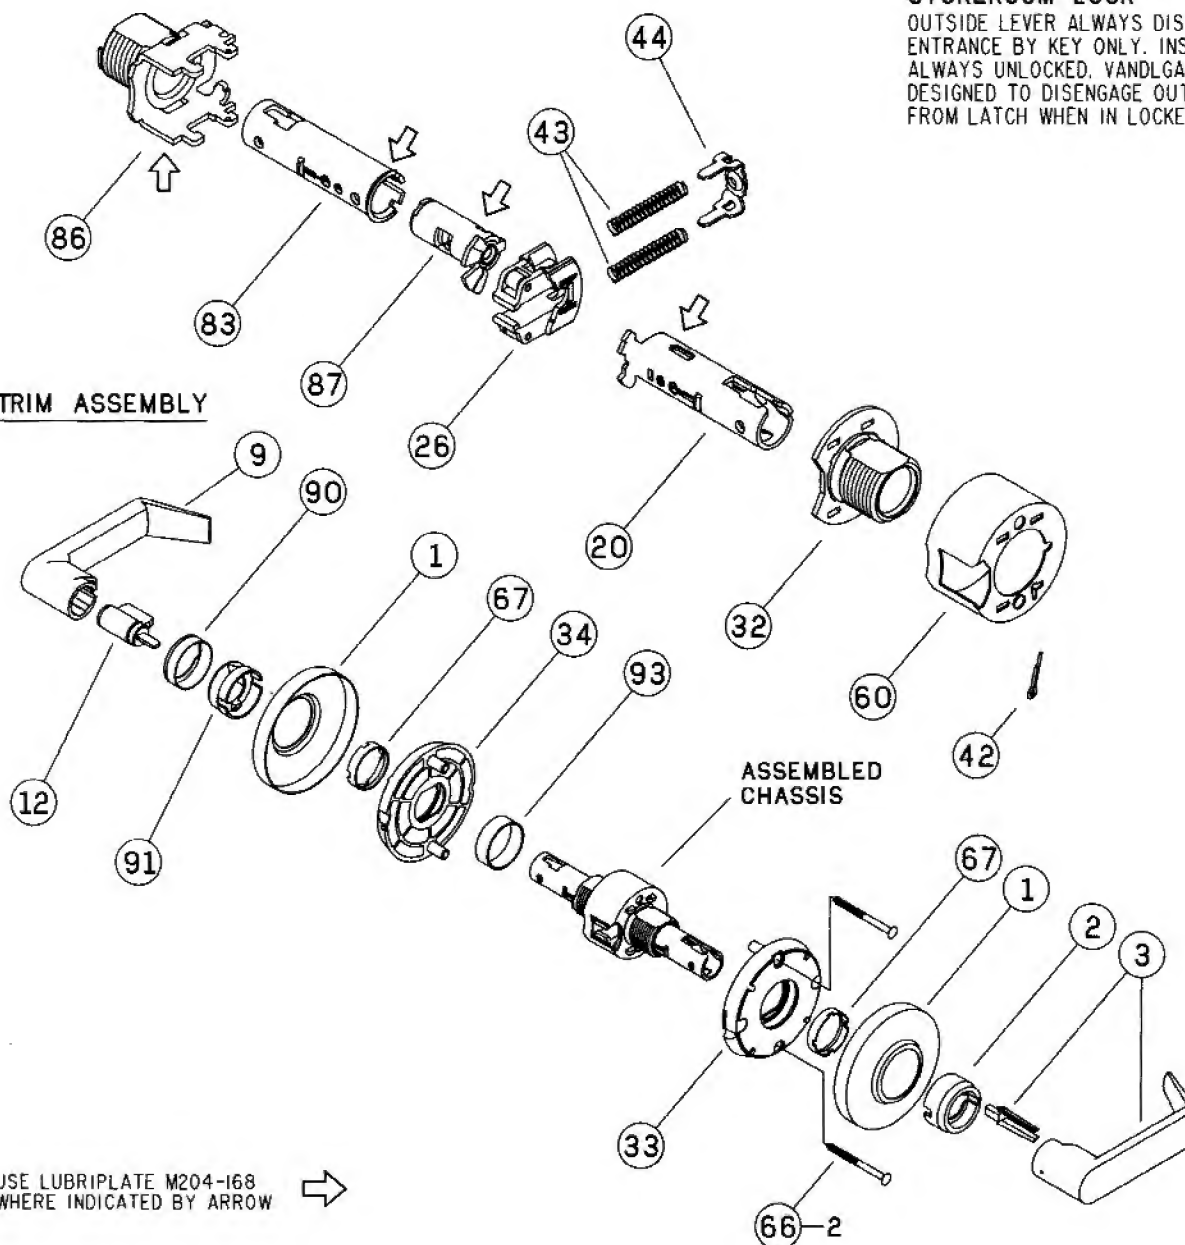


USE LUBRIPLATE M204-I68
WHERE INDICATED BY ARROW



Note: For non-Vandlgard version of this function see D80PD.


D170

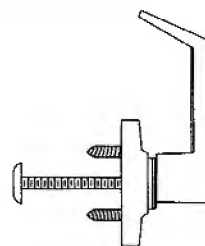

SINGLE DUMMY TRIM

DUMMY TRIM FOR ONE SIDE OF DOOR.
USED FOR DOOR PULL OR AS MATCHING
INACTIVE TRIM.

TRIM ASSEMBLY

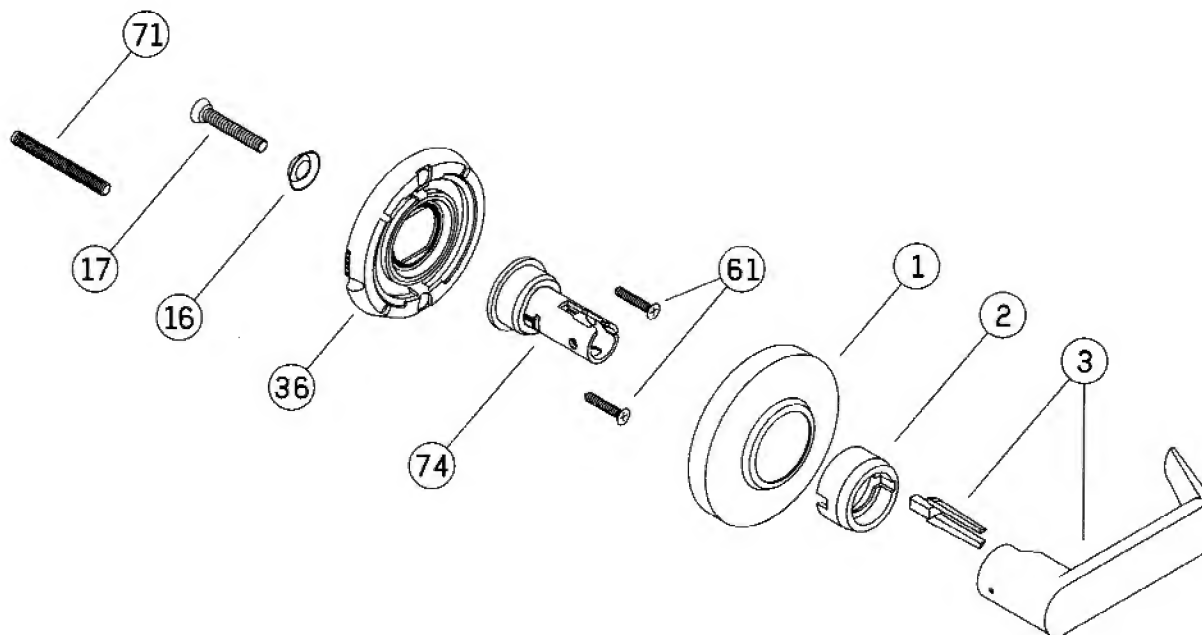


- Notes:** 1) Use threaded rod (71) when back to back mounting is required.
2) Door thickness for this function is 1 3/8" to 2".


PLUNGER INSTALLATION INSTRUCTIONS

To install plunger unit, insert into spindle and rotate it so tab on sleeve can be pried up as shown.




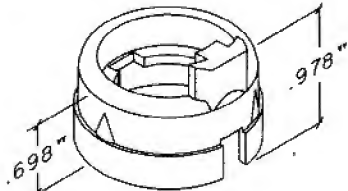
Caution: To allow lever engagement, do not pry up tab beyond outside of spindle.

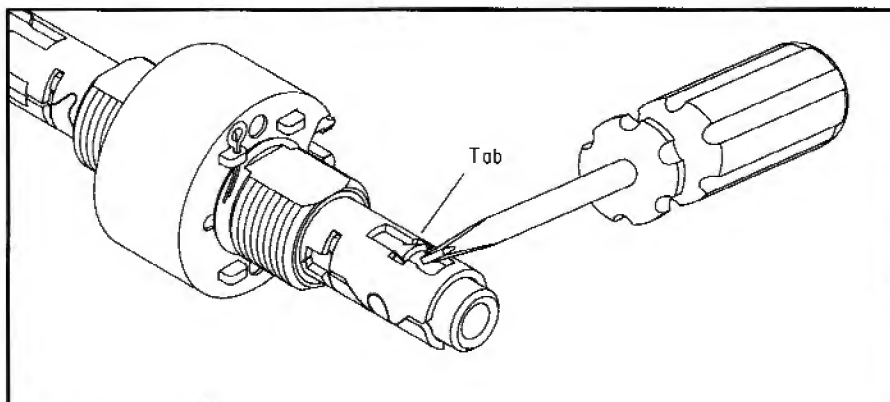

Plunger unit parts are assembled as shown.

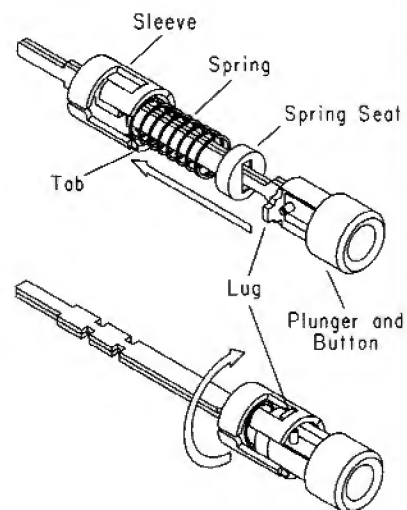


DRIVER COMPARISON CHART

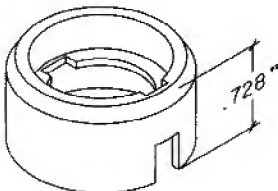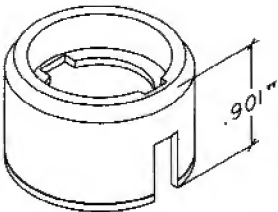Non-Vandgard Functions, Both Sides, 1 5/8" - 2" Doors (Standard) Vandgard Functions, Inside, 1 5/8" - 1 7/8" Doors (Standard)	Non-Vandgard Functions, Both Sides 1 3/8" Doors	Vandgard Functions, Outside 1 5/8" - 1 7/8" Doors (Standard)
 <p>C604-319 Driver Material: Brass or Bronze (Specify finish)</p>	 <p>C604-396 Extended Driver Material: Brass or Bronze (Specify finish)</p>	 <p>C607-011 Driver Cap Material: Brass or Bronze (Specify finish)</p>  <p>C607-012 Driver Material: Stainless Steel</p>


38-075 SPRING CAGE RETROFIT KIT

Order the 38-075 Spring Cage Retrofit Kit, contents shown below, when replacing Old-Style Spring Cages used in locks manufactured before October 1994.

When Replacing These Old Style Parts...

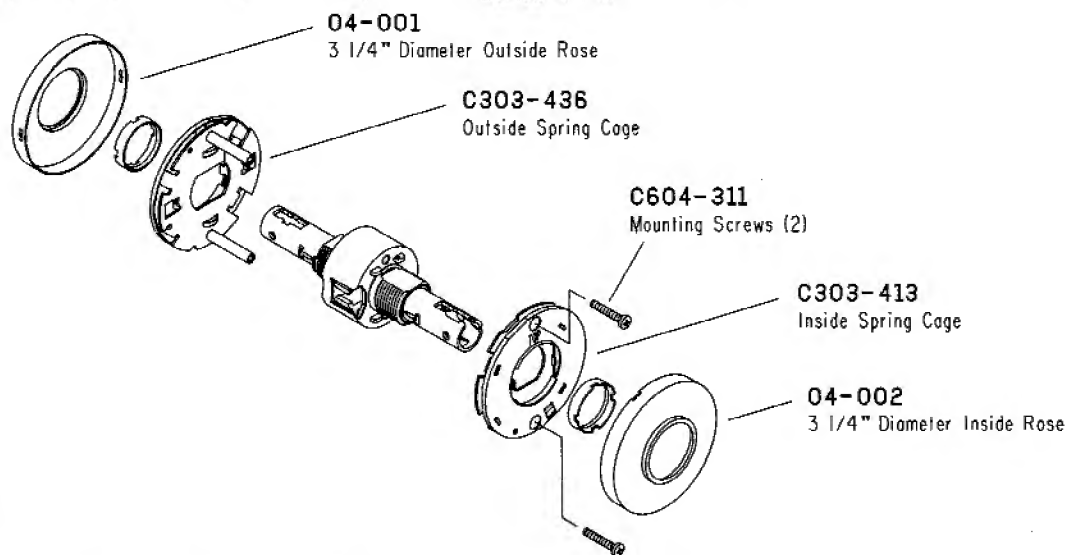

Order The 38-075 Spring Cage Retrofit Kit:

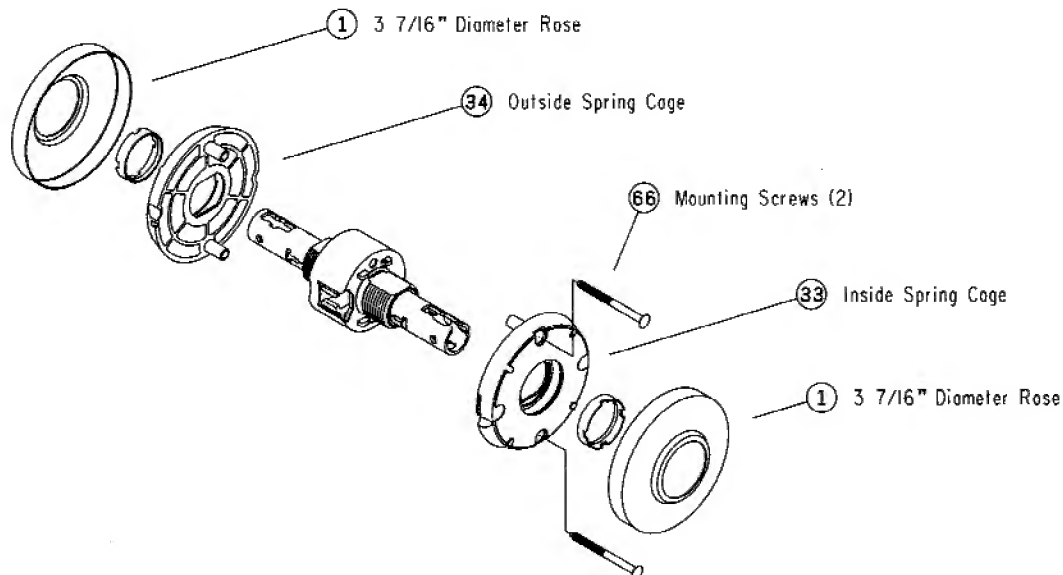

Note: Old-Style parts are discontinued and not available.

SYMBOL NUMBER	DESCRIPTION	D10S	D12D	D12DEL	D12DEU	D25D	D40S	D44S	D50BD	D50PD	D53BD	D53PD	D60PD	DR
① 04-060*	OUTSIDE & INSIDE ROSE	2	2	2	2	●	2	2	2	2	2	2	2	2
② C604-319	DRIVER, 1 5/8" TO 2" DOORS	2	2	2	2	●	2	2	2	2	2	2	2	2
C604-396	DRIVER, 1 3/8" DOORS	2	2	2	2	●	2	2	2	2	2	2	2	2
③ 04-006	CLOSED LEVER & INSERT	2	2	2	2	●								
④ 04-007**	OPEN LEVER & INSERT						2	2	●	2	●	2	2	2
⑤ 04-020	INSIDE PLUNGER UNIT						●	●						
⑥ 04-021	OUTSIDE PLUNGER UNIT						●							
⑦ 04-022	OUTSIDE PLUNGER UNIT							●						
⑧ 04-023	PLUNGER										●	●		
⑨ 04-047**	OPEN LEVER													
⑩ 04-025	INSIDE PLUNGER UNIT								●	●				
⑪ 04-026	INSIDE PLUNGER UNIT													
⑫ 23-013	CYLINDER									●		●	2	2
⑬ 23-014	CYLINDER													
⑭ 38-064	SOLENOID & RECTIFIER, EL			●										
⑮ 38-065	SOLENOID & RECTIFIER, EU				●									
⑯ A501-171	WASHER													
⑰ A501-746	SCREW													
⑱ C102-837	CAM & PLUG													
⑲ C102-840	CAM & PLUG						●	●			●	●	●	
⑳ C203-034	SPINDLE & CATCH	2	●			●	●	●	●	●	●	●		
㉑ C203-411	SPINDLE & SPRING													
㉒ C203-733	LOCKING PLUG													
㉓ C203-791	SPINDLE & CATCH												●	
㉔ C203-976	SPINDLE & CAM													
㉕ C203-988	SPINDLE & PLUG													
㉖ C303-006	SLIDE & ROLLERS	●	●	●	●	●	●	●	●	●	●	●	●	●
㉗ C303-047	PLUG								●	●				
㉘ C303-049	SPINDLE & RETURN									●				
㉙ C303-405	SPINDLE & PLUG													2
㉚ C303-407	SPINDLE & CATCH			●	●									
㉛ C303-410	OUTSIDE HUB & FRAME	●	●				●	●	●	●	●	●	●	●

* See page 38A if replacing parts from locks manufactured before October 1994.

** 04-007 = 04-047 + C604-330 Insert (see page 44).

D66PD	D70BD	D70PD	D73BD	D73PD	D80BD	D80PD	D80BDEL	D80PDEL	D80BDEU	D80PDEU	D82PD	D85PD	D91BD	D91PD	D92BD	D92PD	D94BD	D94PD	D96BD	D96PD	D170
2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	●
2	2	2	2	2	2	2	2	2	2	2	2	2	●	●	●	●	●	●	●	●	●
2	2	2	2	2	2	2	2	2	2	2	2	2									
	●	●			●	●	●	●	●	●							●	●	●	●	●
2		●	●	2		●		●		●	2	2	●	●	●	●					
			●	●										●		●		●		●	
2		●		●		●		●		●	2		●		●		●		●		
												●									
							●	●													
									●	●											
																					●
																					●
			●	●																	
	●	●	●	●	●	●							●	●	●	●	●	●	●	●	
													●								
		●																			
		●																			
		●																			
		●																			
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
2																					
							●	●	●	●											
●	●	●	●	●	●	●					●	●									

SYMBOL NUMBER	DESCRIPTION	D10S	D12D	D12DEL	D12DEU	D25D	D40S	D44S	D50BD	D50PD	D53BD	D53PD	D60PD	D66PD
32	C303-411 INSIDE HUB & FLANGE	●	●	●	●	●	●	●	●	●	●	●	●	●
33	C303-035 * INSIDE SPRING CAGE	●	●	●	●	●	●	●	●	●	●	●	●	●
34	C303-036 * OUTSIDE SPRING CAGE	●	●	●	●	●	●	●	●	●	●	●	●	●
35	C303-418 SPINDLE & CATCH										●	●		
36	C604-400 HOUSING													
37	C303-424 SPINDLE & CAM											●		
38	C303-427 SPINDLE & HAMMER													
39	C303-430 CAM & PLUG		●											
40	C303-432 HUB & FRAME			●	●									
41	C303-434 HUB & FRAME				●									
42	C503-008 COTTER PIN	●	●	●	●	●	●	●	●	●	●	●	●	●
43	C503-019 SLIDE SPRING	2	2	2	2	2	2	2	2	2	2	2	2	2
44	C503-314 SPRING SEAT	●	●	●	●	●	●	●	●	●	●	●	●	●
45	C604-187 SLIDE CATCH					●	●							
46	C604-188 SLIDE CATCH									●	●			
47	C503-324 SPINDLE WASHER											●		
48	C503-331 STOP SPRING		●	●	●									
49	C503-334 HAMMER													
50	C503-335 HAMMER SPRING													
51	C503-359 KEY CAM											●		
52	C503-360 CAM RIDER											●		
53	C503-361 PIN											●		
54	C503-362 PLUNGER											●		
55	C503-368 KEY CAM													
56	C503-371 PLUNGER												●	
57	C503-400 PIN													
58	C604-402 OUTSIDE ROSE				●									
59	C503-965 PLUNGER SLEEVE					●	●							
60	C603-500 HOUSING	●	●	●	●	●	●	●	●	●	●	●	●	●
61	L583-133 SCREW													
62	C604-204 SPINDLE			●	●									

* See page 38A if replacing parts from locks manufactured before October 1994.

39

SYMBOL NUMBER	DESCRIPTION	D10S	D12D	D12DEL	D12DEU	D25D	D40S	D44S	D50BD	D50PD	D53BD	D53PD	DF-
63 C604-205	SOLENOID RETAINING CLIP			●	●								
64 C604-273	PIN				●								
65 C604-190	SLIDE CATCH								●	●			
66 C604-395*	MOUNTING SCREW	2	2	2	2		2	2	2	2	2	2	2
67 C604-354	CASTLE NUT	2	2	2	2	●	2	2	2	2	2	2	2
68 C203-947	SPINDLE & CATCH		●	●	●		●	●					
69 C604-341	LOCKING PLUG												
70 C604-347	PIN												
71 A501-167	THREADED ROD												
72 C604-203	STOP		●	●	●								
73 C604-191**	SLIDE CATCH SPRING						●	●	●	●	●	●	
74 C303-020	SPINDLE & HUB												
75 04-091	INSIDE PLUNGER UNIT												
76 04-092	INSIDE PLUNGER UNIT												
77 C207-001	CAM & PLUG												
78 C303-448	SPINDLE & CATCH										●		
79 C303-451	SPINDLE & PLUG												
80 C303-452	SPINDLE & RETURN								●				
81 C303-459***	SFIC LEVER												
82 C303-460***	SFIC LEVER & INSERT								●		●		
83 C307-001	SPINDLE & CATCH												
84 C307-002	SPINDLE & CATCH												
85 C307-004	CAM & PLUG												
86 C307-005	HUB & FRAME												
87 C307-008	KEY SPINDLE												
88 C604-381	SFIC DRIVER								●		●		
89 C604-383	SFIC RETAINER								●		●		
90 C607-011	DRIVER CAP												
91 C607-012	OUTSIDE DRIVER												
92 C607-014	LEVER INSERT												
93 C607-020	1 3/4" DOOR SPACER	●	●	●	●		●	●	●	●	●	●	●

* See page 38A if replacing parts from locks manufactured before October 1994.

** See page 41 if replacing cone shaped slide catch springs from locks manufactured before May 1993.

*** C303-460 = C303-459 + C604-380 Insert (see page 44).

[illegible]

SLIDE CATCH SPRING REPLACEMENT PARTS

Order replacement parts shown below when replacing Old-Style G505-747 Slide Catch Springs used in locks manufactured before May 1993.

G505-747



Old-Style Slide
Catch Spring

Function	Replacement Parts	When Replacing These Old-Style Parts...		
D40 D44 D73 D85		C303-009 Slide & Rollers	C503-315 Slide Catch	G505-747 Slide Catch Spring
		Order These Replacement Parts:		
		C303-006 Slide & Rollers		
		C604-187 Slide Catch	C604-187 Slide Catch	C604-187 Slide Catch
D50		C303-009 Slide & Rollers	C604-256 Slide Catch	G505-747 Slide Catch Spring
		Order These Replacement Parts:		
		C303-006 Slide & Rollers	C303-006 Slide & Rollers	C303-006 Slide & Rollers
		C604-190 Slide Catch	C604-190 Slide Catch	C604-190 Slide Catch
D53		C303-009 Slide & Rollers	C503-316 Slide Catch	G505-747 Slide Catch Spring
		Order These Replacement Parts:		
		C303-006 Slide & Rollers	C303-006 Slide & Rollers	C303-006 Slide & Rollers
		C604-188 Slide Catch	C604-188 Slide Catch	C604-188 Slide Catch
D50		C604-191 Slide Catch Spring	C604-191 Slide Catch Spring	C604-191 Slide Catch Spring
		C604-191 Slide Catch Spring	C604-191 Slide Catch Spring	C604-191 Slide Catch Spring
		C604-191 Slide Catch Spring	C604-191 Slide Catch Spring	C604-191 Slide Catch Spring
		C604-191 Slide Catch Spring	C604-191 Slide Catch Spring	C604-191 Slide Catch Spring

Note: Old-Style parts are discontinued and not available.

CYLINDER UNITS AND PARTS

Schlage locks are provided with cylinder units precision built to extremely close tolerances and the highest standards of accuracy. Phosphor bronze springs, nickel silver keys and pins are used throughout the Schlage offering. The best combination of materials is used to ensure the manufacture of cylinders with ease of operation and long wear. To order single cylinder locks less cylinder units, change product suffix letter "P" to "L". Example: D53LD. To order double cylinder locks less cylinder units (locks will be furnished with temporary plastic cylinders to preserve timing), change product suffix letter "P" to "C". Example: D60CD. Primus® cylinders available when key control and physical security are important concerns.


CYLINDER UNITS

Standard Cylinders	Primus Cylinders		Description	Design
	High Security	Controlled Access		
23-013	20-550	20-750	6 Pin unit	ATH, RH0, SPA
23-014	Not Available		6 Pin indicator unit (D85)	


CYLINDER PARTS (Drawings are on page 43)

Symbol	Number	Description
A	33-006	Cylinder plug, 6 pin
B	33-216	Cylinder plug, indicator, 6 pin
C	34-101 thru 103	#1 thru #3 Top pin
D	34-202 thru 209	#2 thru #9 Master pin
E	34-300 thru 309	#0 thru #9 Bottom pin
F	A201-849	Body, 6 pin
G	C603-524	Bar & driver for 23-013
H	C604-348	Bar for 23-014
I	C503-113	Tumbler spring
J	C503-115	Retainer cap spring
K	C503-116	Retainer cap pin
L	C503-118	Retainer cap
M	C503-767	Driver for 23-014
N	C603-195	Obstruction pin for 23-014
O	C604-144	Indicator pin spring for 23-014
P	C604-371	Indicator pin for 23-014


Note: Use only flaked graphite for cylinder lubrication. Under no circumstance should any other type of material be introduced into the cylinder.

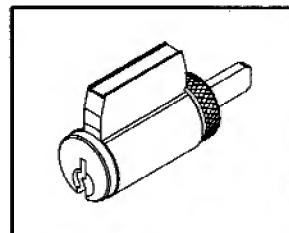


23-013
Standard Cylinder

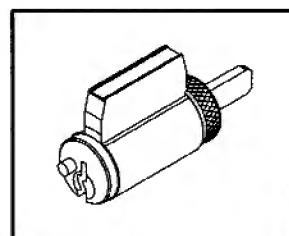


23-014
Hotel Function
Indicator Cylinder

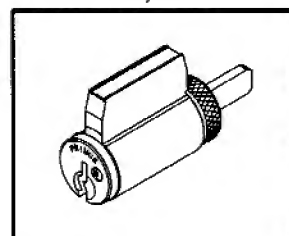

20-550
Primus High Security
U.L.437 Listed

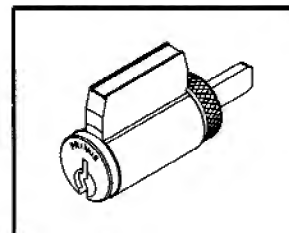


20-750
Primus Controlled Access

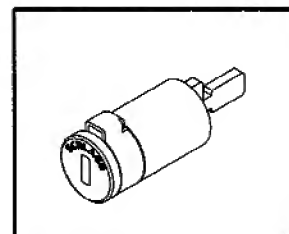


21-027
Temporary Plastic Cylinder

STANDARD CYLINDER

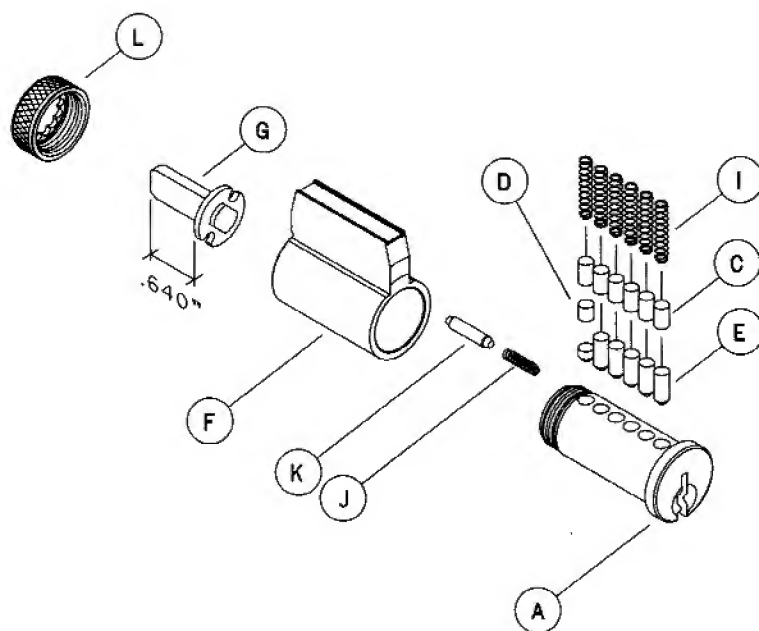

HOTEL FUNCTION INDICATOR CYLINDER

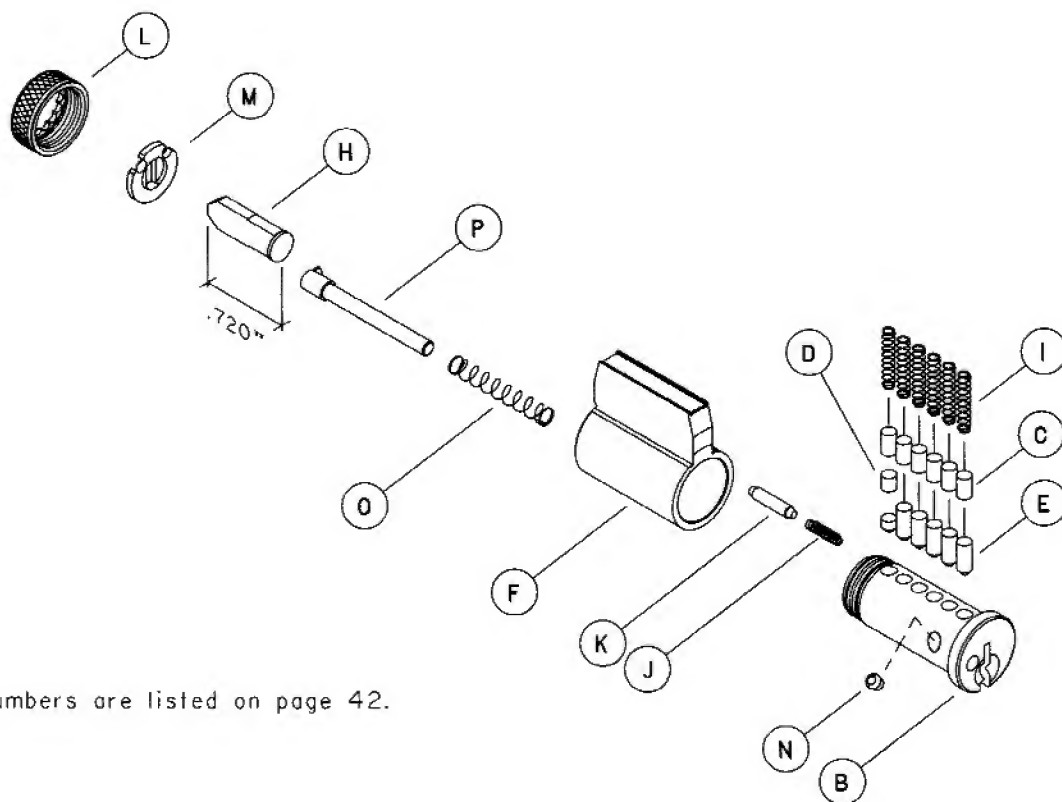


Note: Part numbers are listed on page 42.


LEVER DESIGNS AND LEVER INSERTS

Order by design code shown in parenthesis ().


Closed Levers

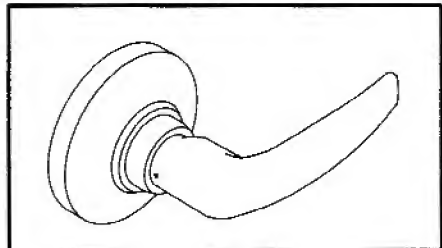

Athens (ATH)

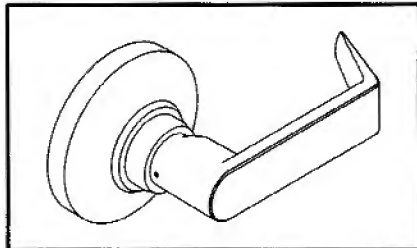


Rhodes (RHO)

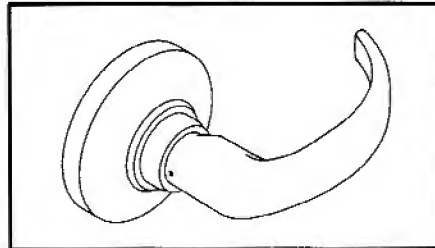


Sparta (SPA)


Open Levers For Plunger Units and Cylinders - "CD", "LD", "PD" Suffixes

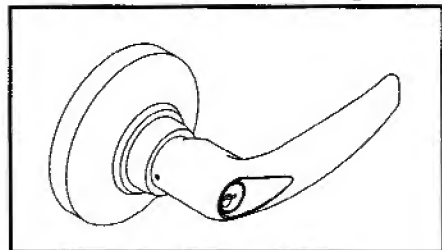

Athens (ATH)

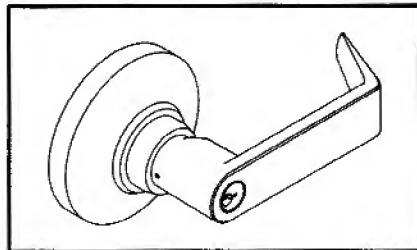


Rhodes (RHO)

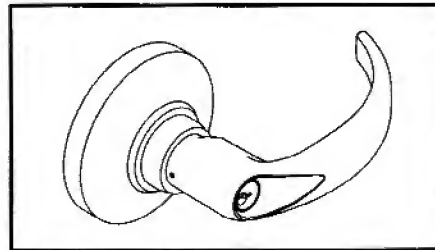


Sparta (SPA)

Small Format Interchangeable Core Lever - "BD" Suffix

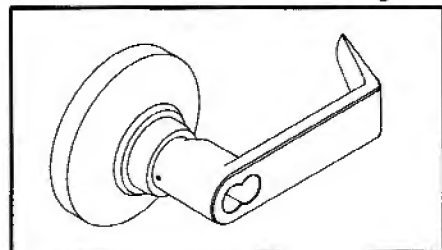


Rhodes (RHO)

Lever Inserts

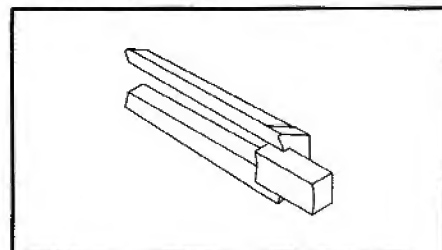

C604-330

For closed and open levers. Not used on outside of Vandgard functions.

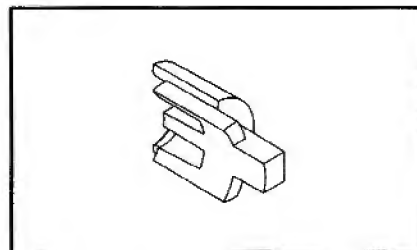


C604-380

For Small Format Interchangeable Core Levers. Not used on Vandgard functions.


INTERCHANGEABLE CORE LEVER DESIGNS AND LEVER INSERTS

Order by design code shown in parenthesis ().


Interchangeable Core Levers - "JD", "RD", "TD" Suffixes

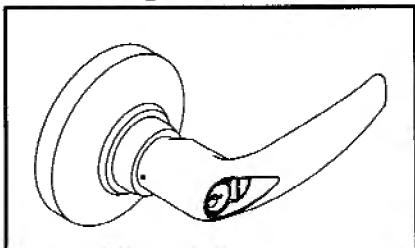

Athens (ATH)

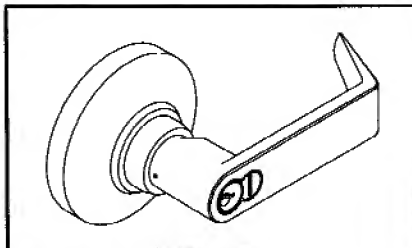

Rhodes (RHO)

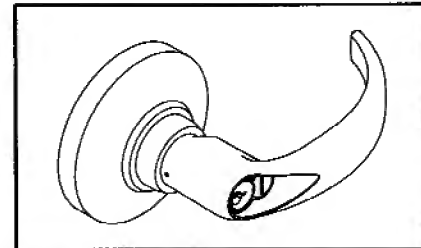

Sparta (SPA)

Interchangeable Core Lever Inserts

Manufactured Before 1998 (Black Plastic Filler In Back Of Lever)	
Non-Vandlgard Functions	Vandlgard Functions

Note: Interchangeable core levers manufactured before 1998 are discontinued and not available.


Manufactured Since 1998 (Solid Die Cast Lever)	
Non-Vandlgard Functions	Vandlgard Functions

Note: Interchangeable core lever inserts manufactured since 1998 are not compatible with interchangeable core levers manufactured before 1998.


INTERCHANGEABLE CORES AND PARTS

Available for all D-Series keyed functions, except Hotel/Motel function D85, as complete locks or in retrofit kits. Existing installations can be retrofit without removing lock from door. To order locks with interchangeable cores, change product suffix letter "P" to "R". Example: D53RD. To order locks less interchangeable cores, change product suffix letter "P" to "J". Example: D53JD. Primus® cores are available when key control and physical security are important concerns.


INTERCHANGEABLE CORES

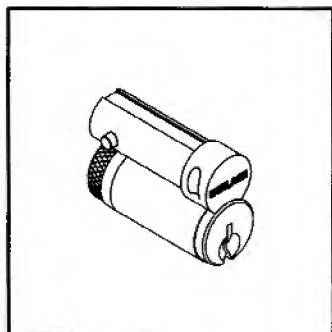


23-030
Interchangeable Core w/logo

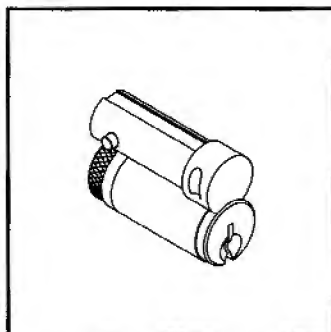

23-031
Interchangeable Core w/o logo

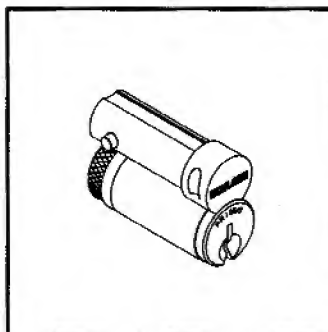


20-740
Primus Interchangeable Core,
w/logo, Controlled Access

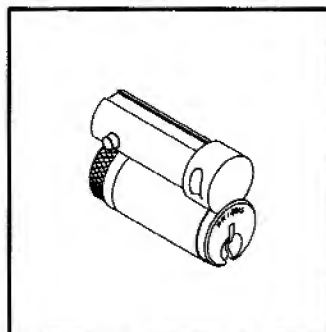


20-741
Primus Interchangeable Core,
w/o logo, Controlled Access

INTERCHANGEABLE CORE ACCESSORY AND SERVICE PARTS

Number	Description
04-030	Lever & lever insert, driver, retainer, all functions
04-033	Driver and retainer
04-034	Lever & lever insert, core, driver, retainer, all functions
04-039	Lever & lever insert, non-Vandgard functions
04-048	Lever, Vandgard functions
C603-569	Retainer
C604-333	Driver
C604-416	Lever insert, non-Vandgard functions
M504-142	Installation tool

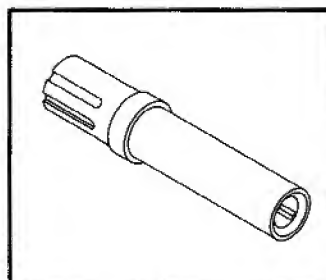


M504-142 Installation Tool
Order as needed per project.

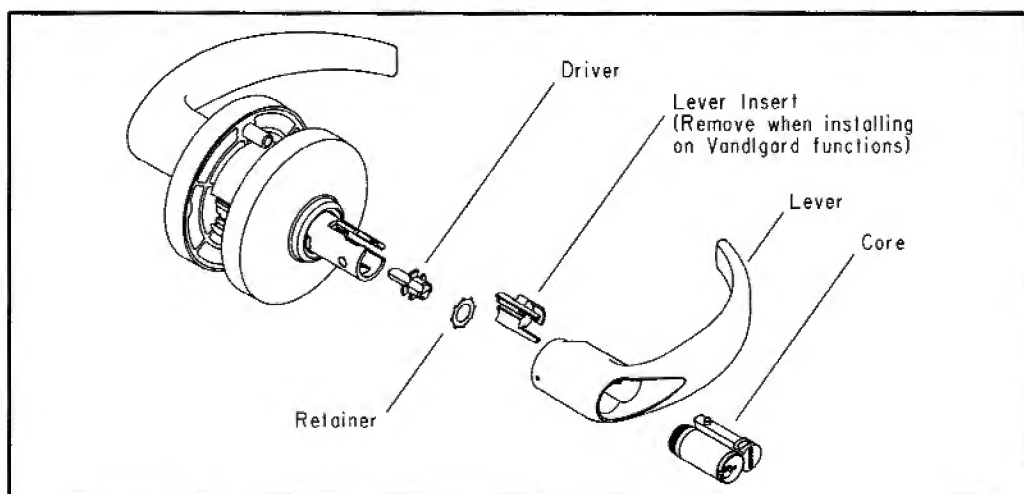

04-034 Retrofit Kit (See page 57 for retrofit kit instructions)

INTERCHANGEABLE CORE

To remove interchangeable core, insert control key and turn 15° to the right until action stops. Pulling on key will extract core from the lever. To install a new core, insert control key and and push core into housing, rotate key 15° to the right and insert core completely. Rotate key back to original position and remove control key.

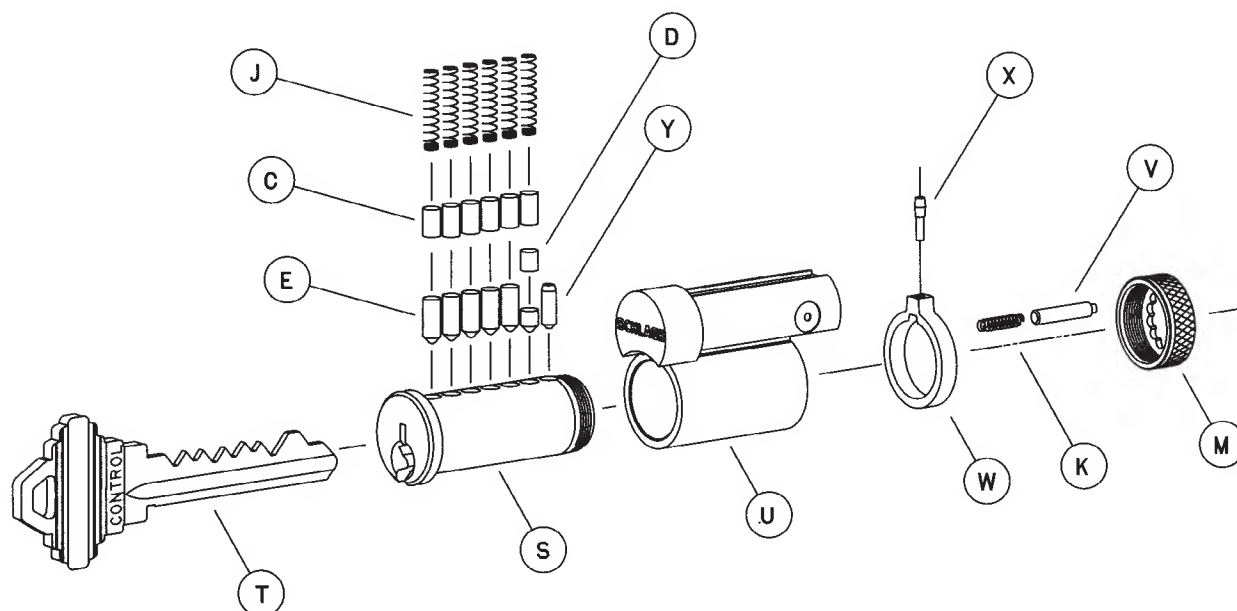

INTERCHANGEABLE CORE PARTS

Symbol	Number	Description
C	34-101 thru 103	#1 thru #3 Top pin
D	34-202 thru 209	#2 thru #9 Master pin
E	34-300 thru 309	#0 thru #9 Bottom pin
J	C503-113	Tumbler spring
K	C503-115	Retainer cap spring, for cores made before November 1997
M	C503-118	Retainer cap
S *	33-058	Plug, interchangeable core
T	35-056	Control key, blank
	48-056	Control key, cut
U *	B220-282	Interchangeable core body, w/logo
	B220-283	Interchangeable core body, w/o logo
V	C603-347	Retainer cap pin, for cores made before November 1997
W *	C603-956	Actuating ring
X *	C603-964	Actuating pin
Y *	C603-967	Control pin

* Parts not compatible with 23-020 cores manufactured before 1991.


Notes: 1) Assembly drawing shown is for cores made between 1991 and November 1997. Interchangeable core plugs made after November 1997 are factory assembled with retainer cap springs and retainer cap pins, and are compatible with cores made after 1991.

2) Use only flaked graphite for cylinder lubrication. Under no circumstance should any other type of material be introduced into the cylinder.


LATCHES

All D-Series latches have 1" diameter housings and adjustable faceplates for flat or beveled doors.


Square Corner Latches

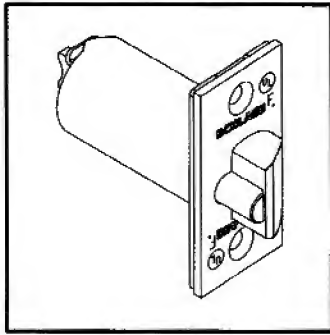

Deadlatch

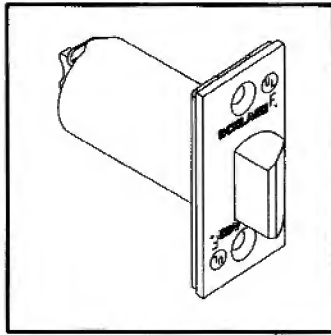

Springlatch

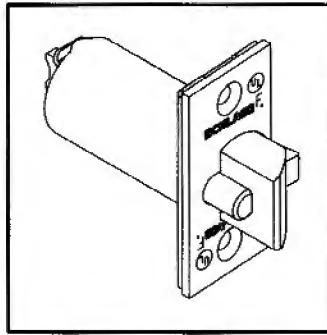


Fire Door Deadlatch

Latches

Backset	Faceplate Description	Deadlatch 1/2" Throw	Springlatch 1/2" Throw	Fire Door Deadlatch 3/4" Throw
2 3/8"	1" x 2 1/4", Square corner	14-048	—	—
	1 1/8" x 2 1/4", Square corner	14-047	—	—
2 3/4"	1 1/8" x 2 1/4", Square corner	14-019	14-001	14-042
3 3/4"	1 1/8" x 2 1/4", Square corner	14-028	14-010	—
—	Rabbeted latch and strike kit	39-030		

Note: Standard latches are in bold print.


This kit adapts square corner latches and 2 3/4" high strikes for 1/2" rabbeted door and frame preparations. Latches and strikes not included.

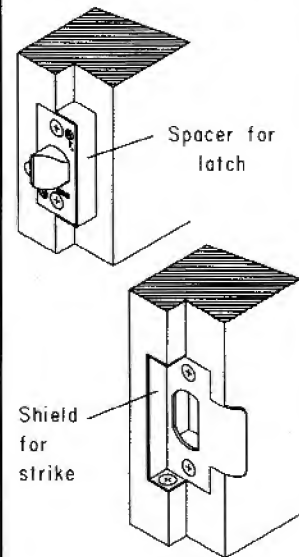

39-030


Rabbeted Latch and Strike Kit

STRIKES

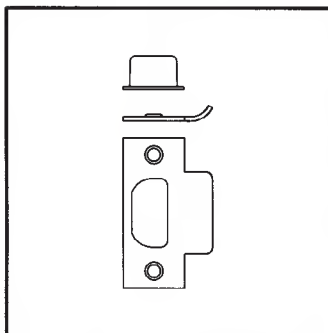


10-013

Square Corner
Size: 1 1/8" x 2 3/4" x 3/32"
Lip Length: 1 1/8", 1 1/2".
Includes C603-623 strike box.

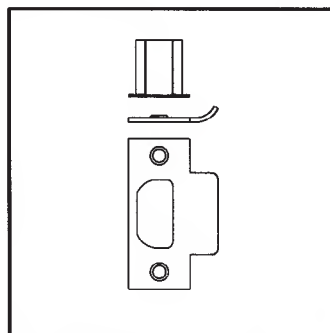


10-016

Square Corner Fire Door Latch
Size: 1 1/8" x 2 3/4" x 3/32"
Lip Length: 1 1/8", 1 1/2".
Includes B502-853 strike box.

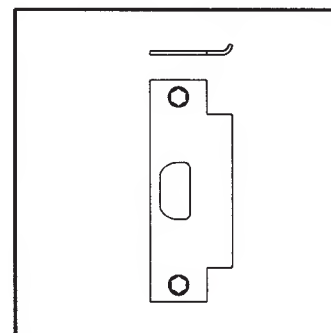


10-025 (Standard)

ANSI Prep. A115.2
Size: 1 1/4" x 4 7/8" x 3/32"
Lip Length: 1 3/16" (Std), 1 3/8"
If required, K510-066 strike box must be ordered separately.

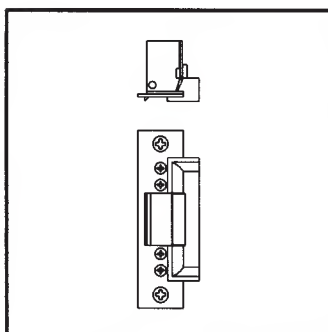

10-042

Electric Strike
Size: 1 1/4" x 4 7/8" x 3/32"
Voltage: 24VAC, 12VDC
Not designed for continuous
duty and electrical locking.

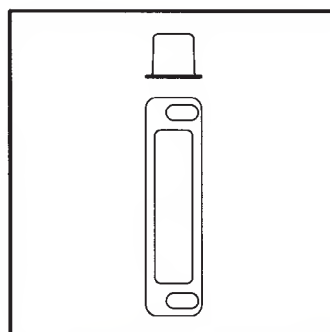

K510-066

ANSI Strike Box

Optional Tamper Resistant Torx Screw Packs


Number	Description
C203-311	(4) Latch and Strike Screws, #8-32 x 1/2" (T-15)
C203-312	(2) Latch Screws, #8-32 x 1/2" (T-15) (2) ANSI Strike Screws, #12-24 x 1/2" (T-20)

Torx Tools

Number	Description
M504-425	T-15 Torx Tool
M504-426	T-20 Torx Tool


INSTALLATION TOOLS AND KITS

Boring jigs and tools are designed to provide fast and accurate lock installation. Complete kits, contained in a heavy gage metal box, or individual tools can be ordered for preparing doors and jambs for Schlage products.

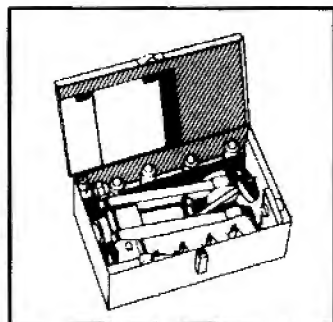

40-055

Installation Kit
For A, AL, D, S and F-Series Locks. Adjustable for 2 3/8", 2 3/4" and 5" backsets. Removable bushing adaptor for 7/8" latch hole. The boring jig integrates thru bolt hole locations for AL and D-Series levers. For door thickness 1 3/8" to 2 1/8".

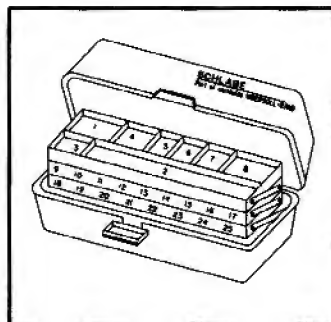


40-069

Maintenance Kit
Designed for D-Series Lever Locks. Contains plunger sleeves, screw packs in various finishes, slide catches, and other service parts partially listed below.


Number	Description
40-056	Boring Jig
40-015	7/8" Boring Bit
40-018	1" Boring Bit
40-024	2 1/8" Boring Bit
40-029	Strike Marking Chisel, Full Lip
40-030	Strike Marking Chisel
40-031	Latch Marking Chisel, A,F,H
40-032	Latch Marking Chisel, B,D,H
40-035	Strike Locator, 7/8"
40-036	Strike Locator, 1"
40-041	4" Bit Extension
40-050	Tool Box
40-057	5/16" Boring Bit
M507-347	Socket Wrench

Number	Description
CI02-840	Cam & Plug
C203-034	Spindle & Catch
C303-006	Slide & Rollers
C303-035	Spring Cage, In
C303-036	Spring Cage, Out
C303-418	Spindle & Catch
C503-008	Cutter Pin
C503-019	Slide Spring
C503-314	Spring Seat
C603-500	Housing
C603-569	Retainer, 1/C
C604-191	Slide Catch Spring
C604-330	Lever Insert
C604-333	Driver, 1/C
C604-354	Castle Nut

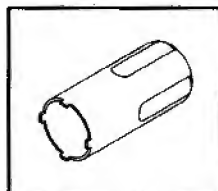


40-017

Castle Nut Wrench

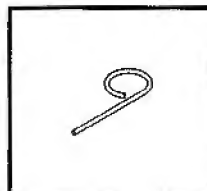

M504-271

Catch Push Pin

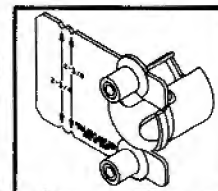


40-080

Drill Fixture
For thru bolts on AL and D-Series levers.


LONG BACKSETS

Backsets 5" and over require extension links. D-Series locks with long backsets are normally furnished with 1 1/8" faceplates and 1" housings. Links installed in hollow metal doors require one A501-567 sleeve (order separately) to join latch and link. Information on longer backsets is available upon request.

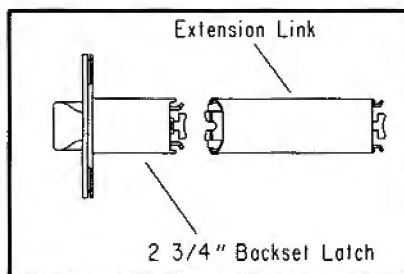

43-005

5" Extension Link

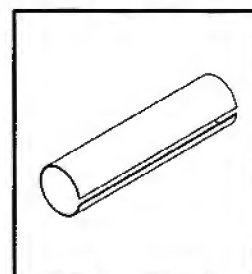


A501-567

Sleeve


REINFORCEMENT KIT

The Schlage 37-001 reinforcement kit is to reinforce and help prevent the collapse of hollow metal doors when locksets are tightly mounted. This kit should be used with long backsets for installations in hollow metal doors to prevent lateral movement of latch bolt. Specify door thickness 1 3/8" or 1 3/4" when ordering.

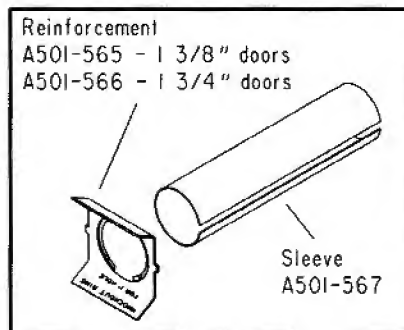

37-001

Reinforcement Kit

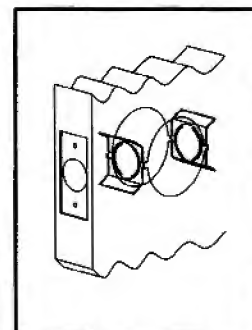



Placement of reinforcements in hollow metal door.

SCHLAGE.
June 1998

KEYING


Key Array Chart

The Schlage Masterkey Department determines and makes the final decision in the selection and use of key sections. Other keyways, than shown below, are available. Allocation of other keyways is based on need and extent of the final system. Priority is given to key systems that require a large number of cylinders and families of key sections to satisfy their keying requirements. Contact your Schlage representative for availability of other keyways.

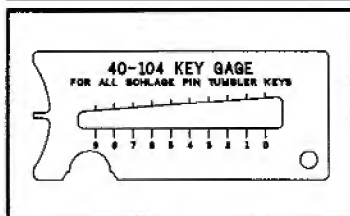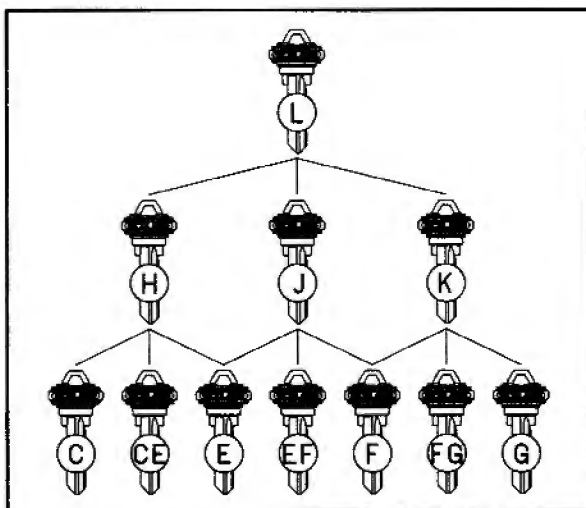

Key Gage
40-104

Order the Schlage key gage to accurately measure the depth of key cuts.

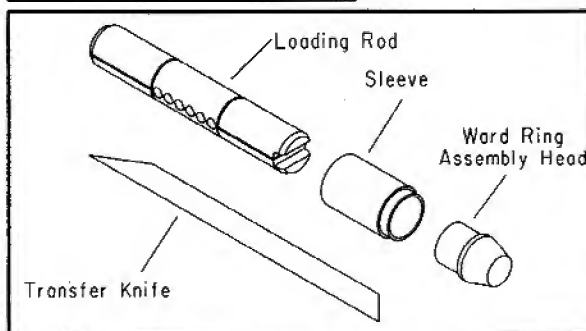


Cylinder Body Loading Tool

40-116


A compact precision tool for loading top pins and springs and for installation of ward rings into grooves of a warded cylinder plug. Furnished with complete assembly instructions.

Pin Tumbler Keys


All Schlage locks come with two nickel silver keys as standard, embossed with our company logo. The nickel silver alloy from which all Schlage keys are made provides the base for accuracy in cutting and long cylinder wear. Schlage will stamp "DO NOT DUPLICATE" across the bow of all versions of its keys at no extra charge, when specified on orders.

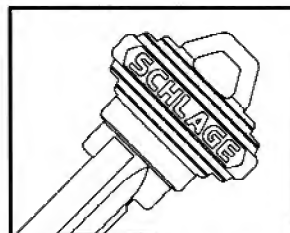


Embossed Both Sides
35-100 (5 Pin standard)
35-101 (6 Pin)

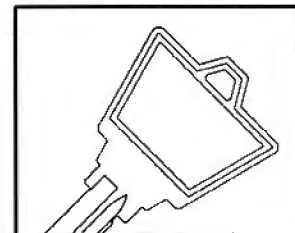


Large Bow
35-140 (5 Pin)
35-141 (6 Pin)

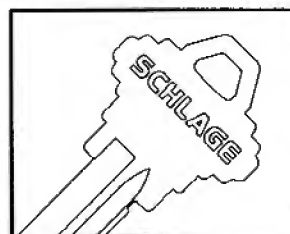


Stamped One Side
35-120 (5 Pin)
35-121 (6 Pin)

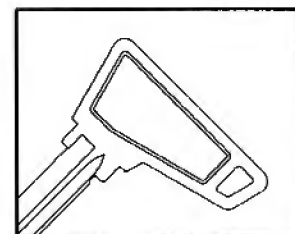


Access Bow
35-143 (5 Pin*)
35-144 (6 Pin)
*Available in C,E,F, and CE Only

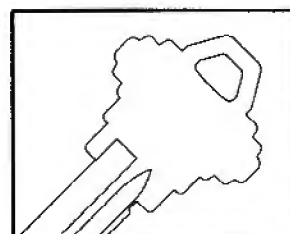


Plain
35-130 (5 Pin)
35-131 (6 Pin)

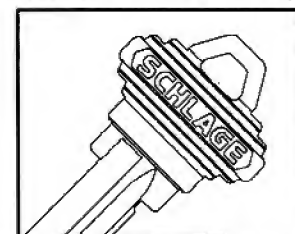

Hotel Emergency Key
35-102 (6 Pin)

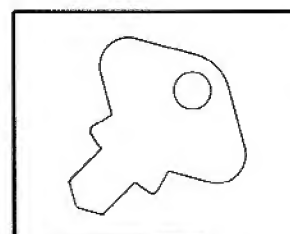

Emergency Key
D40S Function
35-250

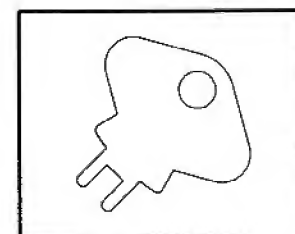

Spanner Key
D85PD Function
35-251

INSTALLATION INSTRUCTIONS


NOTE: Accurate door preparation is essential for proper functioning of this lock. Follow template and instructions carefully.

DOOR AND JAMB PREPARATION

Mark door

- Detach stub from template.
- Fold template at correct marking for door bevel (high or low bevel, or flat). Position centerline of template on heightline (suggested height is 38" (97mm) from floor). Mark center for 2 1/8" (54mm) hole. Also mark for (2) 5/16" (8mm) holes for mounting screws.
- Use stub to mark center of door thickness.

HINT: For retrofitting existing 2 1/8" (54mm) holes, fold template in half to locate position for the (2) 5/16" (8mm) holes.

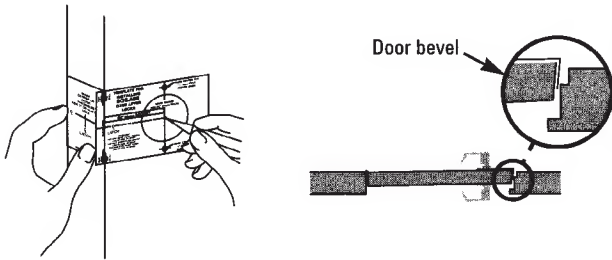


2

Bore (4) holes

- Bore a 2 1/8" (54mm) hole and (2) 5/16" (8mm) holes (bore holes from both sides of door to avoid splintering wood).
- Bore a 1" (25mm) hole into door edge. Use faceplate to pattern for cutout. (Front should fit flush with door edge.) Install latch and secure with screws.


NOTE: We recommend using a drill guide to ensure straight holes.

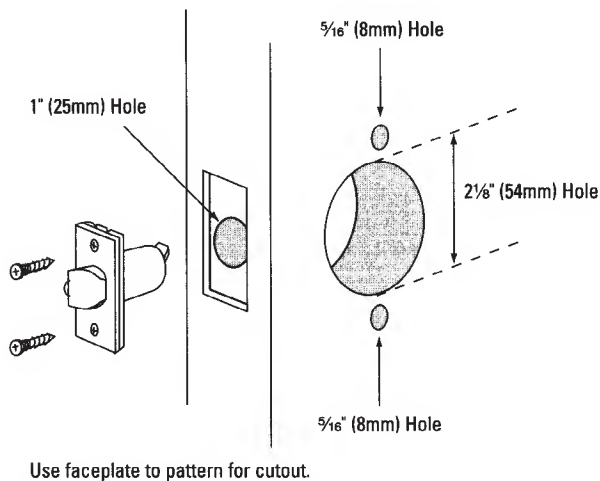

3

Install strike

- Mark vertical line and heightline on jamb exactly opposite center of latch hole.
- Drill (2) 1" (25mm) holes, 3/4" (19mm) deep, 5/16" (8mm) above and below heightline.
- Use strike plate to pattern for cutout. Clean out hole and install strike.

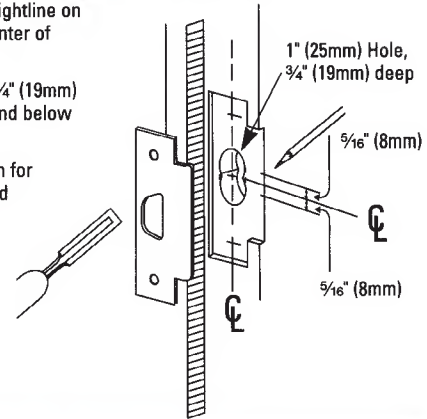


LOCK INSTALLATION

4

Disassemble inside trim

- Insert pointed end of spanner wrench into hole in inside lever. Push to depress catch and remove lever. Also remove driver.
- Unscrew and remove castlenut bushing. (Use metal tool or plastic tool provided.)
- Remove spring cage.

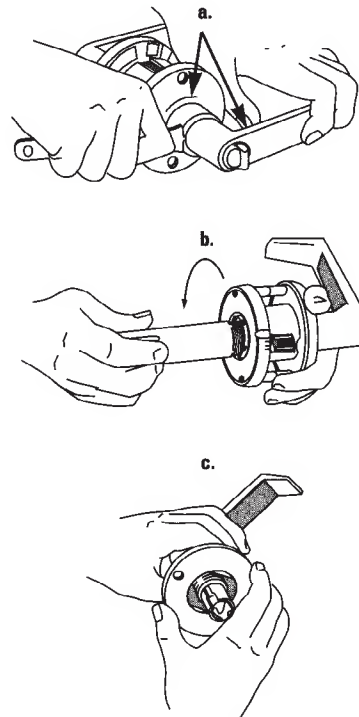


INSTALLATION INSTRUCTIONS

5 Install outside lock unit

IMPORTANT: This lock is factory preset for 1 3/4" (44mm) doors. See other side to center chassis in door or to change adjustment for other door thicknesses.


Place outside lock unit into position. Make sure that latch prongs engage chassis housing, and latch retractor engages latch bar.

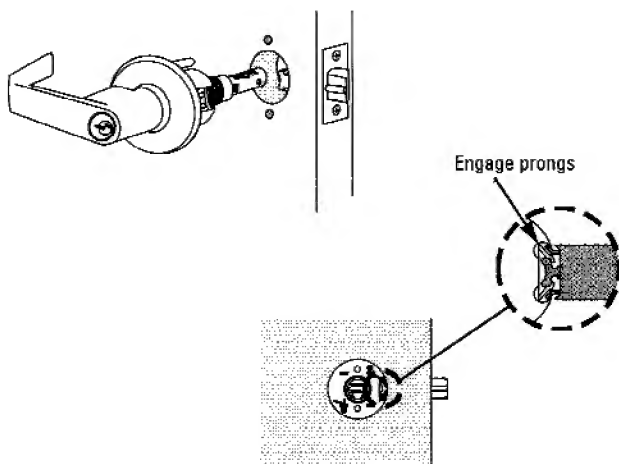

6 Install inside assembly


- Hold outside lever in place.
- Put spring cage into position on chassis.
- Place castlenut bushing on threads of chassis. Hold outside lever in position while threading castlenut bushing onto chassis as far as it will go. (A ratcheting sound will be heard.) Fully tighten castlenut bushing against chassis with installation tool.
- Insert and tighten mounting screws.
- Retighten castlenut with installation tool.

CAUTION: When using power screwdriver for installation, set to minimum torque setting

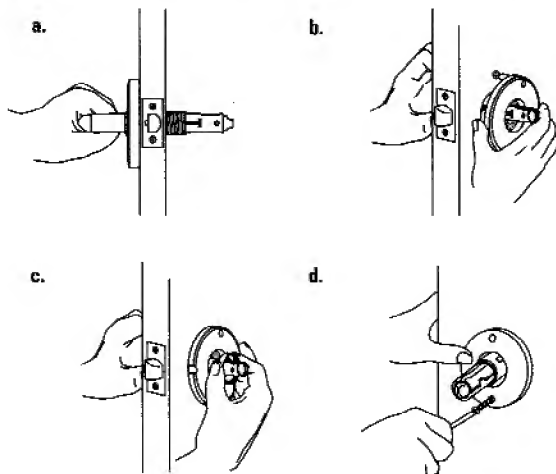


7 Install inside rose

Align dimples on rose with grooves in spring cage. Place rose against door and rotate clockwise until dimples snap into slots next to the grooves.

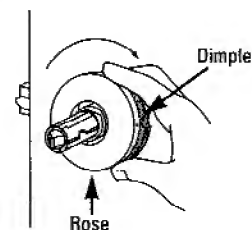

8 Install lever, insert, and driver

- Assemble plastic insert into lever. (CAUTION: Insert must be used for lock to function properly.) Engage slot in driver with plastic insert.
- Slide lever and insert onto spindle. Push lever completely into place. (Pull on lever to make sure that catch is fully engaged.)

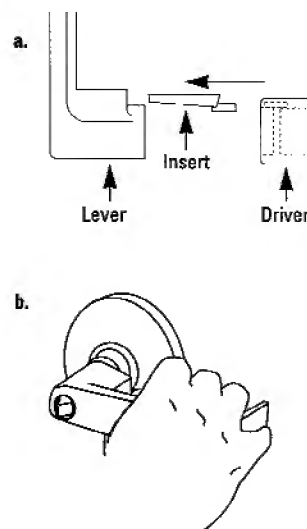

Test operation of lock with keys and levers to make sure that chassis adjustment and lock installation is correct.

INSTALLATION INSTRUCTIONS


HOW TO ADJUST FOR NON STANDARD DOOR THICKNESS

Remove inside trim (See Lock Installation, Step 4.)

1

Remove outside lever

- Non-keyed locks** (except D40S and D44S; See step B.) Place pointed end of spanner wrench into hole in lever. Push in to depress catch and remove lever and driver.
- Keyed Locks** and D40S and D44S functions (Use flat tip screwdriver instead of key for D40S; turn button on D44S.)

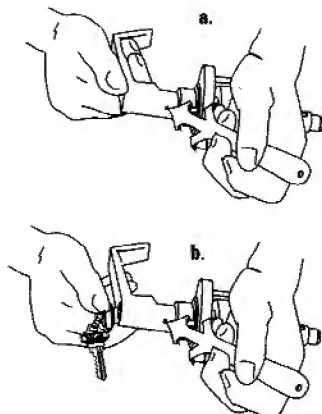


HINT: It is easier to remove a keyed lever if the lock is positioned in the door cutout.

Insert key into cylinder. Insert pointed end of spanner wrench (or similar tool) into hole in lever. Turn key one-quarter turn and push wrench to depress catch. Pull off lever.

2

Adjust for door thickness

- Place template against spring cage to find marking for door thickness.
- Use installation tool to rotate castlenut bushing in the direction of adjustment. Again, use template markings to measure adjustment *before* installing lock on door.

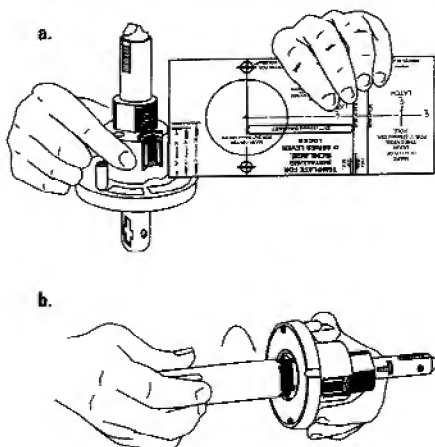

3

Reinstall lock

- Assemble outside lever to chassis by reversing instructions in "How to adjust...", Step 1.
- Install lock on door (see Steps 5 through 8). Test operation of lock to make sure trim is securely attached and lock functions properly.


INTERCHANGEABLE CORE

How to remove core


Insert control key and turn it clockwise 15 degrees until action stops. Pull on key to remove core.

How to replace core

Insert control key fully. Push core into lever as far as it will go. Turn key clockwise 15 degrees and push core completely into lever. Turn key back to normal position and remove from core.

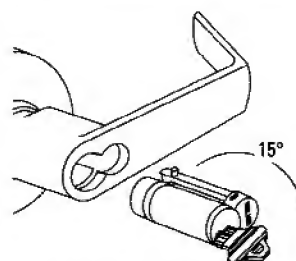

Rotate key. Pull to remove.

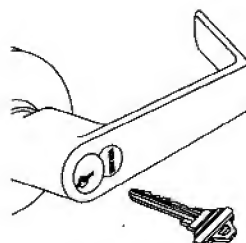

Insert key. Rotate key to fully install core.

REMOVING AND REPLACING CYLINDER LEVERS

Locks with "PD" Suffix

Function	Instructions
D50, D53, D60 (outside), D80, D82 (outside and inside), D85, D91, D92, D96	<p>To Remove Lever:</p> <ol style="list-style-type: none"> 1. Insert M504-271 catch push pin into hole on side of lever. 2. Insert and turn key slowly while forcing in catch push pin. Gently pull off lever. <p>To Replace Lever:</p> <ol style="list-style-type: none"> 1. With key partially inserted and in horizontal position, slide lever onto spindle until it stops against lever catch. 2. Insert key fully and turn it (but not lever) slowly while pushing in on lever until lever is attached. Test by pulling on lever.
D60 (inside), D66 (outside and inside), D70, D73, D94	<p>To Remove Lever:</p> <ol style="list-style-type: none"> 1. Insert key in cylinder and turn to left as far as it will go. 2. Insert M504-271 catch push pin into hole on side of lever. 3. Turn key slowly to right while forcing in catch push pin. Gently pull off lever. <p>To Replace Lever:</p> <ol style="list-style-type: none"> 1. Use 1/4" wide flat tip screwdriver to engage slot in cam plug, located in spindle, and turn to left until cam plug stops turning. 2. With key partially inserted and in horizontal position, slide lever onto spindle until it stops against lever catch. 3. Insert key fully and turn it (but not lever) slowly to right while pushing in on lever until lever is attached. Test by pulling on lever. <p><i>If the key cannot be removed after one complete rotation to the right, repeat above instructions to remove and replace lever, paying close attention to Replacement Step 1.</i></p>

Locks with "BD", "JD", "RD", and "TD" Suffixes

Function	Instructions
D50, D53, D80, D91, D92, D96	<p>To Remove Lever With Core Installed:</p> <ol style="list-style-type: none"> 1. Insert M504-271 catch push pin into hole on side of lever. 2. Insert and turn key slowly while forcing in catch push pin. Gently pull off lever. <p>To Remove Lever Less Core:</p> <ol style="list-style-type: none"> 1. Insert M504-271 catch push pin into hole on side of lever. 2. Turn driver, located in spindle, with M504-142 installation tool or needle nose pliers (for "JD" suffix); or 3/8" wide flat tip screwdriver (for "BD" suffix) while forcing in catch push pin. Gently pull off lever. <p>To Replace Lever:</p> <ol style="list-style-type: none"> 1. With core removed, slide lever onto spindle until it stops against lever catch. 2. Turn driver slowly while pushing in on lever until lever is attached. Test by pulling on lever.
D70, D73, D94	<p>To Remove Lever With Core Installed:</p> <ol style="list-style-type: none"> 1. Insert key in cylinder and turn to left as far as it will go. 2. Insert M504-271 catch push pin into hole on side of lever. 3. Turn key slowly while forcing in catch push pin. Gently pull off lever. <p>To Remove Lever Less Core:</p> <ol style="list-style-type: none"> 1. Turn driver, located in spindle, to left as far as it will go with M504-142 installation tool or needle nose pliers (for "JD" suffix); or 3/8" wide flat tip screwdriver (for "BD" suffix). 2. Insert M504-271 catch push pin into hole on side of lever. 3. Turn driver slowly to right while forcing in catch push pin. Gently pull off lever. <p>To Replace Lever:</p> <ol style="list-style-type: none"> 1. Turn driver to left until it stops turning. 2. With core removed, slide lever onto spindle until it stops against lever catch. 3. Turn driver slowly to right while pushing on lever until lever is attached. Test by pulling on lever. <p><i>If the key cannot be removed after one complete rotation to the right, repeat above instructions to remove and replace lever, paying close attention to Replacement Step 1.</i></p>

ELECTRIFIED LOCK INSTRUCTIONS

D-Series Electrified Locks



D12DEL
D80PDEL



D12DEU
D80PDEU

Electrically Locked (Fail Safe): Auxiliary latch deadlocks latchbolt when door is closed. Outside knob or lever continuously locked electrically until unlocked by key, switch, or power failure. Inside knob or lever always free for immediate exit.

Electrically Unlocked (Fail Secure): Auxiliary latch deadlocks latchbolt when door is closed. Outside knob or lever continuously locked until unlocked by key or electrical current. Inside knob or lever always free for immediate exit.

D-Series Typical Installation

- Provision must be made to route low voltage wires to the lock. Attach wires to 6" pigtail of rectifier (for AC operation) or solenoid (for DC operation).
- Power transfer unit and low voltage wiring are not furnished.
- All power requirements shown are for single lock operation. For multi-lock installations, powered by a single supply, current values must be increased accordingly.
- Select proper wire size to minimize voltage drop. Voltage requirements indicated must be maintained at lock for dependable operation.

Electrical Requirements for EL or EU

Amps .15; Volts 24 AC.

Amps .35; Volts 24 DC.

Operating Temperature: Maximum +151°F, Minimum -31°F




Replacement Kit

38-064 – Solenoid and Rectifier, EL (AC and DC)

38-065 – Solenoid and Rectifier, EU (AC and DC)

NOTE: Spacer furnished with replacement kits to be placed between solenoid and knob catch on knob designs only.

Typical Wiring Diagram for Electrified D-Series Locks

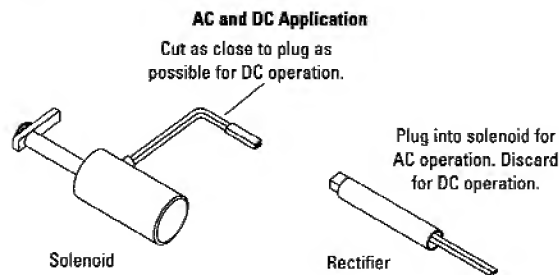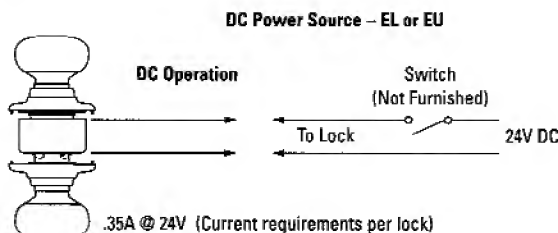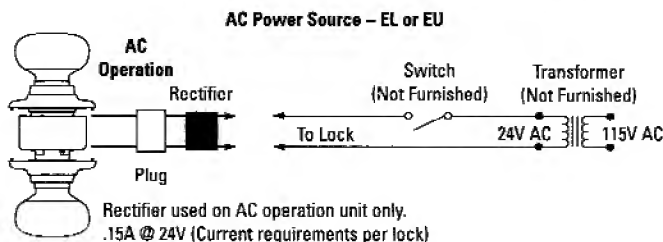

All installations should be in accordance with local electrical codes and National Electrical Code, NFPA 70-1996.

INTERCHANGEABLE CORE RETROFIT KIT INSTRUCTIONS


A-Series Kit:

Knob

Driver

Retainer

Interchangeable
Core

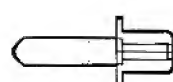

1 3/8" Driver



Retainer

 
D-Series Kit:

Knob or Lever

Driver

Retainer


Interchangeable
Core



3 1/2" Driver



Retainer

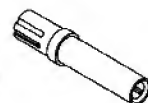


Installation Tool
(Order Separately)

1

Remove Knob or Lever and Cylinder

To remove existing knob or lever from lock assembly, insert pointed end of spanner wrench* or small nail into hole in hub cap (A-Series), knob sleeve (D-Series knobs) or lever (D-Series levers). Exert pressure on wrench while turning key slowly until knob catch depresses and pull off knob or lever.

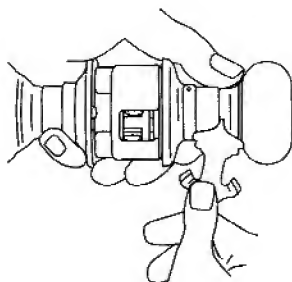


Spanner wrench normally furnished with locks using threaded roses.

3

Install Interchangeable Core Knob or Lever


Slide knob or lever onto spindle up to knob catch. Insert smooth end of tool through core opening in knob or lever and turn tool until it engages the driver. Insert pointed end of spanner wrench or similar tool into hole in hub cap (A-Series) or on knob catch (D-Series knobs). Turn installation tool clockwise, exert pressure on spanner wrench until knob catch depresses (not required for D-Series levers) and push knob or lever into place. Pull on knob or lever to be sure catch is engaged.

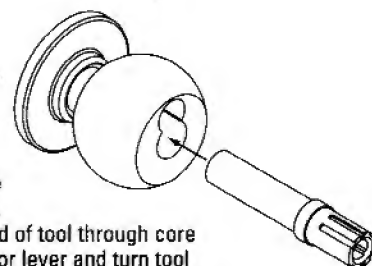

2

Install Interchangeable Core Driver and Retainer

Note: Illustration is for A-Series locks. Use smooth end of installation tool for D-Series locks.

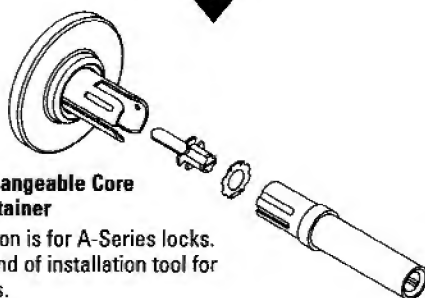


Place retainer and driver on end of installation tool as shown. The bent tabs of the A-Series retainer must be angled away from the driver and must line up with the top and bottom slots in the spindle. Install the driver so the timing line is horizontal, or parallel with the latch. Insert installation tool into spindle and push in until it stops. Remove installation tool.

4


Install Interchangeable Core

With control key fully inserted, push core into knob or lever housing, rotate key 15° clockwise and insert core completely. Remove control key.

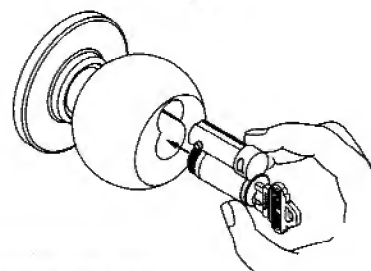

DOOR HANDING

All Schlage locks are reversible. Hand information is necessary to ensure proper finish of latchbolt and strike for locks ordered that are to be installed on reverse bevel doors. Follow the diagram to correctly determine the hand of the door.

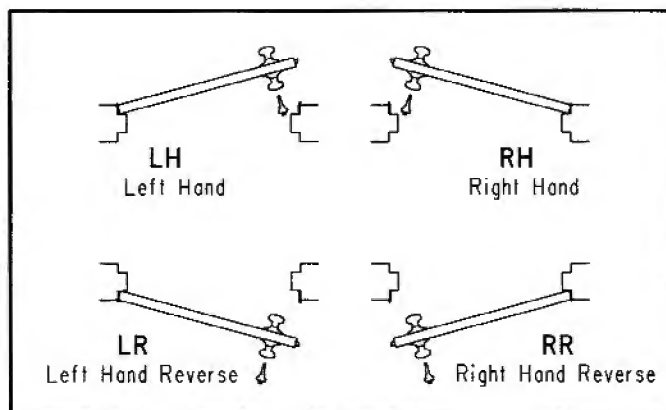

ORDERING PROCEDURES

To order Schlage products, descriptive data should be in the same sequence as shown.

Line Item	Qty	Product	Outside		Inside		Hand	Latch	Strike	Dr Thk	Ext	Dim	Additional Details
			Des	Fin	Des	Fin							
1	2	3	4	5	6	7	8	9	10	11	12	13	14

- Line item number.
- Quantity.
- Complete lock product or part number.
- Outside design code.
- Outside finish code.
- Inside design code. Leave blank if same as outside design code.
- Inside finish code. Leave blank if same as outside finish code.
- Hand of door. Only one hand allowed per line item. Example: RH=Right Hand, LH=Left Hand, RR=Right Reverse, LR=Left Reverse.
- Latch. Leave blank for standard or specify part number if non-standard latch is required. LLL=Less latch.
- Strike. Leave blank for standard or specify part number if non-standard strike is required. LLL=Less Strike.
- Door Thickness. Enter door thickness if non-standard. Example: 138= 1 3/8", 214= 2 1/4", 212= 2 1/2".
- Extension. Enter one of the following when doors 2" thick or greater are specified:
EE = Extended Equally,
EI = Extended Inside,
EO = Extended Outside,
ED = Extended Differently.
EI or EO assumes the latch will be centered on a 1 3/4" thick door, to which material has been added.
- Enter dimension for non-standard strike lip length and mortise cylinder or blocking ring length.
Example:
012 = 1/8" 118 = 1 1/8"
018 = 3/16" 114 = 1 1/4"
025 = 1/4" 138 = 1 3/8"
031 = 5/16" 112 = 1 1/2"
037 = 3/8" 158 = 1 5/8"
050 = 1/2" 134 = 1 3/4"
078 = 7/8" 200 = 2"
100 = 1" 400 = 4"
- Enter detail for keying information and for special requirements.

ORDERING EXAMPLES

Line Item	Qty	Product	Outside		Inside		Hand	Latch	Strike	Dr Thk	Ext	Dim	Additional Details
			Des	Fin	Des	Fin							
1	50	D53PD	RH0	626				14-047	10-013				KEYED C000000
2	5	D96RD	8R0	612	RH0							138	KEYED E111111, KNURLED O/S LEVER
3	10	D40S	SPA	605		625	LR						W/43-005 EXT. LINK
4	12	D53LD	ATH	625						138			LESS CYLINDER
5	12	20-750		626									

NOTE: Schlage order forms are available at no charge by contacting your Schlage Representative or Customer Service.

LIMITED WARRANTY

Schlage Lock Company (the "Company") warrants to the original purchaser that the products manufactured by it (the "Product") to be free of defects in material and workmanship. Provided: (i) The Company has been notified within one year of purchase date and been given the opportunity of inspection by return of any alleged defective Product to the Company, or its authorized distributor, at the address specified herein, free and clear of all liens and encumbrances, transportation prepaid, accompanied by the statement of defects and proof of purchase; and (ii) The Product has not been modified, abused, misused, or improperly installed, maintained and/or repaired during such period; and (iii) Such defect has not been caused by corrosion or ordinary wear and tear.

VANDLGARD WARRANTY

Same as limited warranty, except the D-Series Vandlgard functions are warranted to be free from defects in material and workmanship for a period of five (5) years from the date of purchase.

THE COMPANY MAKES NO OTHER WARRANTY, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THE EXPRESSED WARRANTY PERIOD AS SET FORTH ABOVE.

THE COMPANY'S MAXIMUM LIABILITY HEREUNDER IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL, INDIRECT, INCIDENTAL OR SPECIAL DAMAGES OF ANY NATURE ARISING FROM THE SALE OR USE OF THIS PRODUCT, WHETHER IN CONTRACT, TORT, STRICT LIABILITY OR OTHERWISE.

NOTE:

Should the Product be considered a consumer product as may be covered by the Magnusson Moss Federal Warranty Act, please be advised that: (1) Some states do not allow limitations on incidental consequential damages or how long an implied warranty lasts so that the above limitations may not fully apply; (2) This warranty gives specific legal rights and a buyer may also have other rights which may vary from state to state. For warranty service and shipping instructions, contact the Schlage Lock Company:

Customer Service Department
2401 Bayshore Boulevard
San Francisco, California 94134
(800) 847-1864

The Schlage Lock Company reserves the right to make changes in designs and specifications or to make additions or improvements on its products without notice and without incurring any obligation to incorporate them on products previously manufactured. The Schlage Lock Company is not responsible for any modification addition or alteration to our products by others.

NOTES



Administrative Offices

1915 Jamboree Drive
Colorado Springs, CO 80920
(719) 264-5300
FAX (719) 264-5382

Commercial Customer Service

2000 Sierra Point Parkway
Brisbane, CA 94005-1850
(800) 847-1864
FAX (800) 452-0663
FAX (800) 616-6040
Order Entry
(800) 452-0665

Technical Services

3899 Hancock Expressway
Security, CO 80911
(800) 847-1864
FAX (719) 390-2682

International Division

Ingersoll-Rand Architectural Hardware
1076 Lakeshore Road East
Mississauga, Ontario, L5E 1E4, Canada
(905) 278-6128
FAX (905) 278-1413

Internet

<http://www.schlage.com>

